

**To:** All Distributors  
Regional Sales Managers and National Sales Manager


**From:** Labrie Technical Development

**Model:** All

**Subject:** Pneumatic System Maintenance

To avoid affecting functionality of the Labrie and/or chassis pneumatic system, (especially under cold weather conditions), you must maintain the air system regularly as part of your maintenance schedules and practices. This includes draining the air tanks, water trap and water trap air filter at the end of every workday.

The air filter element, part number PNF31020 must be replaced every 1000 hours.

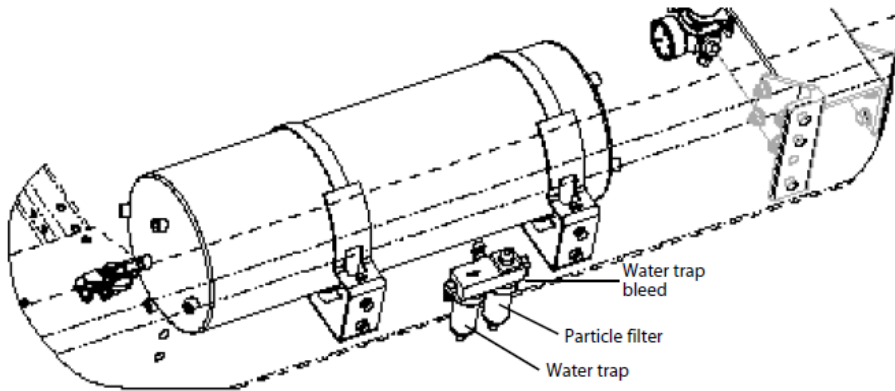

Bleed all the water from the water trap and the air filter bowl located on the chassis to help keep residual moisture out of the body air system.

