


To: All Distributors
Regional Sales Managers and National Sales Manager

From: LabriePlus Service

Model: Wittke

Subject: Digiload Display ELO40001

With the Digiload scales option, please note that the display units ELO40001-01 and ELO40001 have a memory calculated to log around one year of load data at normal operation, without the need to flush the memory. However, when the module memory is full, it may begin to malfunction. To prevent this, it is recommended to flush the memory at regular intervals, preferably monthly.

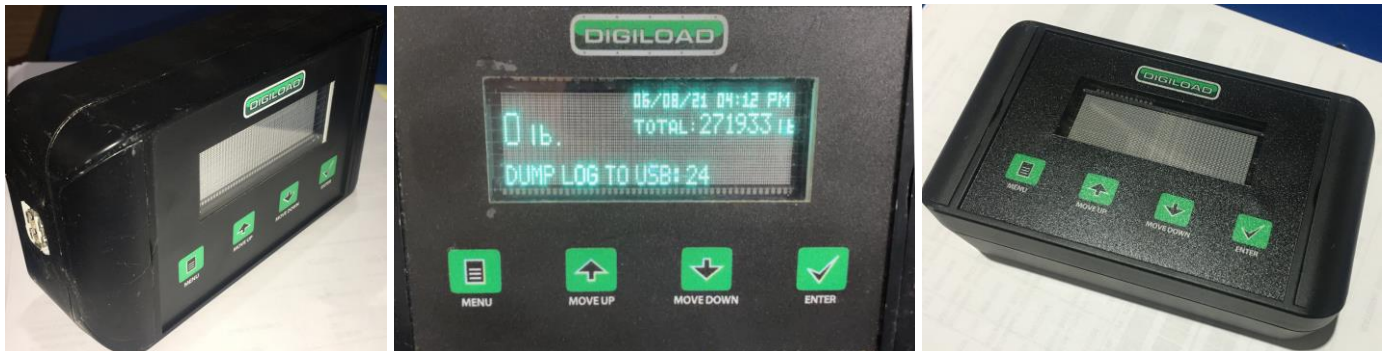

To flush the memory, just connect a standard USB key with 16Mb memory or more, and the transfer is automatic. (Transfer data to USB Key + Flush module memory).

Also note that during the data transfer, the module programming could crash if the following occurs:

- The truck is turned off (Module loss of power) during transfer.
- There is a wiring problem between the load sensors and the display.

If the module programming should crash during data transfer, the procedure is to cycle power to the display with the USB Key connected. When the module restarts, the data will be automatically transferred.

Please contact the LabriePlus Service Department at (800) 231-2771 with any questions or for further information.