
To: All Distributors
Regional Sales Managers and National Sales Manager

From: LabriePlus Service


Model: ALL

Subject: Electronic VG body valve bleed procedure

In situations where there is a lag between coil activation and hydraulic function, bleeding the air from the circuits must be performed.

Step 1. Make sure the hydraulic reservoir is pressurized.

Step 2. Turn off the engine and crack open the plugs on top of the actuators as shown below:

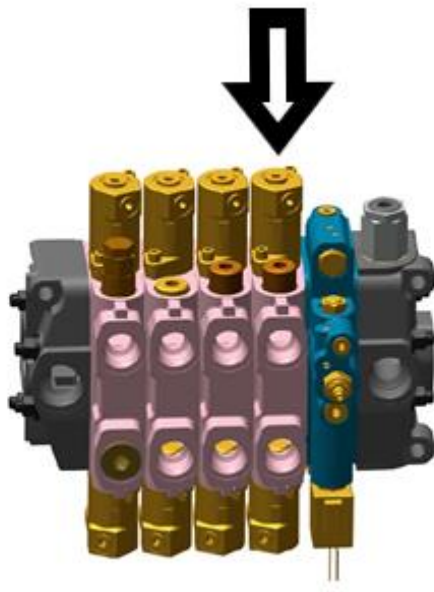

Step 3. Once all air is evacuated, retighten the plugs.

Step 4. Function test unit to ensure lag time has been eliminated.

Please contact the LabriePlus Service Department at **(800) 231-2771 (US)** or **(877) 452-2743 (CAN)** for questions or further information