

WITTKE

Xpress **xpress**


At Labrie, we proudly offer the WITTKE™ XPRESS, a durable side-loader refuse truck designed for urban and suburban waste collection. With curbside or streetside body styles available in high-profile or low-profile configurations, the XPRESS adapts to various operational needs. The high-profile design maximizes capacity, while the low-profile option excels in narrow spaces. Featuring a hydraulically operated mast, abrasion-resistant steel, and reinforced components, it delivers reliable performance and efficient waste compaction. Safety features like ANSI-compliant mast logic, optional cameras, and tailgate safety props ensure operator and pedestrian protection. The WITTKE™ XPRESS combines advanced technology, robust construction, and efficiency for dependable waste management.



ARM SERVICE PARTS

High Profile Curbside Arm Service Parts-Mast


Ref #	Part #	Description	Quantity
1	221444	Cross Shaft (Upper)	1
	QUG00200	Grease Fitting	2
2	221446	Cross Shaft (Lower)	1
	QUB13980	Capscrew	1
	QUE02045	Nut	1
3	189885	Wear Pad	2
	186809	Limit Stop Bracket	2
	QUB24995	Socket Head Capscrew	4
	QUR01912	Washer	4
	QUE01500	Nut	4
4	222709	Mast Guide	1
	QUB12085	Bolt	8
	QUR01912	Washer	8
	QUE01500	Nut	8
5	184280	Deflector Rod	1
6	223044	Wear Pad (Upper)	2
	QUV02720	Machine Screw	6
7	0604-151	Ear Structure	1
	QUR02101	Washer	1
	QUR01415	Lock Washer	1
	QUE02467	Nut	1
	0602-795	Drilled Capscrew	1
	QUE03975	Nut	1
	QUP03605	Cotter Pin	1
8	199919	Wear Pad (Side)	2
	199920	Shim	As Req'd.
	QUB05605	Machine Screw	8
9	221762	Wear Pad (Upper)	2
	QUB05800	Machine Screw	8
10	221761	Wear Pad (Lower)	2
	QUB05800	Machine Screw	8
11	221454	Pin	2
	QUG00200	Grease Fitting	2
	QUB04005	Capscrew	2
	QUE02377	Nut	2

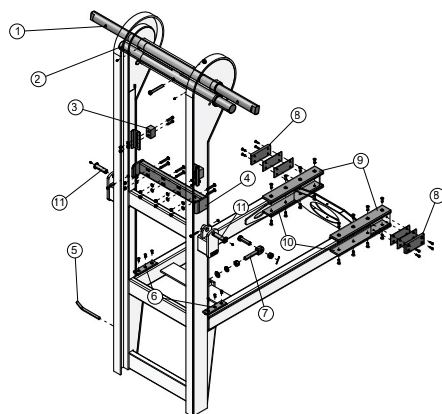

High Profile Curbside Mast Service Parts

High Profile Curbside Arm Service Parts-Left Pivot


Ref #	Part #	Description	Quantity
1	199918	Pivot	1
	QUB13980	Capscrew	1
	QUE02045	Nut	1
	221456	Bushing	1
2	0604-325	Spacer Block	1
	QUB24990	Socket Head Capscrew	4
	QUR01912	Washer	4
	QUE08000	Nut	4
3	199914	Lower Link Structure W/ Target	1
	221454	Pin	1
	QUG00200	Grease Fitting	1
	QUB04005	Capscrew	1
	QUE02377	Nut	1
	0603-865	Collar Bushing	1
	QUB04090	Capscrew	1
	QUE02377	Nut	1
	221445	Bushing (Large)	1
	221456	Bushing (Small)	2
4	221442	Upper Link Structure	1
	221454	Pin	2
	QUG00200	Grease Fitting	2
	QUB04005	Capscrew	2
	QUE02377	Nut	2

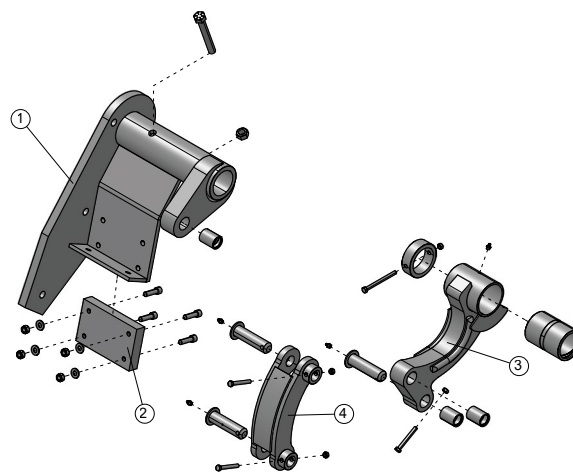

High Profile Curbside Left Hand Pivot Service Parts

High Profile Curbside Arm Service Parts-Right Pivot

Ref #	Part #	Description	Quantity
1	199917	Pivot	1
	QUB13980	Capscrew	1
	QUE02045	Nut	1
	221456	Bushing	1
2	0604-325	Spacer Block	1
	QUB24990	Socket Head Capscrew	4
	QUR01912	Washer	4
	QUE08000	Nut	4
3	199914	Lower Link Structure W/ Target	1
	221454	Pin	1
	QUG00200	Grease Fitting	1
	QUB04005	Capscrew	1
	QUE02377	Nut	1
	0603-865	Collar Bushing	1
	QUB04090	Capscrew	1
	QUE02377	Nut	1
	221445	Bushing (Large)	1
	221456	Bushing (Small)	2
4	221442	Upper Link Structure	1
	221454	Pin	2
	QUG00200	Grease Fitting	2
	QUB04005	Capscrew	2
	QUE02377	Nut	2

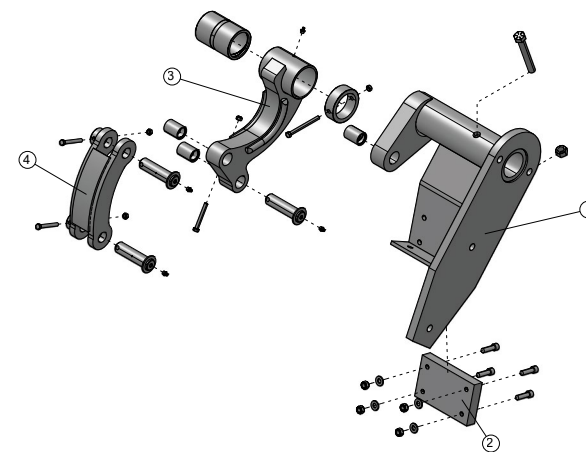


High Profile Curbside Right Hand Pivot Service Parts

ARM SERVICE PARTS

Low Profile Streetside Arm Service Parts-Mast


Ref #	Part #	Description	Quantity
1	221444	Cross Shaft (Upper)	1
	QUG00200	Grease Fitting	2
2	221446	Cross Shaft (Lower)	1
	QUB13980	Capscrew	1
	QUE02045	Nut	1
3	189885	Wear Pad	2
	186809	Limit Stop Bracket	2
	QUB24995	Socket Head Capscrew	4
	QUR01912	Washer	4
	QUE01500	Nut	4
4	222709	Mast Guide	1
	QUB12085	Bolt	8
	QUR01912	Washer	8
	QUE01500	Nut	8
5	184280	Deflector Rod	1
6	223044	Wear Pad (Upper)	2
	QUV02720	Machine Screw	6
7	0604-151	Ear Structure	1
	QUR02101	Washer	1
	QUR01415	Lock Washer	1
	QUE02467	Nut	1
	0602-795	Drilled Capscrew	1
	QUE03975	Nut	1
	QUP03605	Cotter Pin	1
8	199919	Wear Pad (Side)	2
	199920	Shim	As Req'd.
	QUB05605	Machine Screw	8
9	221762	Wear Pad (Upper)	2
	QUB05800	Machine Screw	8
10	221761	Wear Pad (Lower)	2
	QUB05800	Machine Screw	8
11	221454	Pin	2
	QUG00200	Grease Fitting	2
	QUB04005	Capscrew	2
	QUE02377	Nut	2

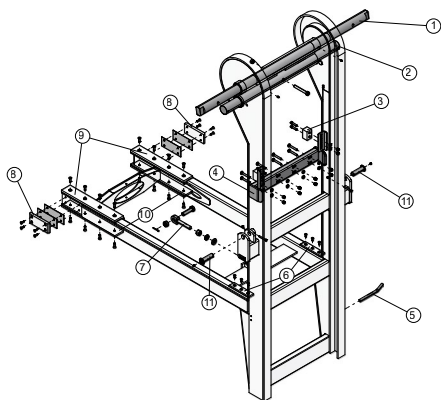

Low Profile Streetside Mast Service Parts

Low Profile Streetside Arm Service Parts-Left Pivot


Ref #	Part #	Description	Quantity
1	199918	Pivot	1
	QUB13980	Capscrew	1
	QUE02045	Nut	1
	221456	Bushing	1
2	0604-325	Spacer Block	1
	QUB24990	Socket Head Capscrew	4
	QUR01912	Washer	4
	QUE08000	Nut	4
3	199915	Lower Link Structure	1
	221454	Pin	1
	QUG00200	Grease Fitting	1
	QUB04005	Capscrew	1
	QUE02377	Nut	1
	0603-865	Collar Bushing	1
	QUB04090	Capscrew	1
	QUE02377	Nut	1
	221445	Bushing (Large)	1
	221456	Bushing (Small)	2
4	221442	Upper Link Structure	1
	221454	Pin	2
	QUG00200	Grease Fitting	2
	QUB04005	Capscrew	2
	QUE02377	Nut	2
5	0604-327	Pad Pak-Mor	1
	QUB24990	Socket Head Capscrew	2
	QUR01912	Washer	4
	QUE08000	Nut	2

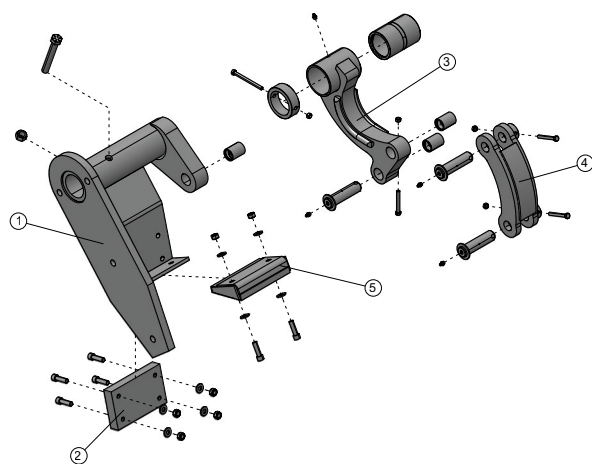

Low Profile Streetside Left Hand Pivot Service Parts

Low Profile Streetside Arm Service Parts-Right Pivot

Ref #	Part #	Description	Quantity
1	199917	Pivot	1
	QUB13980	Capscrew	1
	QUE02045	Nut	1
	221456	Bushing	1
2	0604-325	Spacer Block	1
	QUB24990	Socket Head Capscrew	4
	QUR01912	Washer	4
	QUE08000	Nut	4
3	214719	Lower Link Structure W/ Target	1
	221454	Pin	1
	QUG00200	Grease Fitting	1
	QUB04005	Capscrew	1
	QUE02377	Nut	1
	0603-865	Collar Bushing	1
	QUB04090	Capscrew	1
	QUE02377	Nut	1
	221445	Bushing (Large)	1
	221456	Bushing (Small)	2
4	221442	Upper Link Structure	1
	QUB04005	Capscrew	2
	QUE02377	Nut	2
	221454	Pin	2
	QUG00200	Grease Fitting	2
5	0604-327	Pad Pak-Mor	1
	QUB24990	Socket Head Capscrew	2
	QUR01912	Washer	4
	QUE08000	Nut	2

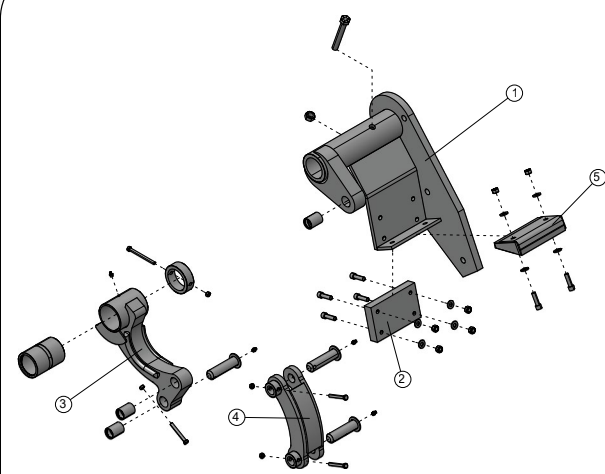

Low Profile Streetside Right Hand Pivot Service Parts


ARM SERVICE PARTS

Lift Structure

Ref #	Part #	Description	Quantity
1	222303	Lift Structure	1
	0603-618	Bushing	4
2	222304	Lift Bar Pocket Left Hand Side	1
	QUG00200	Grease Fitting	2
	QUB08726	Capscrew	1
	QUR02005	Washer	6
	0607-850	Modified Spring	1
3	222308	Lift Bar Pocket Right Hand Side	1
	QUG00200	Grease Fitting	2
	QUB08726	Capscrew	1
	QUR02005	Washer	6
	0607-850	Modified Spring	1
4	221572	Machined Pin	2
	QUB04005	Capscrew	2
	QUE02377	Nut	2
5	222724	Modified Cam Follower	4
	QUG00550	Grease Fitting	8
	QUE01970	Nut	4
	190431	Retainer	4
	QUB03401	Capscrew	4
	QUR01272	Lock Washer	4
	QUR01902	Washer	4

Outer Slide Rollers and In/Out Pin

Ref #	Part #	Description	Quantity
1	221470	Roller, Includes HYV30183	2
	HYV30183	Bearing	4
2	221552	Machined Pin	2
	QUG00200	Grease Fitting	2
	QUB04005	Capscrew	2
	QUE02377	Nut	2
3	221472	Thrust Bearing	4
4	0602-795	Drilled Capscrew (In/Out Cylinder)	1
	QUE03975	Nut (In/Out Cylinder)	1
	QUP03605	Cotter Pin (In/Out Cylinder)	1

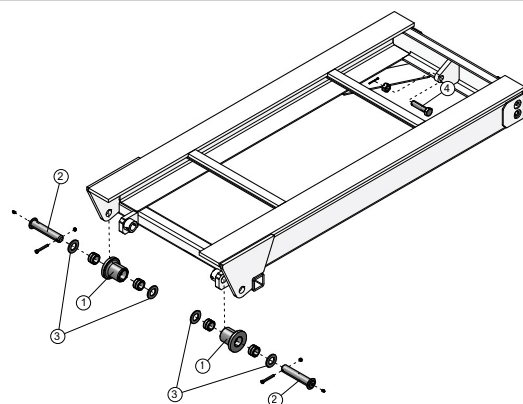


Outer Slide Rollers and In_Out Pin

Linkage High Profile


Ref #	Part #	Description	Quantity
1	0603-681	Arm Strut Upper High Profile	2
2	221563	Timing Block	2
	QUB13935	Capscrew	8
	QUR02880	Washer	8
	QUE02045	Nut	8
	221567	Pin	2
	QUG00200	Grease Fitting	2
	QUR02714	Washer	4
	221569	Bushing	2
3	221564	Arm Strut Lower High Profile	2
	QUB04005	Capscrew	2
	QUE01302	Nut	2
	QUG00200	Grease Fitting	2
	0041-290	Washer	4
	QUE03980	Nut	2
	QUP03700	Cotter Pin	2

Linkage Low Profile


Ref #	Part #	Description	Quantity
1	214715	Arm Strut Upper Low Profile	2
2	221563	Timing Block	2
	QUB08736	Capscrew	8
	QUE02422	Nut	8
	221567	Pin	2
	QUG00200	Grease Fitting	2
	QUR02714	Washer	4
	221569	Bushing	2
3	214716	Arm Strut Lower Low Profile	2
	QUB04005	Capscrew	2
	QUE01302	Nut	2
	QUG00200	Grease Fitting	2
	0041-290	Washer	4
	QUE03980	Nut	2
	QUP03700	Cotter Pin	2

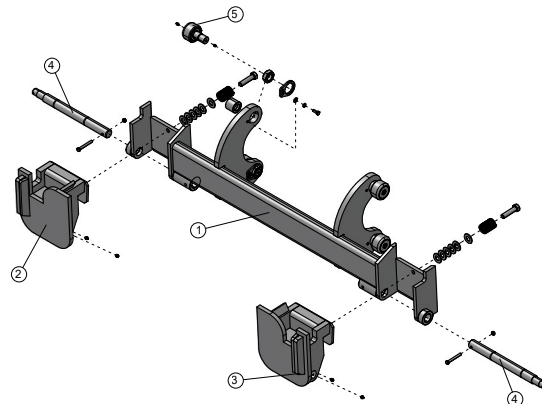

Lift Structure

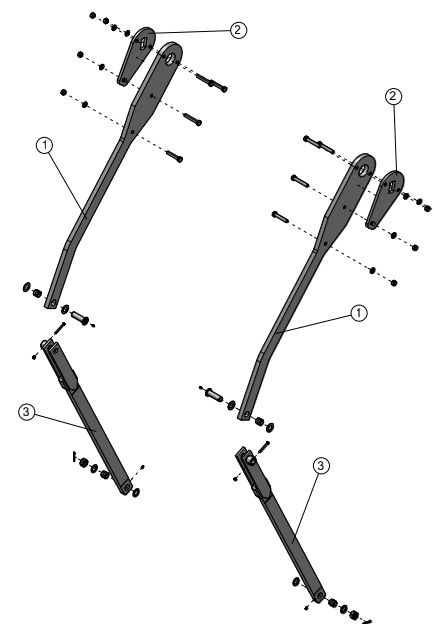

Linkage High Profile

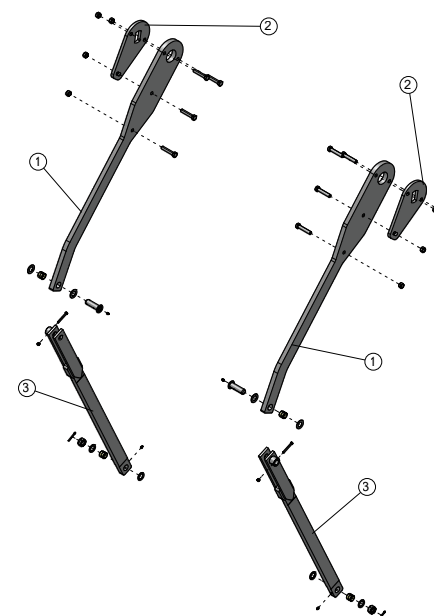

Linkage Low Profile

HYDRAULIC SERVICE PARTS

Hydraulic Pump

Ref #	Part #	Description	Quantity
	HYP01482	Pump	
	HYP01470	Seal Kit (Includes Pump Shaft Seal)	
	HYJ05110	Shaft Seal	
	HYP01467	Cartridge	

Dump Valve

Ref #	Part #	Description	Quantity
	HYV08115	Dump Valve	
	HYP01584	Dump Valve	

Return Filter


Ref #	Part #	Description	Quantity
	HYF20036	Return Filter Assy.	
	HYF20043	Housing Cover	
	HYF20017	O-Ring (Under Cover)	
	HYJ01051	Gauge, 0-100 PSI	
	HYJ01610	O-Ring (Square - Housing to Canister)	
	HYF20025	Gasket (Flat - Canister to Tank Flange)	
	HYF20018	Bypass Valve (Bottom of Filter)	
	HYF20029	Element, 5µ	
	HYF20034	Element, 3µ	
	HYF20030-02	Element, 10µ	

Pressure Filter

Ref #	Part #	Description	Quantity
	HYF20315	Pressure Filter	
	HYI01215	Sensor	
	HYF20033	Element	
	HYJ20315	Seal Kit	

Clamps and Accessories


Ref #	Part #	Description	Quantity
	HYS00150	TUBE or HOSE O.D. = .38"	
	HYS00200	TUBE or HOSE O.D. = .50"	
	HYS00250	TUBE or HOSE O.D. = .62"	
	HYS00300	TUBE or HOSE O.D. = .75"	
	HYS00305	TUBE or HOSE O.D. = 1.05"	
	HYS00400	TUBE or HOSE O.D. = 1.00"	
	HYS00425	TUBE or HOSE O.D. = 1.12"	
	HYS00450	TUBE or HOSE O.D. = 1.25"	
	HYS00453	TUBE or HOSE O.D. = 1.38"	
	HYS00455	TUBE or HOSE O.D. = 1.50"	
	HYS00460	TUBE or HOSE O.D. = .84"	
	HYS00490	TUBE or HOSE O.D. = 1.62"	
	HYS00500	TUBE or HOSE O.D. = 1.75"	
	HYS00550	TUBE or HOSE O.D. = 2.00"	
	HYS00560	TUBE or HOSE O.D. = 2.50"	
	HYS00565	TUBE or HOSE O.D. = 3.12"	
	HYS00566	TUBE or HOSE O.D. = 3.62"	
	HYS00570	CLAMP, Rail - 10 Foot	
	HYS00675	CLAMP BASE	

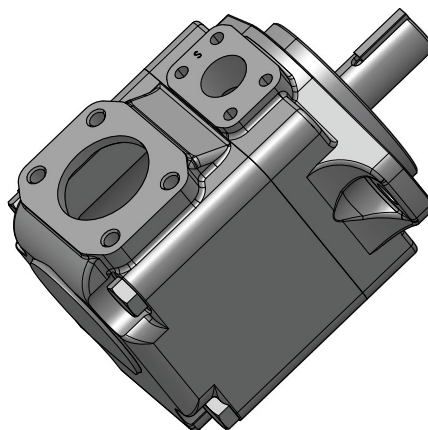


HYP01482



Return Filter

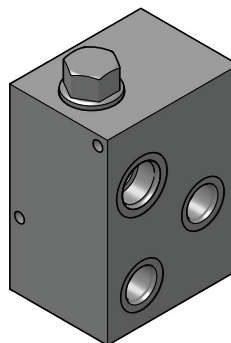


HYV08115

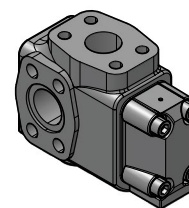

HYP01584

Dump Valve

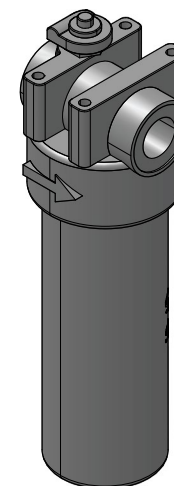

Pressure Filter

HYDRAULIC SERVICE PARTS

Arm In/Out Cylinder and Pins

Ref #	Part #	Description	Quantity
1	HYC00983	Cylinder	
2	0602-795	Drilled Capscrew	
3	QUE03975	Nut	
4	QUP03605	Cotter Pin	

Arm Up/Down Cylinder and Pins

Ref #	Part #	Description	Quantity
1	HYC00984	Cylinder	
2	HYV02680	Counterbalance Valve	
3	221454	Pin Assembly	
4	QUG00200	Grease Fitting	
5	QUB04005	Capscrew	
6	QUE02377	Nut	

Tailgate Cylinder and Pins


Ref #	Part #	Description	Quantity
1	HYC00330	Cylinder	
2	HYJ03112	Seal Kit	
3	QUR01240	Bearing (Rod End)	
4	QUR04325	Snap Ring (Rod End)	
5	69061	Collar (Rod End)	
6	QUB03920	Capscrew	
7	QUE01302	Nut	
8	60783	Pin (Case End)	
9	QUG00200	Grease Fitting	
10	QUB03360	Capscrew	
10	QUR01272	Lock Washer	

Packer Cylinder and Pins


Ref #	Part #	Description	Quantity
1	HYC01477	Cylinder	
2	HYJ00389	Seal Kit	
3	HYV01206	Relief Valve	
4	QUR00619	Bearing (Case End)	
5	QUR02417	Snap Ring (Case End)	
6	120273	Pin (Case End)	
7	QUB00476	Bushing (Rod End)	
7	120272	Pin (Rod End)	

Top Door Cylinder and Pins


Ref #	Part #	Description	Quantity
1	HYC00340-01	Cylinder	
2	HYJ00391-01	Seal Kit	
3	QUP02790	Pin	
3	QUP03605	Cotter Pin	

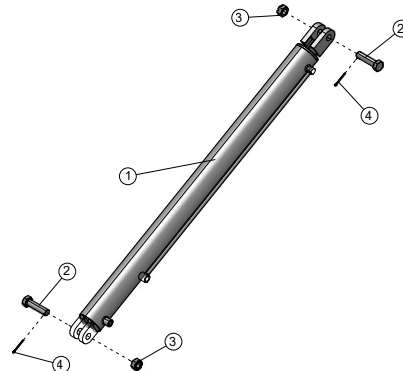


Arm In-Out Cylinder

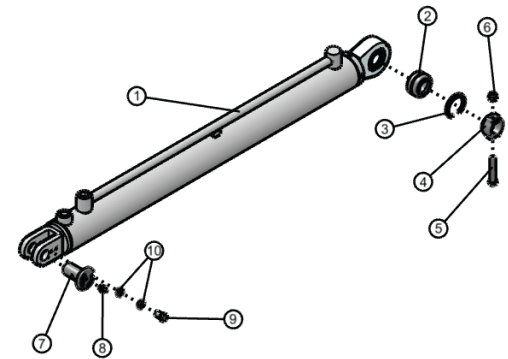


Tailgate Cylinder and Pin

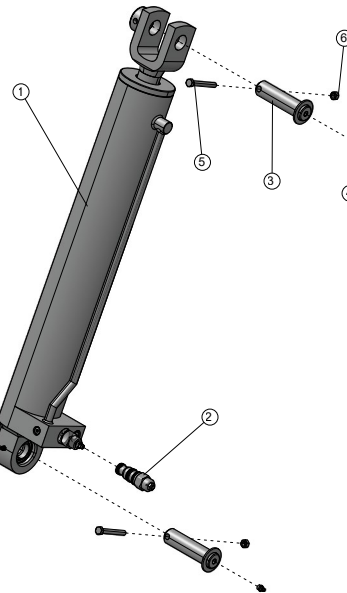

Arm Up-Down Cylinder

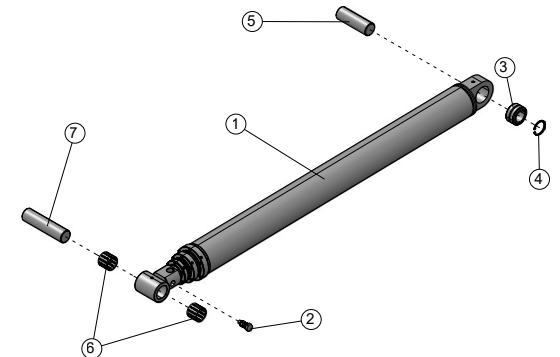

Packer Cylinder and Pins

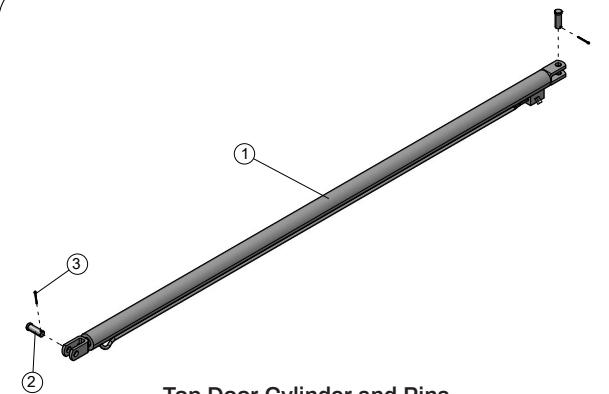

Top Door Cylinder and Pins

HYDRAULIC SERVICE PARTS

HYV04555 Control Valve Assembly Section Assemblies

Ref #	Part #	Description	Quantity
	HYV04655	ASSY., Inlet Section - PVG 100	
	HYV04605	ASSY., Section - Complete - PVG 100 (Packer)	
	HYV04606	ASSY., Section - Complete - PVG 100/32 (Interface)	
	HYV04653	ASSY., Section - Complete - PVG 32 (Arm In/Out)	
	HYV04654	ASSY., Section - Complete - PVG 32 (Arm Up/Down)	
	HYV04608	ASSY., Section - Complete - PVG 32 (Tailgate)	
	HYV04657	ASSY., Section - Complete - PVG 16 (Top Door)	
	HYV04377	PLATE, End	

Actuators

Ref #	Part #	Description	Quantity
	HYV04615	ACTUATOR, Electric (Packer) (Non Proportional, On/Off)	
	217259	ACTUATOR, Electric - PVG32 (Can Bus Programmed) (Proportional)	
	217257	ACTUATOR, Electric - PVG32 (Can Bus Programmed) (Proportional)	
	HYV04616	ACTUATOR, Electric - Proportional (Tailgate)	
	HYV04604	ACTUATOR, Electric Non Proportional - PVG 16 (On/Off)	
	HYV04315	ACTUATOR, Manual (Packer, Arm In/Out, Arm Up/Down, Tailgate) (Includes Handle)	
	HYV04637	ACTUATOR, Manual - PVG16 (Section Only, Includes Handle)	

Spools

Ref #	Part #	Description	Quantity
	HYV04618	SPOOL - PVG 100 (Packer)	
	HYV04617	SPOOL - PVG 32 (Tailgate)	
	HYV04612	SPOOL - PVG 16 (Top Door, On/Off)	
	HYV04368	SPOOL - PVG 32 (Arm In/Out, Arm Up/Down)	

Shock Valves

Ref #	Part #	Description	Quantity
	HYV04620	VALVE, Shock (3480 PSI, Interface)	
	HYV04476	VALVE, Shock (2538 PSI, Tailgate)	

Seal Kits & Other Components

Ref #	Part #	Description	Quantity
	HYV04656	KIT, Seal - PVG 100 (Inlet)	
	HYV04625	KIT, Seal - PVG 100 (Packer, Interface)	
	HYV04429	KIT, Seal Between Sections (Arm In/Out, Arm Up/Down, Tailgate, Top Door)	
	HYV04330	KIT, Seal - PVG 32 (Manual Actuator)	
	HYV0335-01	KIT, Seal - PVG 32 (Actuator)	
	HYV04623	KIT, Seal - PVG 16 (Actuator)	
	HYV04628	KIT, Stud (1 Work Section Assy.)	
	HYV04325	KIT, Stud (3 Work Section Assy.)	
	HYV04316	HANDLE ONLY	
	HYV04631	CABLE, Can Bus Loop	
	HYV04632	RESISTOR, End Can Bus	

BODY SERVICE PARTS

Body Mounting Components

Ref #	Part #	Description	Quantity
1	87757	Cover	2
	98237	Guide Shoe	2
	QUV01927	Flat Head Capscrew	4
	QUB04852	Capscrew	2
	QUR01912	Washer	2
	QUE00530	Nut	2
	QUB06250	Capscrew	4
	QUR01912	Washer	8
	QUE01500	Nut	4
2	155119	Guide Bracket	2
3	175960	Body Mount	4
	QUR03360	Spring	2
	QUB14025	Capscrew	2
	QUR02810	Washer (Upper)	2
	QUR02880	Washer (Lower)	2
4	71700	Body Rear Pivot Assembly	1

Packer Cylinder Pins, Components and Grease Lines


Ref #	Part #	Description	Quantity
1	120118	ASSY., Packer Front Pin Attachment (Complete Includes Items 11,12,13)	8
2	120273	Pin (Case End)	2
3	120272	Pin (Rod End)	2
4	QUG00200	Grease Fitting	2
5	HYF19950	Adaptor	2
6	222323	Bulkhead Bracket	2
7	QUB03501	Capscrew	4
8	QUR01902	Washer	8
9	QUE01302	Nut	4
10	HYF03475	Adaptor, 90°	2
11	QUB06350	Capscrew	As Reqd.
12	QUR01435	Lock Washer	As Reqd.
13	QUR02000	Washer	As Reqd.
14	222324	Hose	2

Mud Guards - Front


Ref #	Part #	Description	Quantity
1	98234	Mud Flap Support	2
2	98235	Mud Flap Fixture	2
	QUB11940	Bolt	8
3	43699	Mudguard	2
4	43700	Mudguard Clamping Plate	2

Mud Guards - Rear


Ref #	Part #	Description	Quantity
5	121827	Mudguard Adapter Plate	2
	QUB02120	Capscrew	16
	QUR01695	Washer	8
	QUE01175	Nut	8
6	5523	Bolt Support	2
	QUB02160	Capscrew	8
	QUR01695	Washer	16
	QUE01175	Nut	8

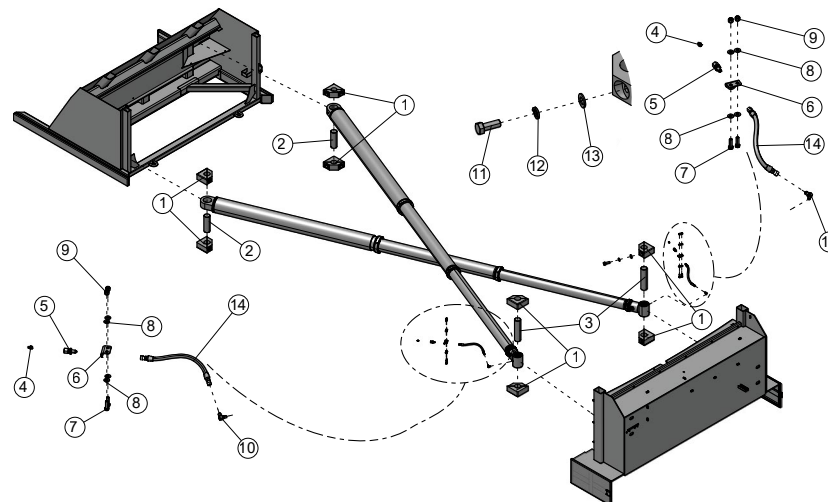

Packer Cylinder Pins, Components and Grease Lines

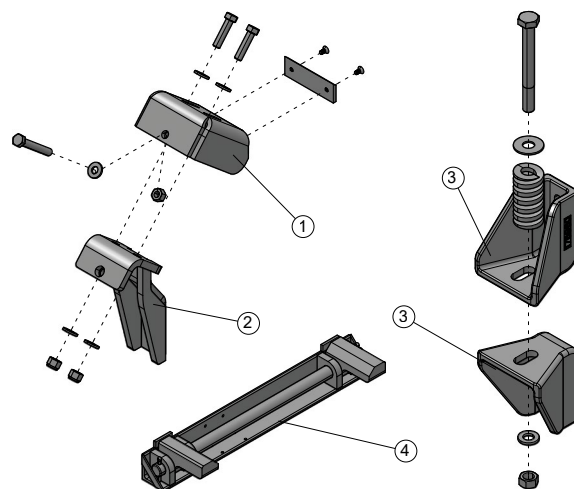

Body Mounting Components

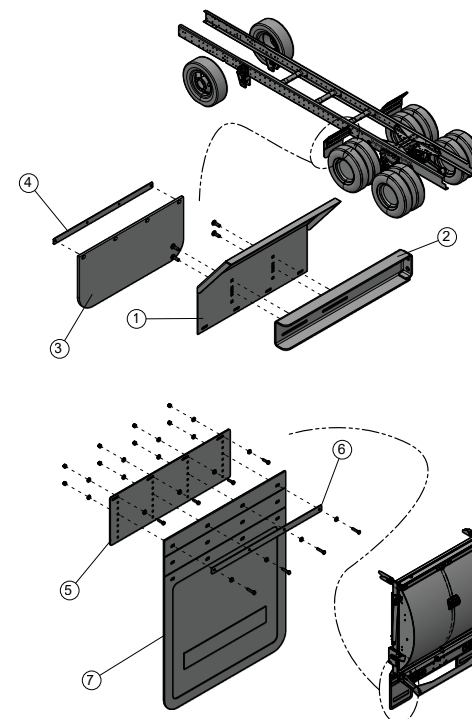

Mudguards

BODY SERVICE PARTS

Hopper Ladder

Ref #	Part #	Description	Quantity
1	222231	Hopper Ladder	1
	QUB03360	Capscrew	3
	QUR01272	Lock Washer	3
2	120374	Anchor	1

ICC Bumper





Ref #	Part #	Description	Quantity
1	200840	Bumper	1
	QUB12050	Bolt	4
	QUR01912	Washer	4
	QUE01500	Nut	4
2	120288	Right Side Brace	1
	QUB04405	Capscrew	3
	QUR01300	Lock Washer	3
	QUR01912	Washer	3
3	120291	Left Side Brace	1
	QUB04405	Capscrew	3
	QUR01300	Lock Washer	3
	QUR01912	Washer	3

Upper Light Panel

Ref #	Part #	Description	Quantity
1	222712	Upper Light Panel	1
2	170197	Upper Light Cover	1
	QUB03399	Capscrew	12
	QUR01274	Lock Washer	12
	QUR01901	Washer	12
	QUE02017-01	Nut Insert	8
3	QUG01000	Rubber Grommet	2
4	QUG02700	Rubber Grommet	5
5	QUG02595	Rubber Grommet	1

Lower Light Panel

Ref #	Part #	Description	Quantity
1	155010	Lower Light Panel	1
	QUB04385	Capscrew	2
	QUR01300	Lock Washer	2
	QUR01912	Washer	2
2	155009	Lower Light Cover	1
	QUB03399	Capscrew	10
	QUR01274	Lock Washer	10
	QUR01901	Washer	10
	QUE02017-01	Nut Insert	10
	QUE02010	Plastic Insert (License Plate)	4
3	QUG01000	Rubber Grommet	1
4	QUG02595	Rubber Grommet	1
5	QUG03000	Rubber Grommet	6

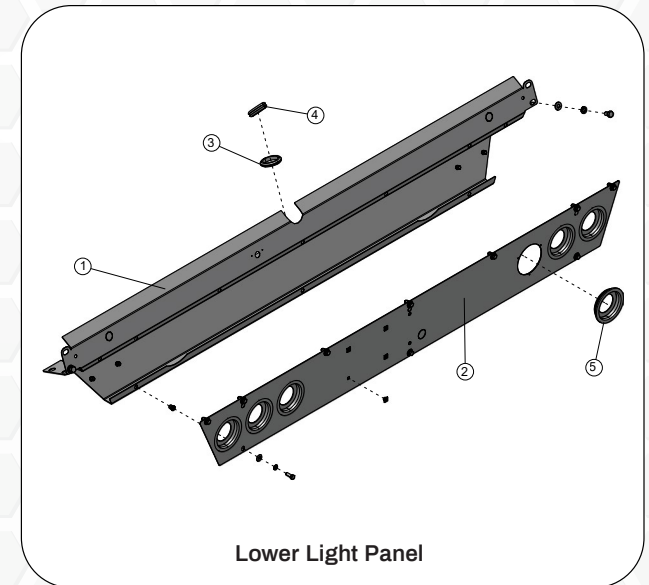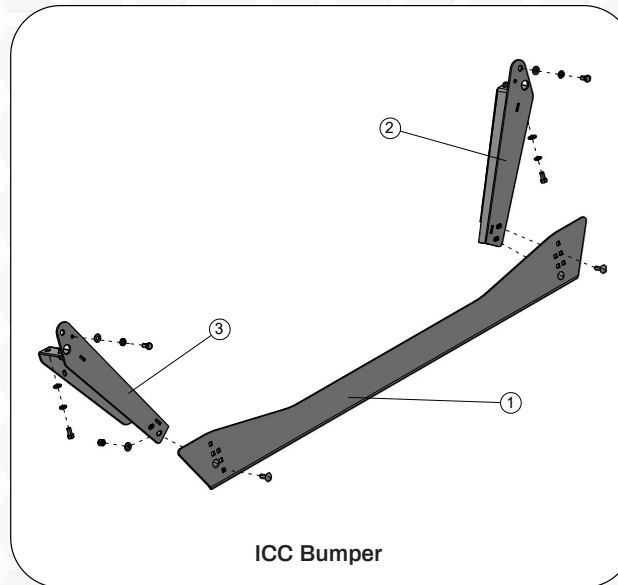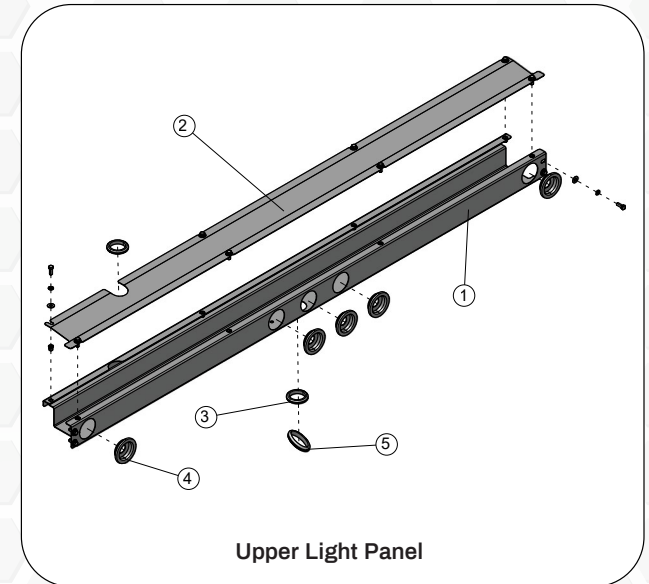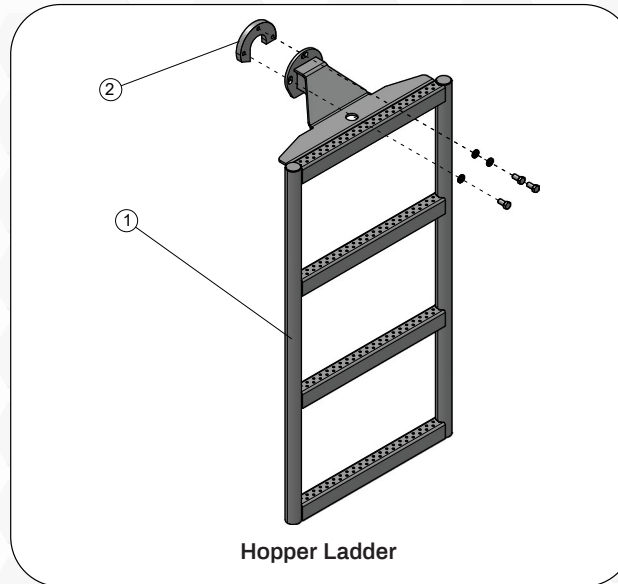

BODY SERVICE PARTS

Center Tailgate Accessory Bracket

Ref #	Part #	Description	Quantity
1	69213	Bracket	1
	QUB03505	Capscrew	4
	QUR01901	Washer	8
	QUE01305	Nut	4
2	120579	Cover	1
	QUB03399	Capscrew	2
	QUR01274	Lock Washer	2
	QUR01901	Washer	2

Cleanout Door


Ref #	Part #	Description	Quantity
1	QUC01210-03	Latch	1
	QUB02599	Capscrew	4
	QUR01272	Lock Washer	4
	QUR01825	Washer	4
2	81674	Latch Support	1
3	221997	Clean Out Door (Includes Items 2 & 4)	1
4	QUP01915	Hinge	1
5	222282	GASKET	1
6	80433	STUD, Latch	1

Rear Lower Wiring and HYD Covers


Ref #	Part #	Description	Quantity
1	QUB03501	CAPSCREW	8
2	QUR01272	WASHER, Lock	8
3	QUR01902	WASHER	8
4	QUE02017	THREADED INSERT	8
5	164373	COVER, Right/Curb-side	1
6	164372	COVER, Left/Street-side	1

Packer Sensors


Ref #	Part #	Description	Quantity
1	211384	Target Cover	1
	QUB03399	Capscrew	4
	QUR01274	Lock Washer	4
	QUR01901	Washer	4
2	120580	Proximity Bracket	2
	QUB03399	Capscrew	4
	QUR01274	Lock Washer	4
3	45103-03	Proximity Sensor	2
4	222247	Target	1

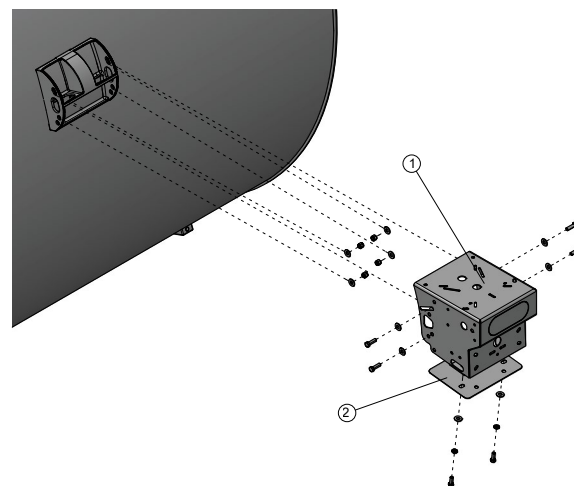


Center TG Accessory Bracket

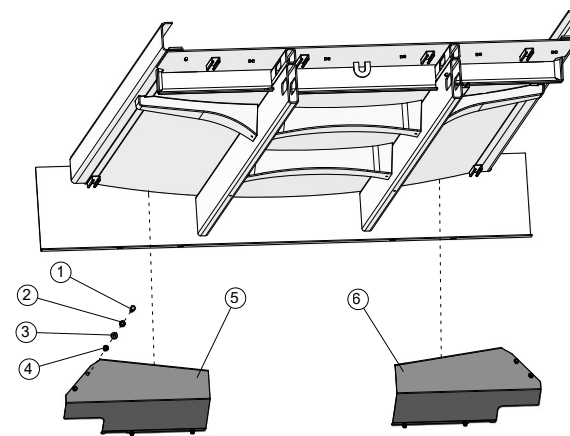

Body Rear Lower Wiring & HYD Covers

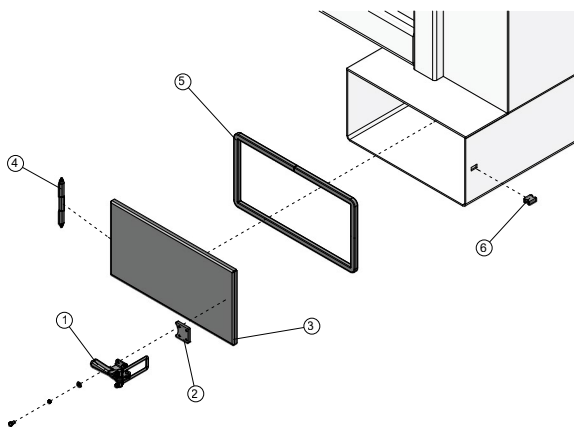

Cleanout Door

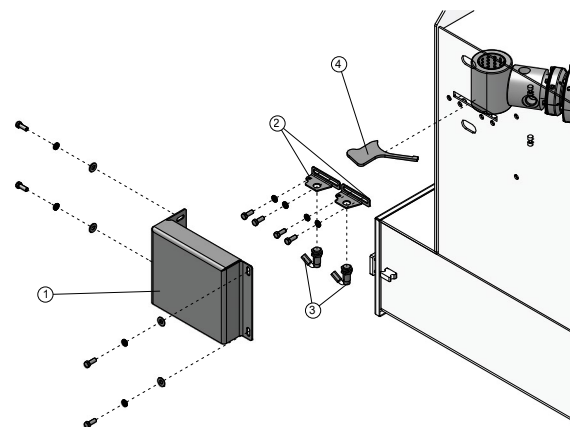

Packer Sensor


BODY SERVICE PARTS

Arm Stowed Sensor (Street and Curbside Arm)


Ref #	Part #	Description	Quantity
1	222277	Cover	1
	QUB01990	Capscrew	4
	QUR01261	Lock Washer	4
	QUR01695	Washer	4
2	ELI00550-01	Limit Switch	1
	QUV01950	Screw	2
	QUR01600	Washer	2
	QUE01070	Nut	2
3	ELC00140	Cable Connector	1
4	222250	Bracket	1
	QUB01990	Capscrew	4
	QUR01261	Lock Washer	4
	QUR01695	Washer	4
5	QUA00275	Cable Support	1
	QUB01990	Capscrew	1
	QUR01261	Lock Washer	1
	QUR01695	Washer	1
6	QUG02300	Rubber Grommet	1

Top Door Sensor

Ref #	Part #	Description	Quantity
1	120357	Proximity Bracket	1
	QUB11865	Bolt	2
	QUR01700	Washer	2
	QUE01101	Nut	2
2	45103-03	Proximity Sensor	1
	QUR02000	Spacer	2

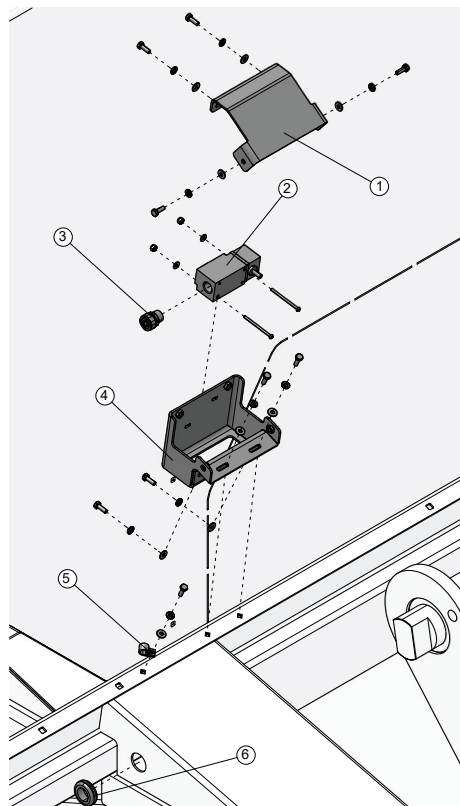

Arm Stowed Sensor

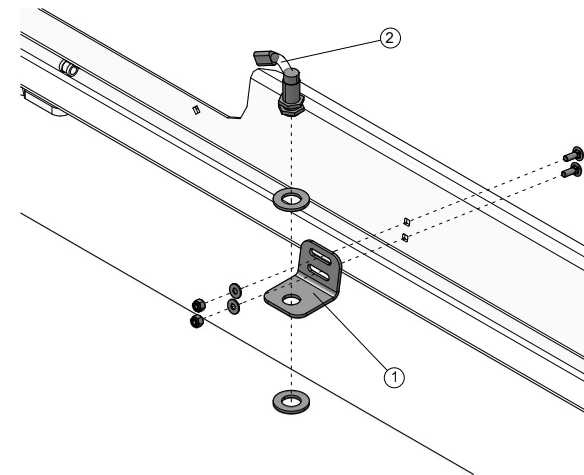


Top Door Sensor

BODY SERVICE PARTS



Electrical Components

Ref #	Part #	Description	Quantity
1	ELB05000-A	SWITCH Pack - 6 (Node 12 or 14)(Ref Unit Elec. Sch.)	As Req'd.
2	ELB05100-A	SWITCH Pack - 6 (Node 13 or 15)(Ref Unit Elec. Sch.)	As Req'd.
3	ELV00450	Lamp, Indicator - RED (arm not stowed)	As Req'd.
4	ELR00775	RELAY, Mini - 35 Amp	As Req'd.
5	ELB02000	SWITCH, Push Button (Yellow)	As Req'd.
6	ELB02180	SWITCH, Push Button (Red) (40mm)	As Req'd.
7	ELB02300	SWITCH, Push Button (Green)	As Req'd.
8	ELB02450	SWITCH, Protector	As Req'd.
9	PNJ01500	JOYSTICK (6 Button, Deadman, 2 Axis, CAN)	As Req'd.
10	PNJ00969	BOOT, Rubber (Used on PNJ01500)	As Req'd.
11	PNJ00972	SWITCH, Deadman (Electrical Switch Only PNJ01500)	As Req'd.
12	PNJ01501	BUTTON, Deadman (Button Only PNJ01500)	As Req'd.
13	PNJ00970SPRING	SPRING, Deadman (Spring only PNJ01500)	As Req'd.
14	ELI02425-01	SWITCH, Button (Yellow Rd PNJ01500.)	As Req'd.
15	PNJ00970	ASSY. Handle (Includes Items 11, 12 & 15)	As Req'd.
16	ELR01020	BUZZER	As Req'd.
17	157502	RESISTOR, End Line	As Req'd.
18	ELC06341	HOLDER, Pass Through	As Req'd.
19	ELC06345	PORT, Ethernet	As Req'd.
20	ELH50021	CABLE, Ethernet	As Req'd.
21	ELC06340	PORT, USB	As Req'd.
22	45103-03	SENSOR, Prox	As Req'd.
23	ELM50010	CONTROLLER	As Req'd.
24	ELM50000	CONTROLLER, Master	As Req'd.
25	ELR00701	RELAY, Timer	As Req'd.
26	ELS00507	COVER, Fuse Relay	As Req'd.
27	ELC06003	CONNECTOR, 26 POS	As Req'd.
28	ELM50020	MONITOR	As Req'd.
29	ELR01005	BUZZER	As Req'd.
30	151074	BACKUP ALARM	As Req'd.
31	66870	DIODE PACK	As Req'd.
32	66871	DIODE PACK	As Req'd.
33	HYI01215	BYPASS SENSOR, Pressure Line	As Req'd.
34	92512	DIODE PACK	As Req'd.
35	ELR00836	RELAY	As Req'd.
36	ELR00815	MODULE, Power Fuse	As Req'd.
37	ELC05110	DIODE	As Req'd.
38	159604	JUMPER	As Req'd.
39	ELF00030	FUSE, 10 Amp ATO (Red)	As Req'd.
40	ELF00312	FUSE - 30 Amp (Pink) (FMX Style)	As Req'd.
41	ELF00313	FUSE - 40 Amp (Green) (FMX Style)	As Req'd.

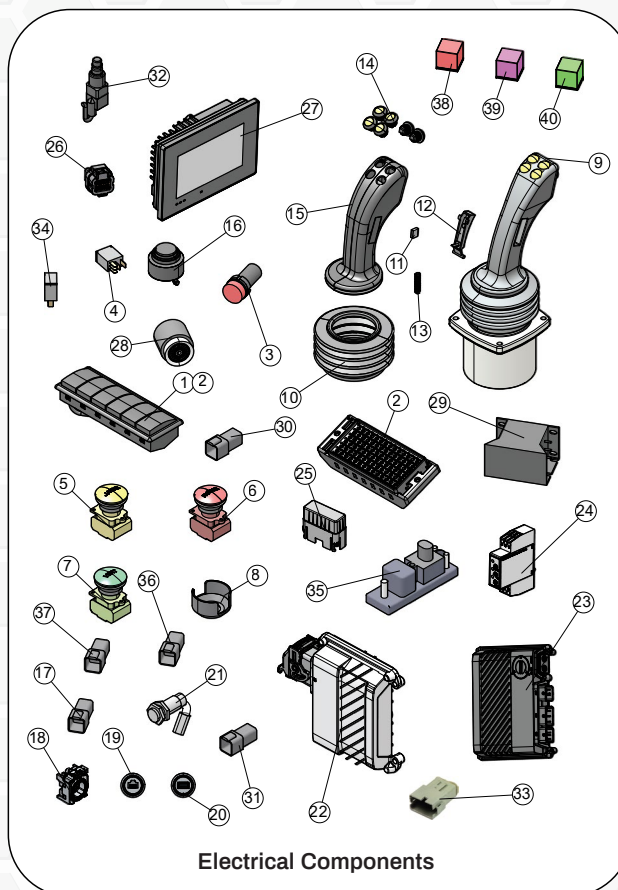

Lighting Components

Ref #	Part #	Description	Quantity
1	ELL02940	LIGHT, LED - 4" Clear	As Req'd.
2	ELL02530	LIGHT, LED - 4" - S,T&T - Red	As Req'd.
3	ELL02571	LIGHT, Marker LED - 2½" - Red	As Req'd.
4	ELL02604	LIGHT, LED - Oval Side Turn - 6" x 2" - Amber	As Req'd.
5	ELL03010	LIGHT, License Plate - LED - Clear	As Req'd.
6	ELL02573	LIGHT, LED - .75" - Marker - Amber	As Req'd.
7	QUG03000	GROMMET, Rubber - 4½"	As Req'd.
8	ELL01322	LIGHT, LED - 4½" - Brkt. Mtg. - Clear	As Req'd.
9	QUG02700	GROMMET, Rubber - 2½"	As Req'd.

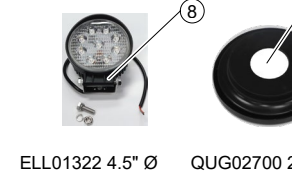

Lighting Components



BODY SERVICE PARTS

Ignition Relay Enclosure

Ref #	Part #	Description	Quantity
1	180250	ASSY., Ignition Relay Enclosure (Does Not Include 3,7,12,14 or 15)	1
	ELB00150	Grounding Stud	1
	QUV00740	Screw	2
	QUR01595	Washer	6
	QUE01070	Nut	2
2	ELR00816	Ignition Relay (Refer to Electrical Schematic to Confirm Part)	1
	QUB02001	Capscrew	2
	QUE01175	Nut	2
3	ELB00490-01	Enclosure (Includes Cover, Plate & Box)	1
	QUV00748	Screw	4
	QUR01600	Washer	4
	QUE01070	Nut	4
4	QUG02000	Rubber Grommet	1
	ELR00815	Ignition Relay (Refer to Electrical Schematic to Confirm Part)	1
5	QUB02310	Capscrew	1
	QUE01175	Nut	1
	ELF00312	FUSE - 30 Amp (Pink) (FMX Style)	1
7	ELF00313	FUSE - 40 Amp (Green) (FMX Style)	1

Clearance Lights - Front of Body

Ref #	Part #	Description	Quantity
1	121203	Clearance Light Bracket	2
	QUB03401	Capscrew	4
	QUR01902	Washer	8
	QUE01302	Nut	4

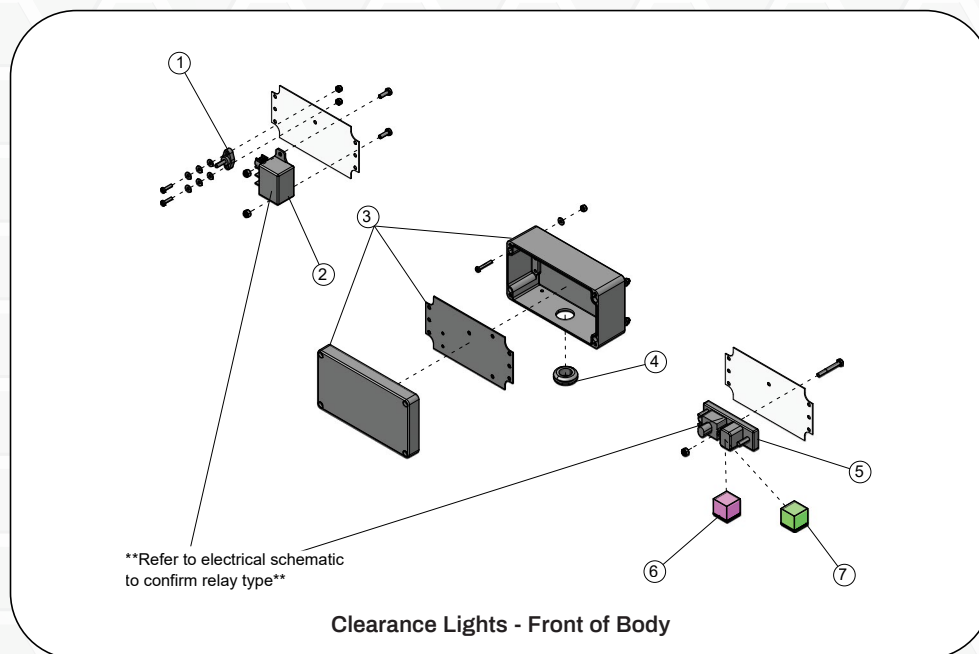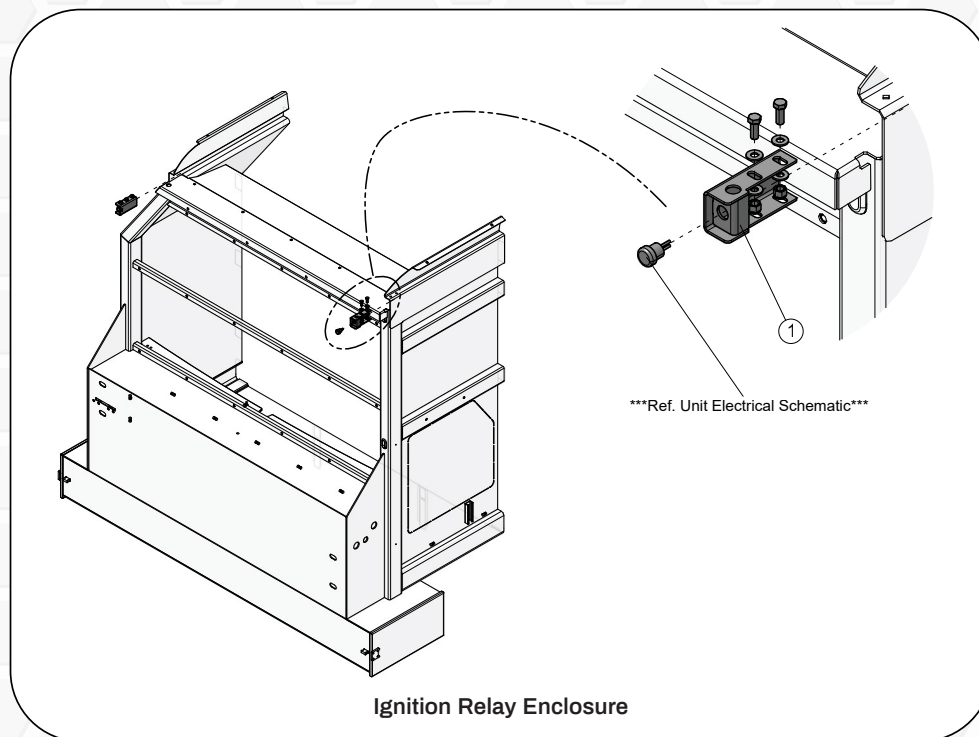

MISCELLANEOUS SERVICE PARTS

Miscellaneous Service Parts

Ref #	Part #	Description	Quantity
	87585	Spring Handle Assembly for Hopper Door	1
	COG000100	Scraper	1
	QUP03858	Shovel	1
	181791	Broom	1
	222707	Packer Scraper	1
	CHC02150	HYD Tank Mounting Bracket (Includes Bracket and Straps)	2
	CHC01700	Strap Only-For HYD Tank	2
	CII00110	Rubber for Strap-For HYD Tank	As Req'd.
	ELC01500	Oil Heater	1
	CAT00200	First Aid Kit	1
	48408	Tailgate Width Indicator	2
	120731	Tailgate Latch	2
	69119	Tailgate Latch Lock Pin	2
	81011	Safety Prop	1
	69653	Stopper Support	1
	QUB00075	Safety Prop Bumper	1
	69071	Tailgate Pin	2
	QUE11000-01	Pin Lanyard	2
	CIC01953	Tailgate Rubber Seal	1
	120301	Tailgate Seal Channel	1
	70973	Tailgate Latch Pin Bushing	2
	QUR02412	Snap Ring for 70973	2