



MINI REAR

Parts Manual

Page Left Blank

Page Left Blank



labriep^{plus}

Thank you for your purchase of a new Labrie™, Leach™ or Wittke™ product. To ensure maximum reliability, insist on genuine **labriep^{plus}** replacement parts. LabriePlus replacement parts are designed and manufactured to exacting standards. The use of counterfeit, will-fit or substitute parts may effect the operation and performance of the unit.

Visit our Website at usa.labriepplus.com or canada.labriepplus.com, or contact us at 1-800-231-2771 (in the U.S.) or 1-877-452-2743 (in Canada), twenty-four hours a day, seven days a week. We are available to help you with any questions or concerns.



TABLE OF CONTENTS

LABRIE PLUS	1	
TABLE OF CONTENTS	2	SECTION 7 CYLINDERS & PINS
CAPSCREW MARKING and		Eject Cylinders & Pins
TORQUE VALUES CHART	3	Packer Cylinders & Pins
		Carrier Cylinders & Pins
		Tailgate Lift Cylinders & Pins
SECTION 1 TAILGATE		
Decals	4	SECTION 8 MOUNTING & MISC. PARTS
Tailgate Weldment	9	Mounting Hardware 8 YD
Tailgate Turn buckles	10	Mounting Hardware 10.5-13YD
Tailgate Props	11	Misc.Light & Camera Brackets
Tailgate Steps	12	Control Box
Tailgate Seal	15	Chassis Body & Tailgate Wiring
Packer & Carrier Panels	14	
Upper Sliding Shoe	15	SECTION 9 CONTAINER HANDLING
Lower Sliding Shoe	16	Tipper Base
Tailgate Controls 8 - 13YD	17	Tipper Hydraulics
Tailgate Control Rods	19	
SECTION 2 BODY		
Body Weldment	20	
Side Door Ladder	21	
SECTION 3 Eject Panels		
Eject Panels	22	
SECTION 4 HYDRAULICS		
Clamp & Rails	23	
Pump To Tank Hydraulics	24	
Hydraulic Tank Assembly	25	
Body Hydraulics	27	
Packer & Carrier Hydraulics	29	
T.G. Top&Lift Hydraulics 8-10.5 YD ..	31	
T.G. Top&Lift Hydraulics/Tipper 8-10.5YD	33	
T.G. Top&Lift Hydraulics/Tipper 13YD ..	35	
SECTION 5 VALVES		
Front Control Valve	37	
Main Control Valve	38	
Carrier Manifold	39	
Diverter Valve Single Tipper	40	
Tipper Hand Valve	41	
SECTION 6 PUMPS		
Married Pump	42	
Pump/Pto Combo	43	

CAPSCREW MARKING AND TORQUE VALUES

Usage	Much Used	Used at Times	Used at Times
Capscrew Diameter & Minimum Tensile Strength PSI	To $\frac{3}{4}$ - 120,000 To 1 - 115,000	To $\frac{5}{8}$ - 140,000 To $\frac{3}{4}$ - 133,000	150,000
Quality of Material	Min. Commercial	Med. Commercial	Best Commercial
SAE Grade Number	5	6 or 7	8
CAPSCREW HEAD MARKINGS Manufacturers marks may vary. These are all SAE Grade 5 (3-line.) 			
Capscrew Body Size (Inches) - (Thread)	Torque Ft-Lb (kg m)	Torque Ft-Lb (kg m)	Torque Ft-Lb (kg m)
$\frac{1}{4}$ - 20	8 (1.11)	10 (1.38)	12 (1.66)
- 28	10 (1.38)		14 (1.94)
$\frac{5}{16}$ - 18	17 (2.35)	19 (2.63)	24 (3.32)
- 24	19 (2.63)		27 (3.73)
$\frac{3}{8}$ - 16	31 (4.29)	34 (4.70)	44 (6.09)
- 24	35 (4.84)		49 (6.78)
$\frac{7}{16}$ - 14	49 (6.78)	55 (7.61)	70 (9.68)
- 20	55 (7.61)		78 (10.79)
$\frac{1}{2}$ - 13	75 (10.37)	85 (11.76)	105 (14.52)
- 20	85 (11.76)		120 (16.60)
$\frac{9}{16}$ - 12	110 (15.21)	120 (16.60)	155 (21.44)
- 18	120 (16.60)		170 (23.51)
$\frac{5}{8}$ - 11	150 (20.75)	167 (23.10)	210 (29.04)
- 18	170 (23.51)		240 (33.19)
$\frac{3}{4}$ - 10	270 (37.34)	280 (38.72)	375 (51.86)
- 16	295 (40.80)		420 (58.09)
$\frac{7}{8}$ - 9	395 (54.63)	440 (60.85)	605 (83.67)
- 14	435 (60.16)		675 (93.35)
1 - 8	590 (81.60)	660 (91.28)	910 (125.85)
- 14	660 (91.28)		990 (136.92)

NOTES:

1. Always use the torque values listed above when specific torque values are not available.
2. The above is based on use of clean, dry threads.
3. Reduce torque by 10% when engine oil is used as a lubricant.
4. Reduce torque by 20% if new plated capscrews are used.
5. General Formula for calculating Torques is as follows: Torque in Inch Lbs. = .2 x Nominal Diameter of Screw x Loads in Lbs., where Load = 80% of Yield Strength, expressed in Lbs., not pounds per square inch.

SECTION 1

DECALS

1

CART TIPPER CONTROL

REV. C LABRIE 104525

8

PACKER

REV. B LABRIE 104051

9

CONTAINER DUMP CONTROL

Note: Both container latch arms must be in place and latched before raising container.

REV. B LABRIE 104105

15

2

ENGINE SPEED-UP

CAUTION

HYDRAULIC OIL ONLY

REV. D LABRIE 47301

16

FILTER ELEMENT CHANGE

To ensure oil cleanliness and longer machine life, change the element after 20 hours, 50 hours and then at 250 hours intervals.

REV. B LABRIE 104039

3

This unit conforms to all ANSI safety requirements Z 245.1 in effect on the date of manufacture.

REV. B LABRIE 104054

10

DRIVER SIGNAL

REV. B LABRIE 104032

4

DO NOT USE AS A STEP

REV. D LABRIE 104103

BEACON LIGHT

ON OFF

REV. E LABRIE 104544

11

HYDRAULIC PUSH BAR

REV. A LABRIE 104179

5

CARRIER

REV. C LABRIE 104054

12

EJECTION

REV. A LABRIE 104549

13

16

USE LABRIE RECOMMENDED HYDRAULIC FLUID ONLY

DO NOT FILL ABOVE THIS LINE

ALL CYLINDERS RETRACTED

ADD HYDRAULIC FLUID

REV. D LABRIE 104531

17

WARNING

The rotating drive shaft is dangerous. Do not go near the transmission shaft and do not go under the chassis, unless the engine is off and the ignition key has been removed.

REV. C LABRIE 104022

6

APACITÉ AXIALE MAXIMUM CAPACITY CAPACIDAD MÁXIMA

5443 kg 12000 lb

REV. B LABRIE 104054

7

TAILGATE PROP OPERATION INSTRUCTIONS

ENGAGE TAILGATE PROPS 1. RAISE THE TAILGATE. LOWER THE PROPS UNTIL THEY ARE FULLY ENGAGED. LOCK THE PROPS BY TURNING THE PROPS 90 DEGREES.	ENGAGE TAILGATE PROPS 1. RAISE THE TAILGATE. LOWER THE PROPS UNTIL THEY ARE FULLY ENGAGED. LOCK THE PROPS BY TURNING THE PROPS 90 DEGREES.
DISENGAGE TAILGATE PROPS 1. LOWER THE TAILGATE. UNLOCK THE PROPS BY TURNING THE PROPS 90 DEGREES. REMOVE THE PROPS FROM THE TAILGATE.	DISENGAGE TAILGATE PROPS 1. LOWER THE TAILGATE. UNLOCK THE PROPS BY TURNING THE PROPS 90 DEGREES. REMOVE THE PROPS FROM THE TAILGATE.

WARNING KEEP CLEAR OF SEAL AREA WHEN DEPLOYING PROPS. ENGAGE BOTH TAILGATE PROPS BEFORE ENTERING UNDER TAILGATE.

REV. B LABRIE 104054

PTO RELAY

REV. A LABRIE 104170


18

14

SECTION 1 DECALS




19

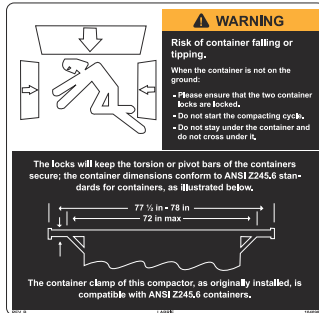


20




21

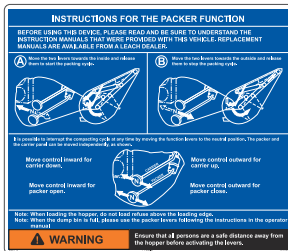


22

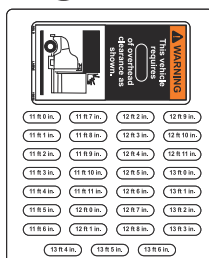


24

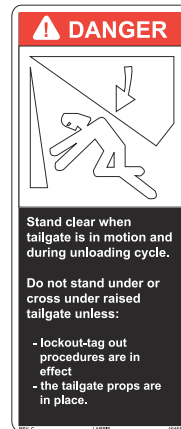


25

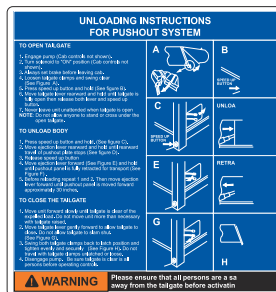


26

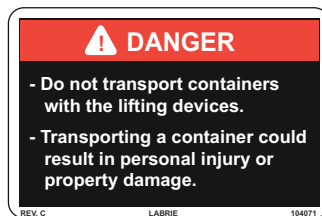

27

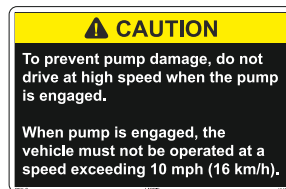

28

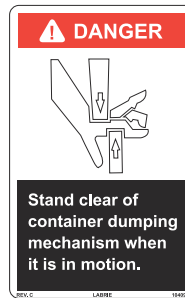


29




30




31

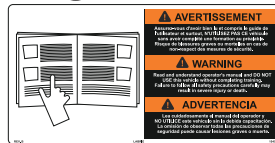

32




33

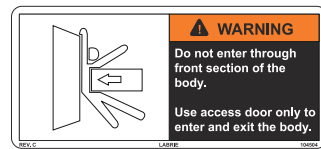

34



35

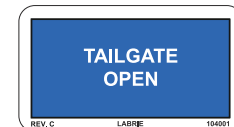


36



37



38



39



40



41



42

SECTION 1
DECALS

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	104525	TIPPER R.H. - English	
	104524	TIPPER R.H. - French	
	104526	TIPPER R.H. - Spanish	
	104528	TIPPER L.H. - English	
	104527	TIPPER L.H. - French	
	104529	TIPPER L.H. - Spanish	
2	104035	ENGINE SPEED UP - English	
	104034	ENGINE SPEED UP - French	
	104036	ENGINE SPEED UP - Spanish	
3	104044	ANSI CONFORMITY - English	
	104043	ANSI CONFORMITY - French	
	104045	ANSI CONFORMITY - Spanish	
4	104183	NO STEP - English	
	104182	NO STEP - French	
	104184	NO STEP - Spanish	
5	104179	HYDRAULIC PUSH BAR - English	
	104180	HYDRAULIC PUSH BAR - French	
	104181	HYDRAULIC PUSH BAR - Spanish	
6	104522	WARNING PTO - English	
	104521	WARNING PTO - French	
	104523	WARNING PTO - Spanish	
7	104641	12,000 LB. CAPACITY - English, French, Spanish	
8	104051	PACKER - English	
	104050	PACKER - French	
	104052	PACKER - Spanish	
9	47304	HYDRAULIC FLUID ONLY - English	
	47305	HYDRAULIC FLUID ONLY - French	
	79846	HYDRAULIC FLUID ONLY - Spanish	
	120989	HYDRAULIC FLUID ONLY - English and Spanish	
10	104032	DRIVER SIGNAL - English	
	104031	DRIVER SIGNAL - French	
	104038	DRIVER SIGNAL - Spanish	
11	104544	BEACON LIGHT - English	
	104543	BEACON LIGHT - French	
	104545	BEACON LIGHT - Spanish	
12	104054	CARRIER - English	
	104053	CARRIER - French	
	104055	CARRIER - Spanish	
13	104549	EJECTION - English	
	104056	EJECTION - French	
	104057	EJECTION - Spanish	
14	104534	TAILGATE PROP INSTRUCTION - English	
	104533	TAILGATE PROP INSTRUCTION - French	
	104535	TAILGATE PROP INSTRUCTION - Spanish	
15	104186	OPERATION INSTRUCTIONS, Container Dump - English	
	104185	OPERATION INSTRUCTIONS, Container Dump - French	
	104187	OPERATION INSTRUCTIONS, Container Dump - Spanish	
CONTINUED ON NEXT PAGE			

SECTION 1

DECALS


REF. NO.	PART NO.	DESCRIPTION	QTY.
16	104029	FILTER ELEMENT CHANGE - English	
	104028	FILTER ELEMENT CHANGE - French	
	104030	FILTER ELEMENT CHANGE - Spanish	
17	104531	FLUID LEVEL - English	
	104530	FLUID LEVEL - French	
	104532	FLUID LEVEL - Spanish	
18	104170	PTO - English	
	104169	PTO - French	
	104171	PTO - Spanish	
19	104074	WARNING - Stand Up Operation - English	
	104073	WARNING - Stand Up Operation - French	
	104075	WARNING - Stand Up Operation - Spanish	
20	104098	WARNING - Latch Arms - English	
	104097	WARNING - Latch Arms - French	
	104099	WARNING - Latch Arms - Spanish	
21	104516	DANGER - Packer Panel - English	
	104515	DANGER - Packer Panel - French	
	104517	DANGER - Packer Panel - Spanish	
22	104083	OPERATION INSTRUCTIONS - Packing - English	
	104082	OPERATION INSTRUCTIONS - Packing - French	
	104084	OPERATION INSTRUCTIONS - Packing - Spanish	
23	104092	WARNING, Truck Clearance - English	
	104091	WARNING, Truck Clearance - French	
	104093	WARNING, Truck Clearance - Spanish	
24	104068	WARNING, Access Door - English	
	104067	WARNING, Access Door - French	
	104069	WARNING, Access Door - Spanish	
	84165	WARNING, Access Door - English/French	
	84166	WARNING, Access Door - English/Spanish	
25	104519	DANGER, Stand Clear - English	
	104518	DANGER, Stand Clear - French	
	104520	DANGER, Stand Clear - Spanish	
26	104086	OPERATION INSTRUCTIONS - Unloading - English	
	104085	OPERATION INSTRUCTIONS - Unloading - French	
	104087	OPERATION INSTRUCTIONS - Unloading - Spanish	
27	104071	WARNING, Container Transport - English	
	104070	WARNING, Container Transport - French	
	104072	WARNING, Container Transport - Spanish	
28	104038	CAUTION, Pump Damage - English	
	104037	CAUTION, Pump Damage - French	
	104039	CAUTION, Pump Damage - Spanish	
	84163	CAUTION, Pump Damage - English/French	
	84164	CAUTION, Pump Damage - English/Spanish	
29	104095	DANGER, Container - English	
	104094	DANGER, Container - French	
	104096	DANGER, Container - Spanish	
CONTINUED ON NEXT PAGE			

SECTION 1
DECALS

REF. NO.	PART NO.	DESCRIPTION	QTY.
30	104089	WARNING, Do Not Tow - English	
	104088	WARNING, Do Not Tow - French	
	104090	WARNING, Do Not Tow - Spanish	
31	104510	WARNING, Riding - English	
	104509	WARNING, Riding - French	
	104511	WARNING, Riding - Spanish	
32	104539	WARNING, Operator and Service - English/French/Spanish	
33	104513	WARNING, Riding Step - English	
	104512	WARNING, Riding Step - French	
	104514	WARNING, Riding Step - Spanish	
34	104504	WARNING, Do Not Enter - English	
	104503	WARNING, Do Not Enter - French	
	104505	WARNING, Do Not Enter - Spanish	
35	104048	WINCH - English	
	104047	WINCH - French	
	104049	WINCH - Spanish	
36	104001	WARNING, Tailgate Open - English	
	104000	WARNING, Tailgate Open - French	
	104002	WARNING, Tailgate Open - Spanish	
37	104059	TAILGATE - English	
	104058	TAILGATE - French	
	104060	TAILGATE - Spanish	
38	104173	WORK LIGHT - English	
	104172	WORK LIGHT - French	
	104174	WORK LIGHT - Spanish	
39	104507	LINE PULL - English	
	104506	LINE PULL - French	
	104508	LINE PULL - Spanish	
40	104541	SOLENOID - English	
	104540	SOLENOID - French	
	104542	SOLENOID - Spanish	
41	104166	PTO, On/Off - English	
	104165	PTO, On/Off - French	
	104167	PTO, On/Off - Spanish	
42	104547	STROBE LIGHT _ English	
	104546	STROBE LIGHT _ French	
	104548	STROBE LIGHT _ Spanish	
	173533	Decal Placement 2RIII	
	ETR00400	2" White Reflective Tape	Per Foot
	ETR00300	2" Red/White Reflective Tape	Per Foot


SECTION 1

TAILGATE WELDMENT

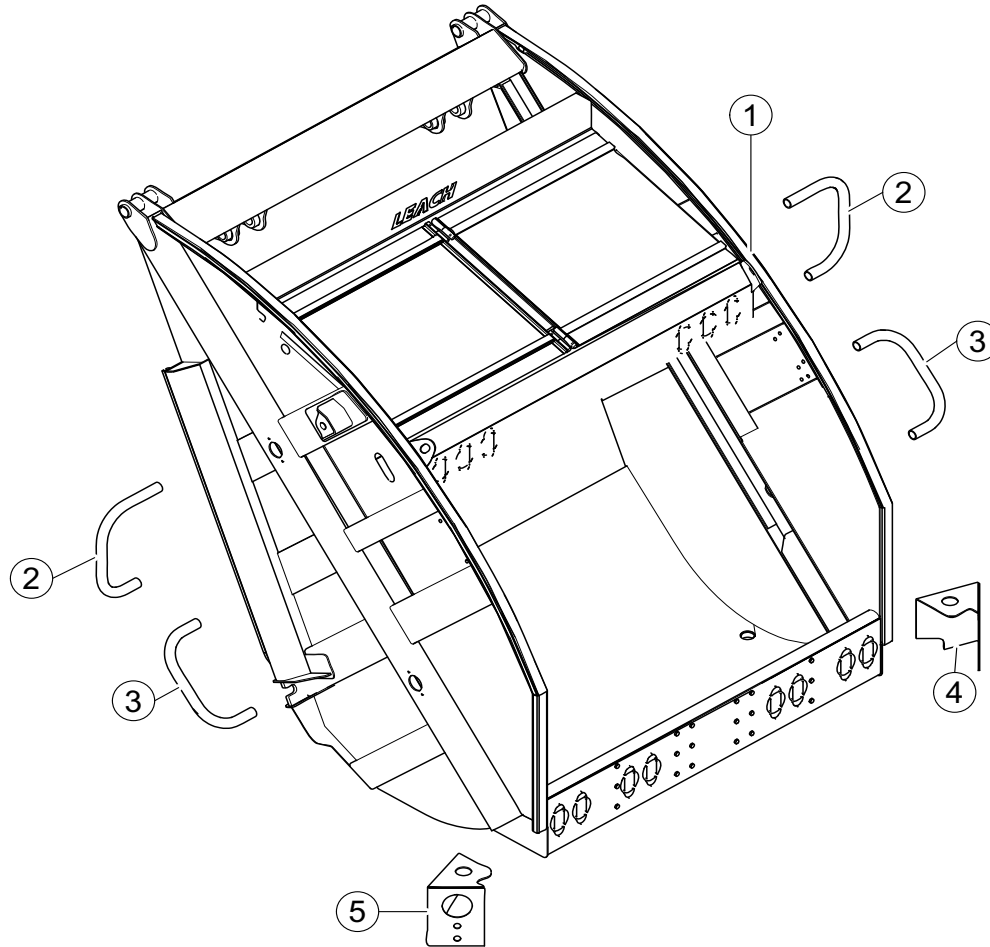

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	1-142-1-01-2501	TAILGATE, SHELL 8 - 10.5 YD	1
	1-144-1-01-2501	TAILGATE, SHELL 13 - 17 YD	1
2	196802	HANDLE, GRAB (OFF SET)	2
3	100005	HANDLE, GRAB	2
4	196765	BRACKET, COMBO LIGHT & SWITCH R.H.	1
5	196766	BRACKET, COMBO LIGHT & SWITCH L.H.	1
	11231013052	LINER, HOPPER SIDE (NOT SHOWN)	2
	1891010016	LINER, HOPPER BOTTOM (NOT SHOWN)	1
	REF	859674, 864850, 864851, 864006	


TAILGATE TURN BUCKLE

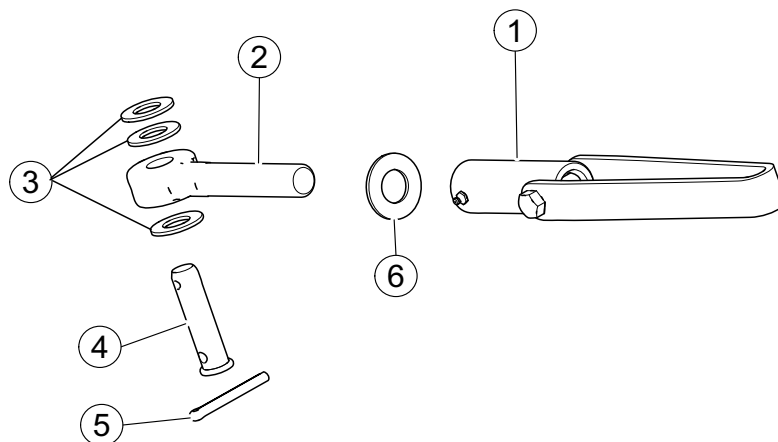

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	85901	ASSEMBLY, BARREL CLAMP	2
2	85904	BOLT, TAILGATE CLAMP 1.25"	2
3	QUB02100	WASHER, FLAT	6
4	158313	PIN, CLEVIS	2
5	QUP03800	PIN, COTTER	2
6	QUR02721	WASHER, FLAT	2
	REF	864814	

SECTION 1


TAILGATE PROPS

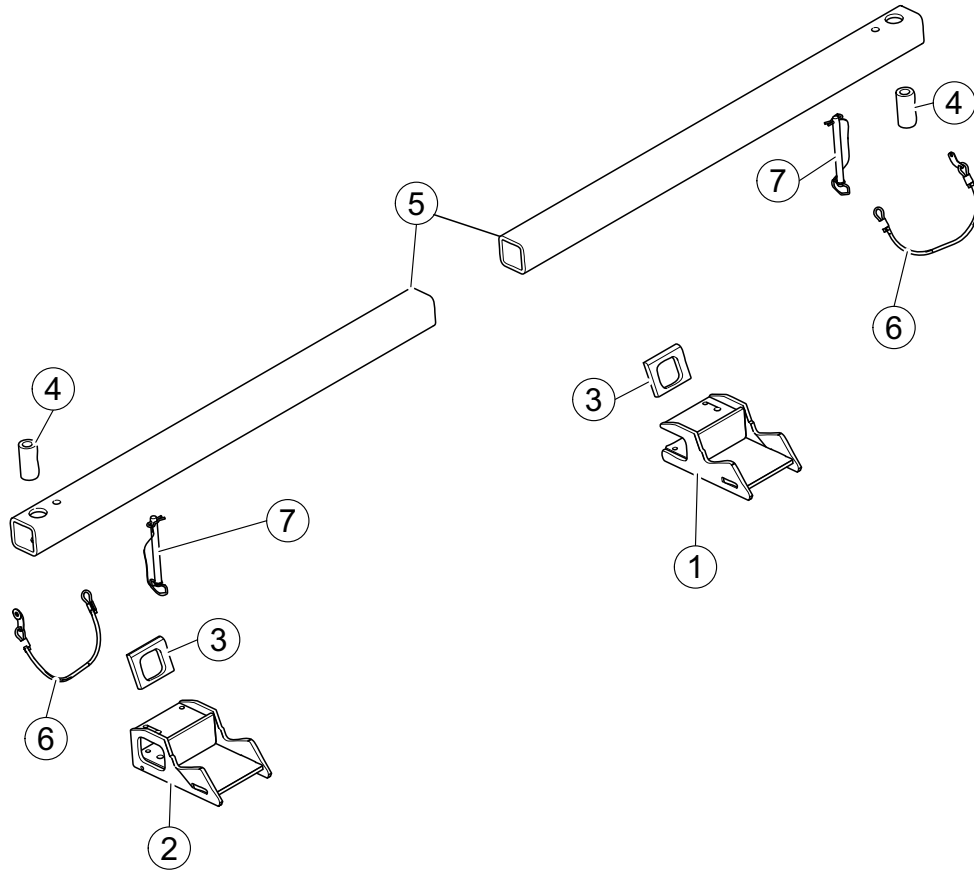

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	196771	STAND, SAFETY R.H. P.S.	1
2	196773	STAND, SAFETY L.H. D.S.	1
3	196774	STOPPER, PROP	2
4	188480	BUSHING, PROP	2
5	188481	PROP, SAFETY	2
6	QUE11000	LANYARD	2
7	QUP02416	PIN, HITCH	2
REF 859677, 859675			

SECTION 1


STEPS

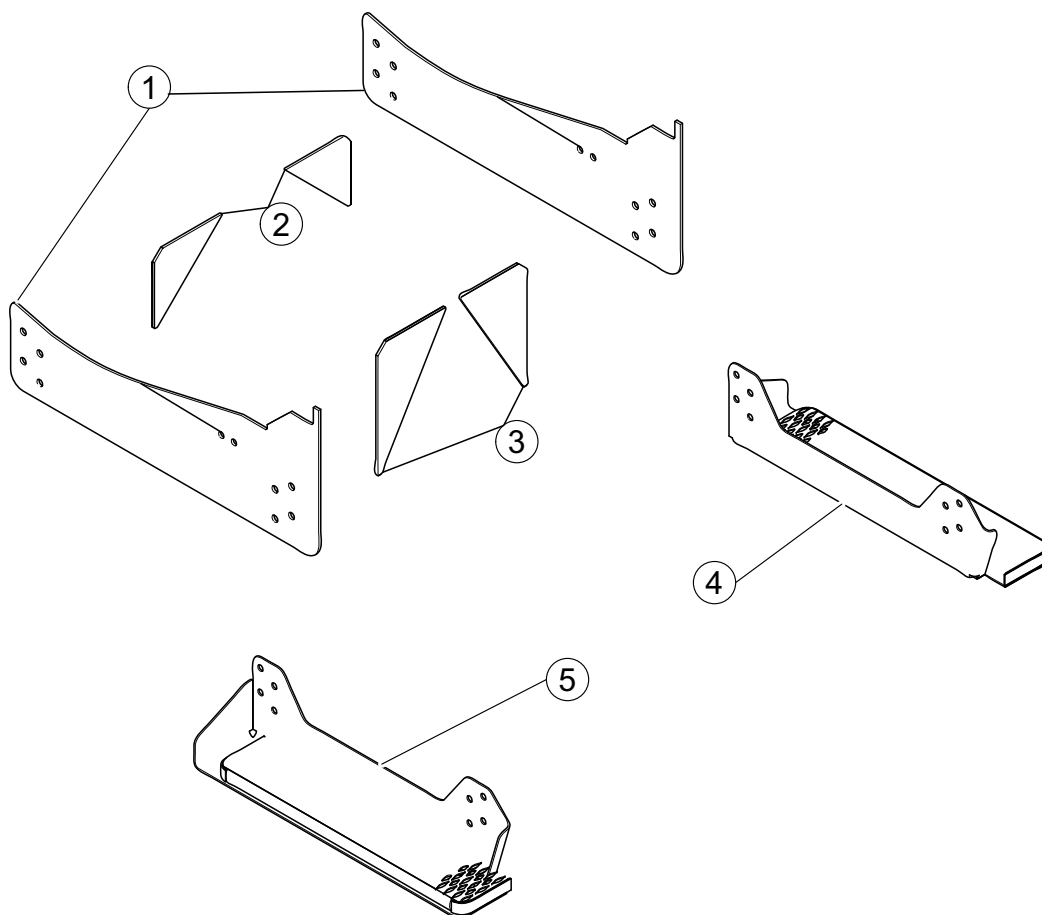

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	193225	SUPPORT, STEP 8 - 10.5 YD	2
	201320	SUPPORT, STEP 13 - 17 YD	2
2	196763	REINFORCEMENT, STEP FRONT 8 - 10.5 YD	2
	201322	REINFORCEMENT, STEP FRONT 13 - 17 YD	2
3	194440	REINFORCEMENT, STEP REAR 8 - 10.5 YD	2
	201321	REINFORCEMENT, STEP REAR 13 - 17 YD	2
4	186252	ASSEMBLY, RIGHT STEP	1
5	186254	ASSEMBLY, LEFT STEP	1
	REF	859663, 864846, 864925	


SECTION 1

TAILGATE SEAL

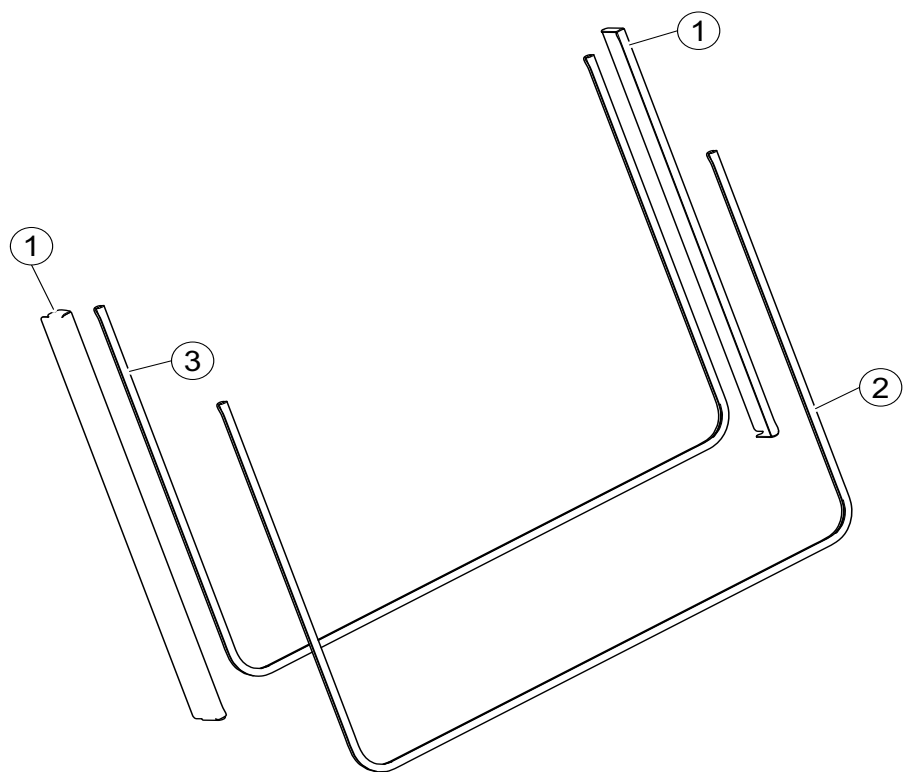


REF. NO.	PART NO.	DESCRIPTION	QTY.
1	201328	PANEL, SEAL	2
2	194444	RAIL, MOUNTING	1
3	CIC02010	SEAL, RUBBER 209"	1
	REF	859673, 863980, 866417, 866418	

PACKER & CARRIER PANELS

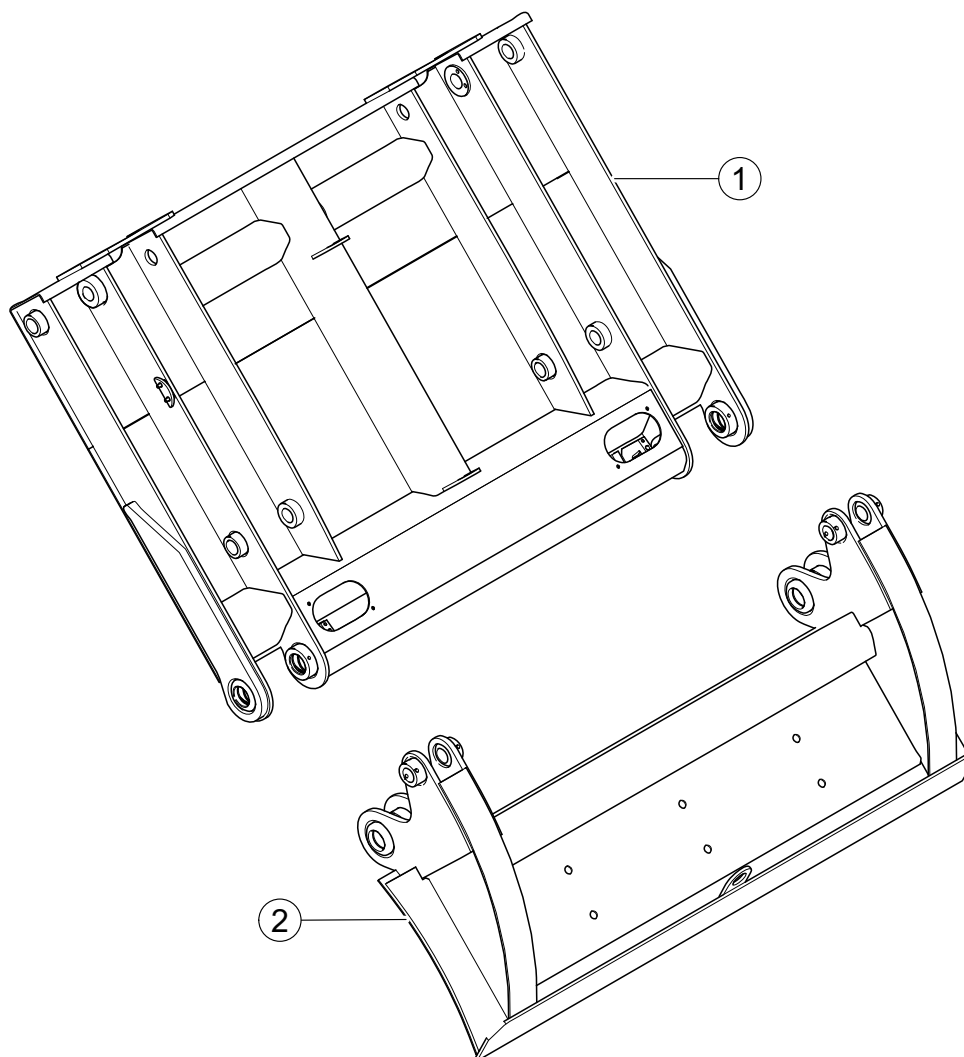


REF. NO.	PART NO.	DESCRIPTION	QTY.
1	1-142-1-03-0000	CARRIER PANEL 8 - 10.5 YD	1
	1-132-1-04-3000	CARRIER PANEL 13 - 17 YD	1
2	1-142-1-04-0000	PACKER PANEL 8 - 10.5 YD	1
	1-132-1-05-0100	PACKER PANEL 13 - 17 YD	1

SECTION 1**UPPER SLIDING SHOE**

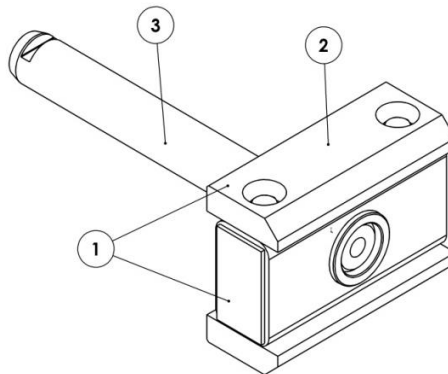

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	1-132-1-04-0020	ASSEMBLY, UPPER SLIDING SHOE	2
2	1-132-1-04-0022	SHOE, WEAR	AR
3	1-132-1-04-0023	PIN, UPPER SLIDING	2
	1-123-1-03-0057	RETAINER, (NOT SHOWN)	AR


LOWER SLIDING SHOE

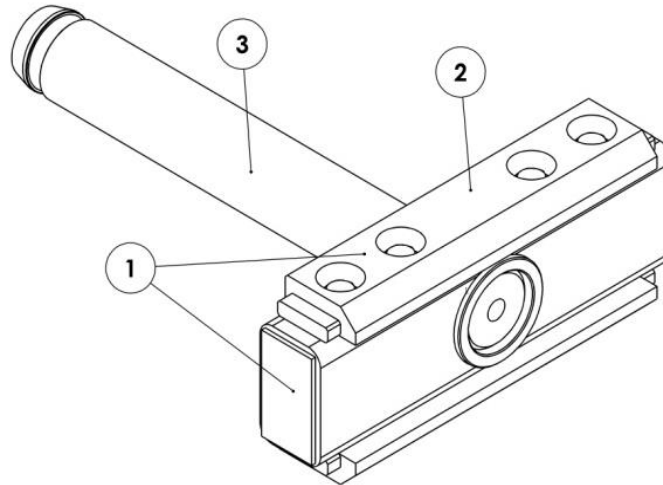

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	1-123-1-03-0015	ASSEMBLY, LOWER SLIDING SHOE 8 - 10.5 YD	2
	1-132-1-04-0020	ASSEMBLY, LOWER SLIDING SHOE 13 - 17 YD	2
2	1-123-1-03-0019	SHOE, WEAR 8 - 10.5 YD	AR
	1-132-1-04-0022	SHOE, WEAR 8 - 10.5 YD	AR
3	1-123-1-03-0021	PIN, LOWER SLIDING 8 - 10.5 YD	2
	1-132-1-04-0023	PIN, LOWER SLIDING 13 - 17 YD	2
	1-123-1-03-0071	RETAINER, (NOT SHOWN)	AR

SECTION 1

TAILGATE CONTROLS

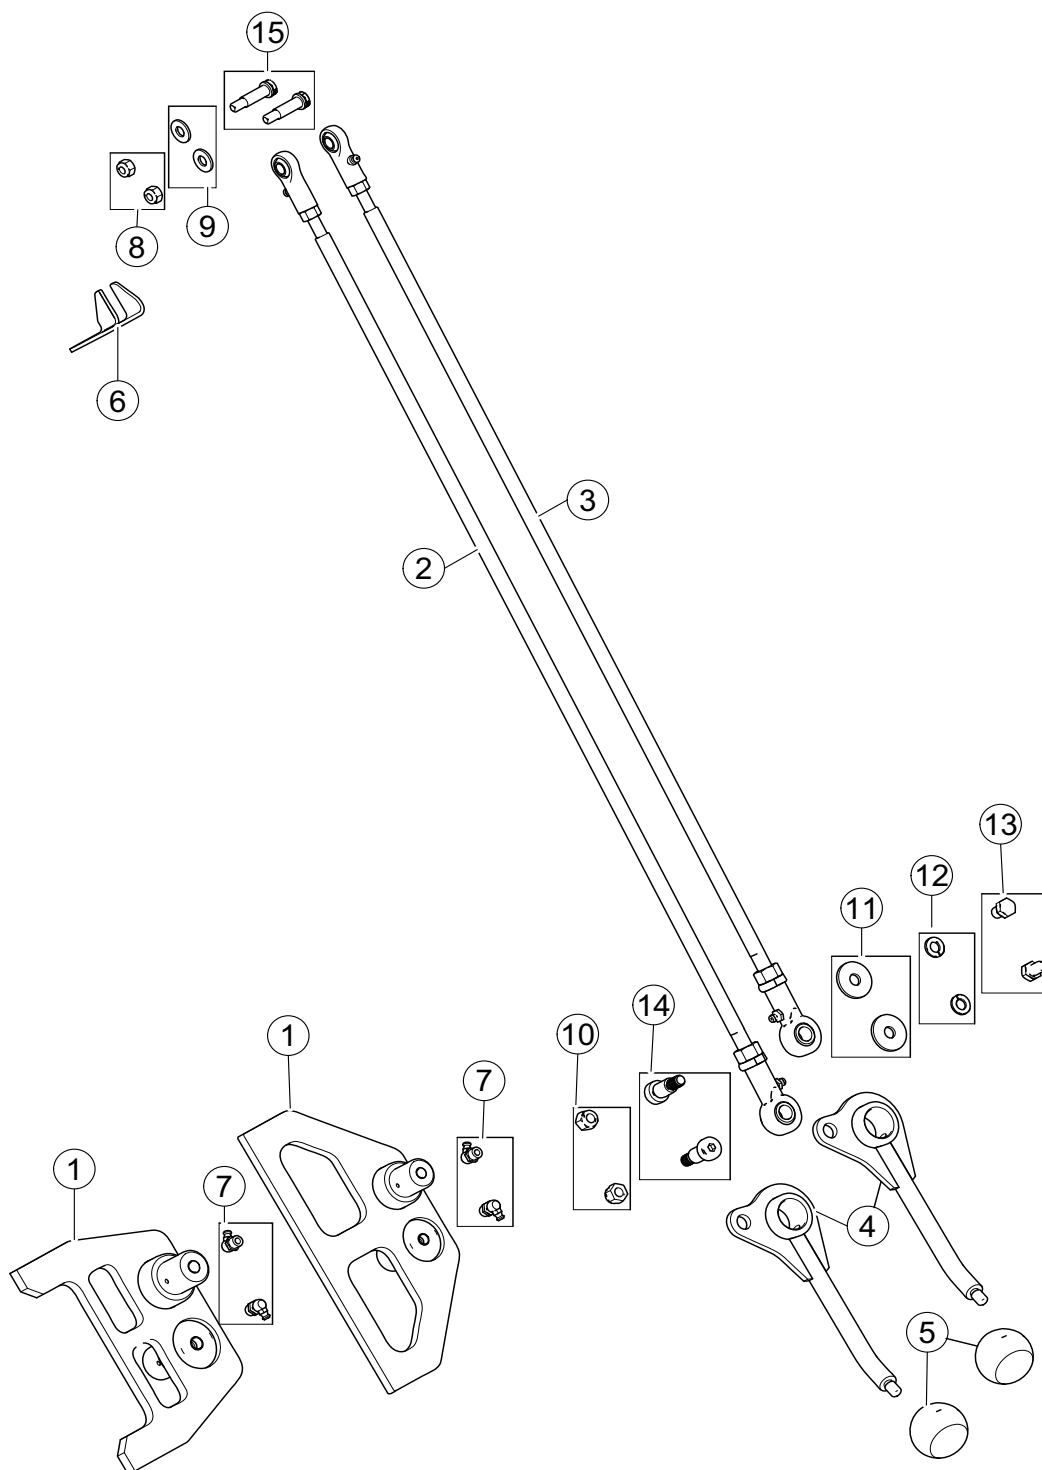


TAILGATE CONTROLS


REF. NO.	PART NO.	DESCRIPTION	QTY.
1	194471	WELDMENT, PIVOT BASE 8 - 10.5 YD	1
	201316	WELDMENT, PIVOT BASE 13 - 17 YD	1
2	194463	ASSEMBLY, UPPER CONTROL ROD 8 - 10.5 YD	1
	201329	ASSEMBLY, UPPER CONTROL ROD 13 - 17 YD	1
3	194469	ASSEMBLY, LOWER CONTROL ROD 8 - 10.5 YD	1
	201319	ASSEMBLY, LOWER CONTROL ROD 13 - 17 YD	1
4	194460	WELDMENT, CONTROL LEVER HANDLE	2
5	QUB08950	KNOB, LEVER HANDLE	2
6	194478	BRACKET, PROX SWITCH	1
7	QUG00300	ZERK, GREASE 90	4
8	QUE01205	NUT, LOCK 0.313" NC GR8	2
9	QUR01902	WASHER, FLAT 0.375" SAE	2
10	QUE01302	NUT, LOCK 0.375" NC GR8	2
11	QUR01587	WASHER, FLAT 0.375"	2
12	QUR01272	WASHER, LOCK 0.375"	2
13	QUB03349	BOLT, HH 0.375" NC X 0.50" GR8	2
14	QUB05461	BOLT, SHOULDER 0.375" X 1" X 0.313"NC	2
15	QUB05457	BOLT, SHOULDER 0.50" X 0.75" X 0.375"NC	2
	REF	864839, 864840, 866403, 866404,	

SECTION 1


PACKER CARRIER CONTROL RODS

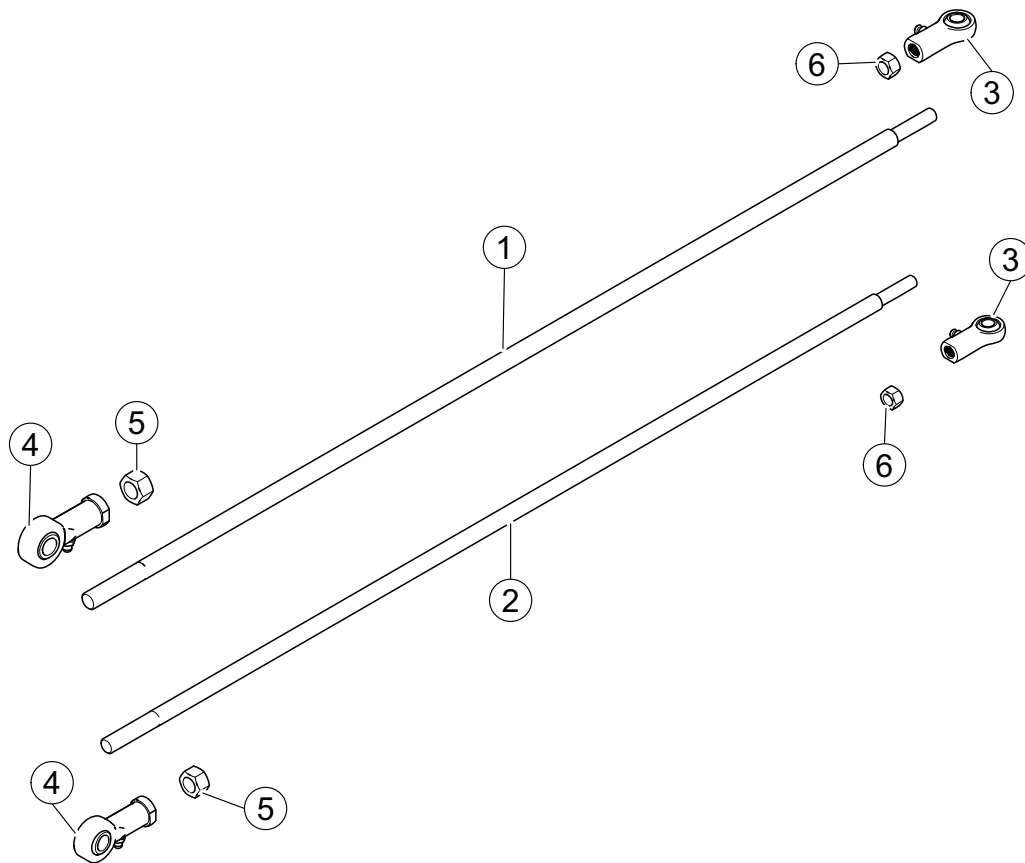


REF. NO.	PART NO.	DESCRIPTION	QTY.
1	194464	ROD, UPPER CONTROL 15.875" 8-10.5YD	1
	201330	ROD, UPPER CONTROL 31.5" 13 - 17 YD	1
2	194470	ROD, LOWER CONTROL 17.857" 8 - 10.5 YD	1
	201318	ROD, LOWER CONTROL 33.5" 13 - 17 YD	1
3	QUB00865	ROD END, SPHERICAL FEMALE 0.375"NF	2
4	QUB00880	ROD END, SPHERICAL FEMALE 0.50" NF	2
5	QUE01005	NUT, 0.50" NF	2
6	QUE00801	NUT, 0.375" NF	2
	REF	194463, 194469, 201319, 201329	

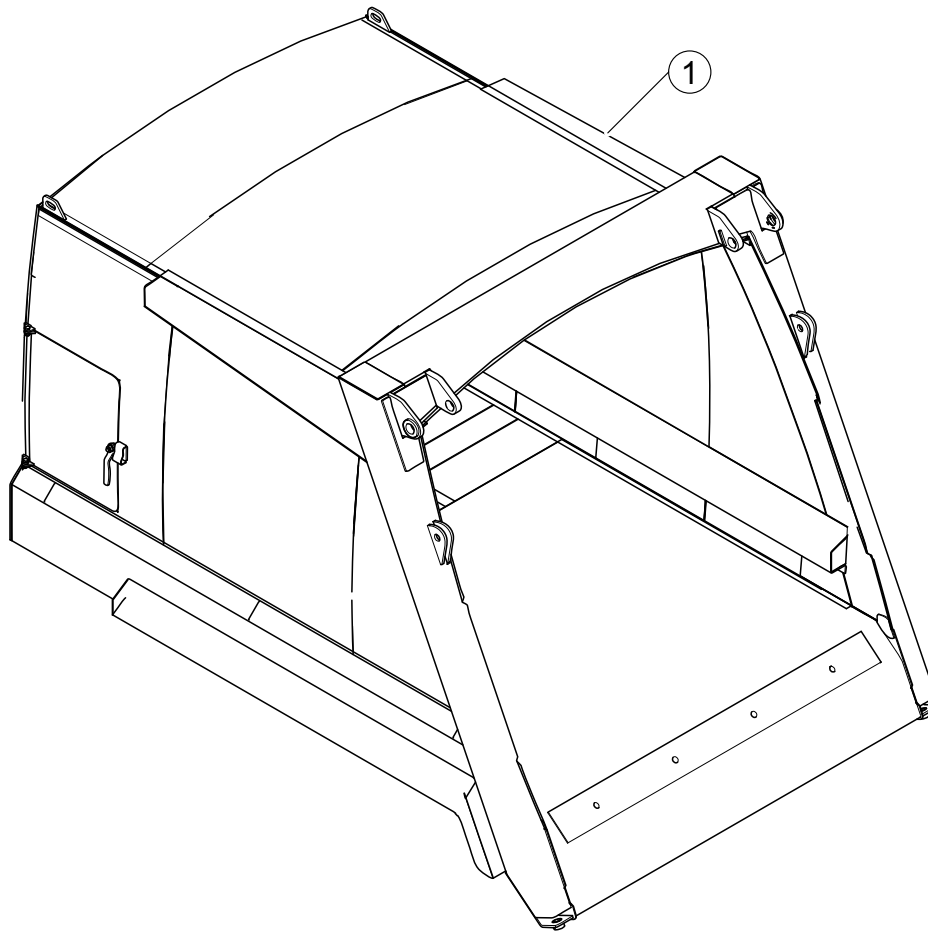BODY WELDMENT

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	1-142-1-02-2501	BODY SHELL 8 YD	1
	1-143-1-02-2501	BODY SHELL 10.5 YD	1
	1-144-1-02-2501	BODY SHELL 13 YD	1
	1-145-1-02-2501	BODY SHELL 17 YD	1
	11231028020	SHEET, BODY FLOOR (NOT SHOWN)	2
	11231020070	LINER, BODY APRON (NOT SHOWN)	1
	REF	864850, 864851, 864006	

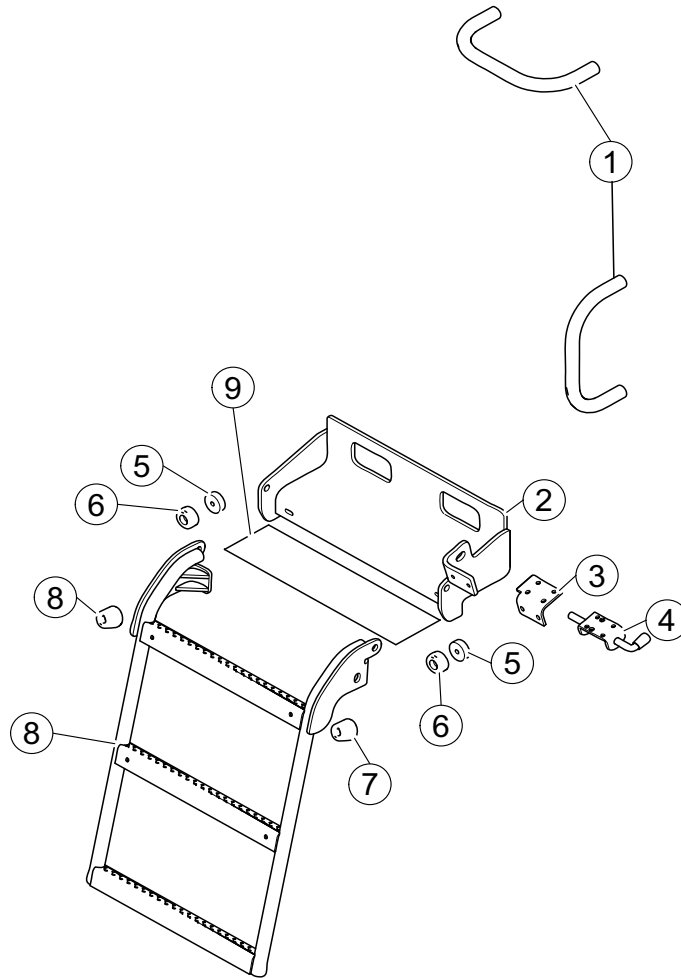
SECTION 2**SIDE DOOR LADDER**

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	100005	HANDLE, GRAB	2
2	197550	BRACKET, LADDER MOUNT	1
3	181166	BRACKET, LADDER LOCK	1
4	50868	LOCK, SPRING	1
5	180612	SPACER	2
6	QUB01300	BUMPER, RUBBER 0.25" ID X 1.5" X 0.75"	2
7	QUB01303	BUMPER, RUBBER 0.25" ID X 1.578" X 1.266"	2
8	181167	WELDMENT, LADDER	1
9	QUB52000	TAPE, ANTI SLIP	FT
	REF	864880, 864881	

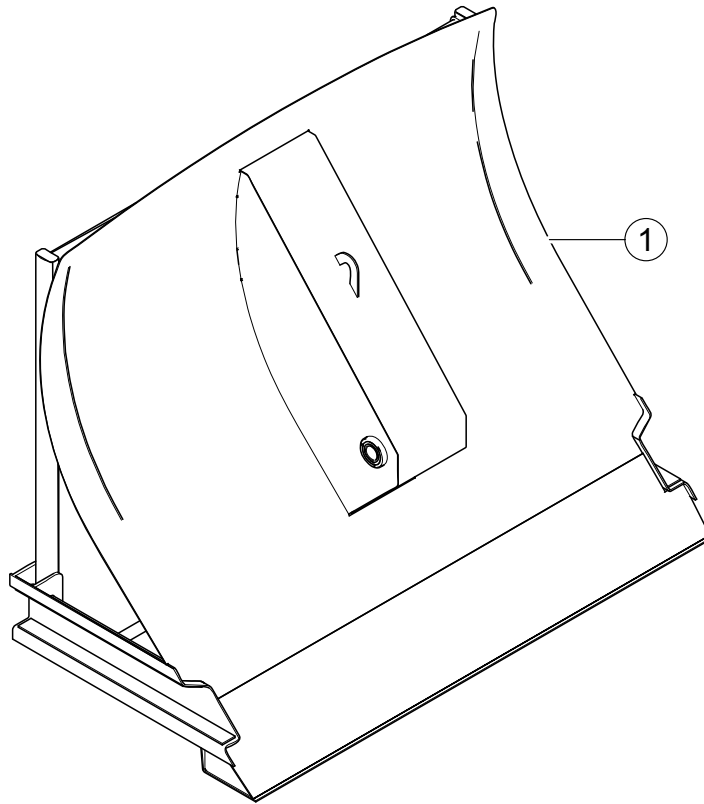EJECT PANEL


REF. NO.	PART NO.	DESCRIPTION	QTY.
1	1-142-1-06-2500	EJECT PANEL 8 -10.5 YD	1
	1-144-1-06-2500	EJECT PANEL 13 - 17 YD	1

SECTION 4**CLAMPS & RAILS**

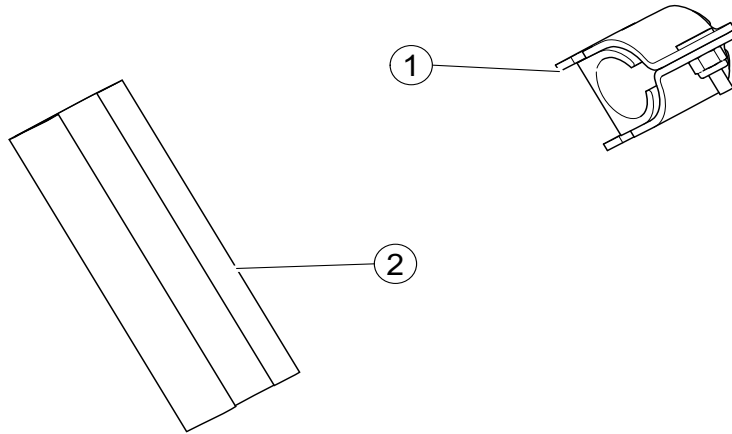

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	HYS00150	CLAMP, 0.38"	AR
	HYS00200	CLAMP, 0.50"	AR
	HYS00250	CLAMP, 0.62"	AR
	HYS00300	CLAMP, 0.75"	AR
	HYS00305	CLAMP, 1.05"	AR
	HYS00400	CLAMP, 1.00"	AR
	HYS00425	CLAMP, 1.12"	AR
	HYS00450	CLAMP, 1.25"	AR
	HYS00453	CLAMP, 1.38"	AR
	HYS00455	CLAMP, 1.50"	AR
	HYS00460	CLAMP, 0.84"	AR
	HYS00490	CLAMP, 1.62"	AR
	HYS00500	CLAMP, 1.75"	AR
	HYS00550	CLAMP, 2.00"	AR
	HYS00560	CLAMP, 2.50"	AR
	HYS00565	CLAMP, 3.12"	AR
	HYS00566	CLAMP, 3.62"	AR
2	HYS00570	RAIL, CLAMP 10 '	AR


PUMP TO TANK HYDRAULICS

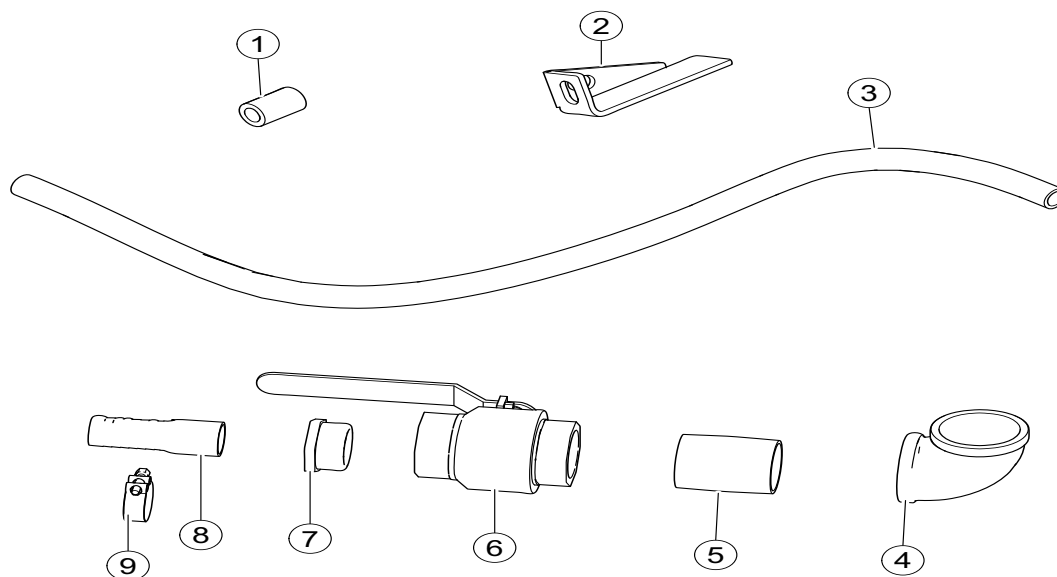

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	45616	SPACER	1
2	96312	SUPPORT, HYDRAULIC	1
3	HYB00100-A	HOSE, SUCTION 1.25" (SOLD BY THE INCH)	AR
4	HYF13152	ELBOW, 90	1
5	HYF13955	NIPPLE, NPT 2.5' X 4.0"	1
6	HYV01850	VALVE, BALL	1
7	HYF13808	REDUCER, NPT 2.5" X 1.5"	1
8	HYF13993	ADAPTOR, HOSE TO NPT	1
9	HYC00108	CLAMP, SUCTION HOSE 1.25"	2
		HOSE, PRESSURE (NOT SHOWN)	1
		CONTACT LABRIE SERVICE WITH UNIT SERIAL NUMBER FOR PART NUMBER	
	REF	822636, 864887	

SECTION 4

HYDRAULIC TANK

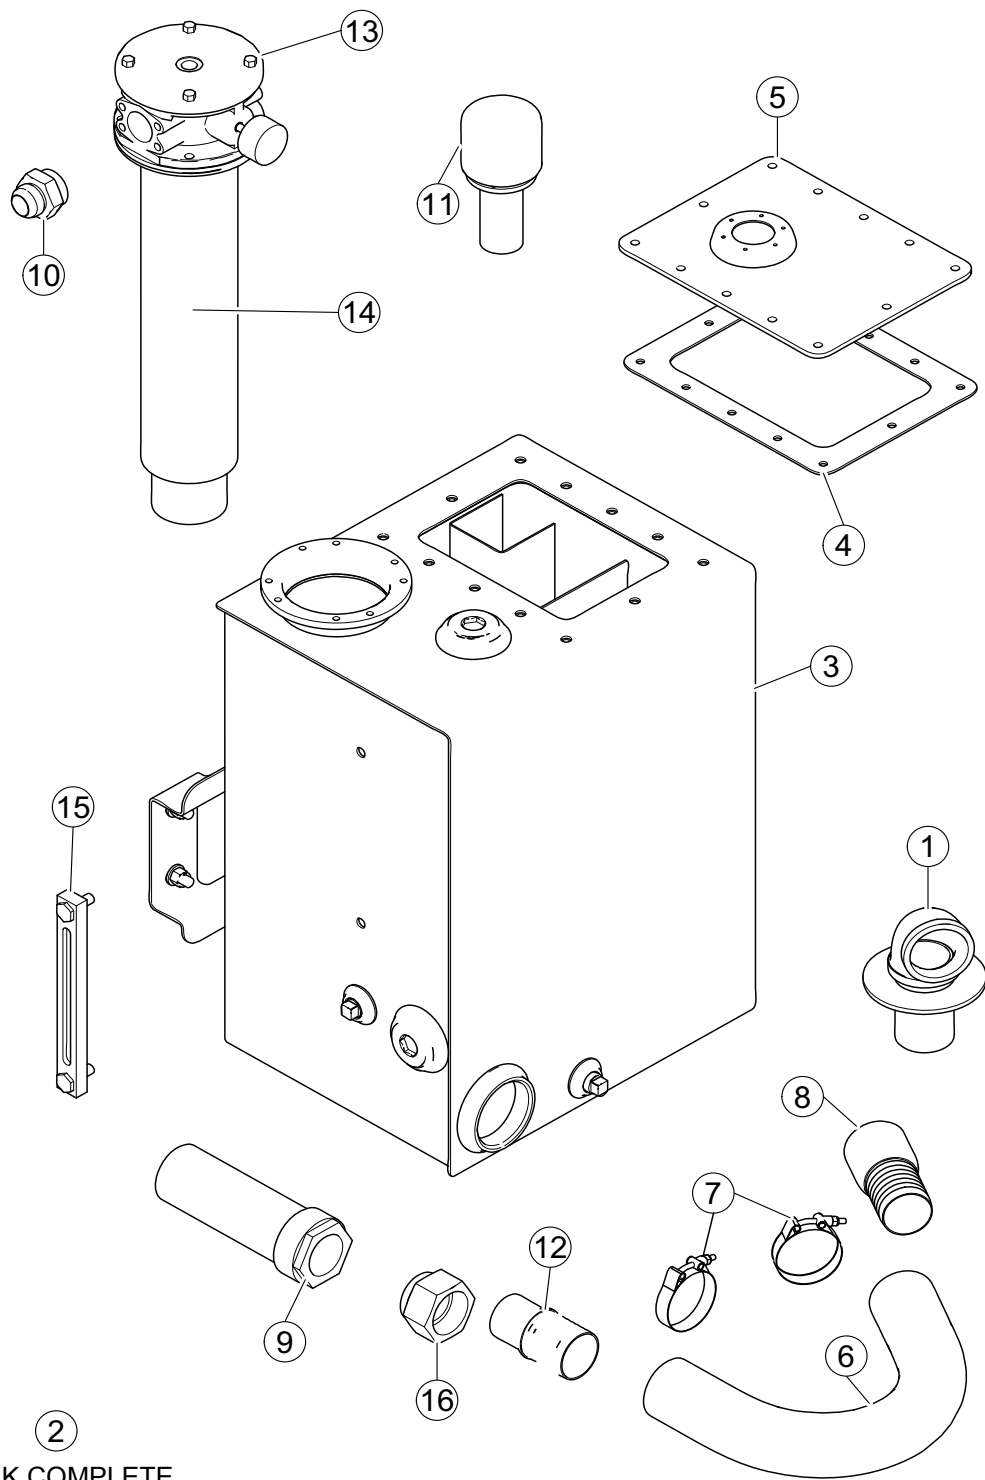


HYDRAULIC TANK

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	194880	ADAPTOR, SUCTION	1
2	194911	TANK, HYDRAULIC COMPLETE	1
3	194912	WELDMENT, TANK	1
4	194902	GASKET, COVER	1
5	194884	WELDMENT, COVER	1
6	51138	HOSE, SUCTION	1
7	HYC00120	CLAMP, HOSE 2.5 "	2
8	HYF14050	ADAPTOR, HOSE TO NPT	1
9	HYF15580	STRAINER	1
10	HYF09657	ADAPTOR STRT TO JIC	1
11	HYB00715	CAP, FILTER	1
12	HYF14010	ADAPTOR, HOSE TO NPT	1
13	HYF20013-01	ASSEMBLY, FILTER	1
14	HYF20034	ELEMENT, FILTER	1
15	HYJ00155	GAUGE, SIGHT	1
16	HYF09666	ADAPTOR	1
REF 864014, 859698			

SECTION 4

BODY HYDRAULICS


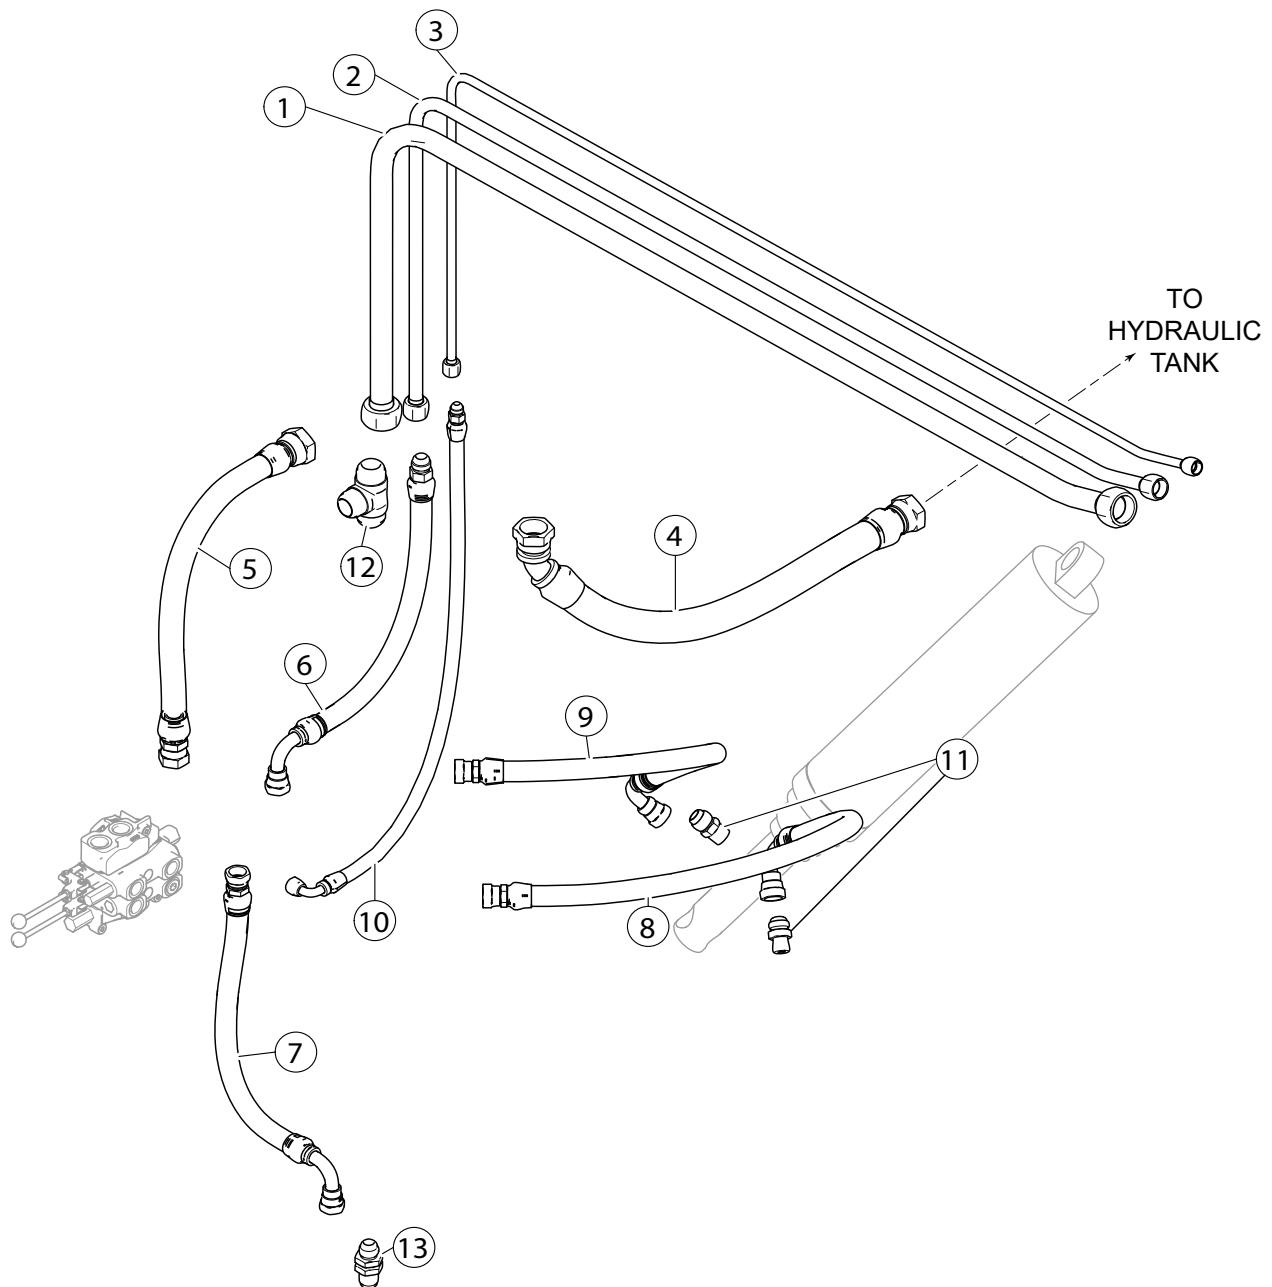


BODY HYDRAULICS

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	194918	1.25" O.D. TOP BODY TUBE 8YD	1
	197576	1.25" O.D. TOP BODY TUBE 10.5 YD	1
	194855	1.25" O.D. TOP BODY TUBE 13 YD	1
2	194919	0.75" O.D. TOP BODY TUBE 8 YD	1
	197577	0.75" O.D. TOP BODY TUBE 10.5 YD	1
	194856	0.75" O.D. TOP BODY TUBE 13 YD	1
3	194920	0.50" O.D. TOP BODY TUBE 8 YD	1
	197578	0.50" O.D. TOP BODY TUBE 10.5 YD	1
	194857	0.50" O.D. TOP BODY TUBE 13 YD	1
4	194940	1.25" I.D. HOSE, RETURN TO TANK	1
5	194941	1.00" I.D. HOSE, RETURN VALVE 8/10.5 YD	1
	197548	1.00" I.D. HOSE, RETURN VALVE 13 YD	1
6	194942	0.75" I.D. HOSE, VALVE TO TAIL GATE 8 YD	1
	197525	0.75" I.D. HOSE, VALVE TO TAIL GATE 10.5 YD	1
	197549	0.75" I.D. HOSE, VALVE TO TAIL GATE 13 YD	1
7	194943	0.75" I.D. HOSE, VALVE TO BULK HEAD	1
8	194944	0.75" I.D. HOSE, EJECT CYLINDER 8 YD	1
	197522	0.75" I.D. HOSE, EJECT CYLINDER 10.5 YD	1
	174195	0.75" I.D. HOSE, EJECT CYLINDER 13 YD	1
9	194945	0.75" I.D. HOSE, EJECT CYLINDER 8 YD	1
	197524	0.75" I.D. HOSE, EJECT CYLINDER 10.5 YD	1
	194955	0.75" I.D. HOSE, EJECT CYLINDER 13 YD	1
10	195039	0.50" I.D. HOSE, TAILGATE LIFT 8/10.5 YD	1
	12199	0.50" I.D. HOSE, TAILGATE LIFT 13 YD	1
11	HYF05115	ADAPTOR, 12 STRT TO 12 JIC 8YD	2
	HYF01990	ADAPTOR, 12 STRT TO 12 JIC 10.5/13 YD	1
	HYF02000	ADAPTOR, 12 STRT TO 12 JIC 10.5/13YD	1
12	HYF06280	ADAPTOR, TEE	1
13	HYF06600	ADAPTOR, 12 JIC	1
	REF	864045, 864892, 864910	

SECTION 4

PACKER CARRIER HYDRAULICS

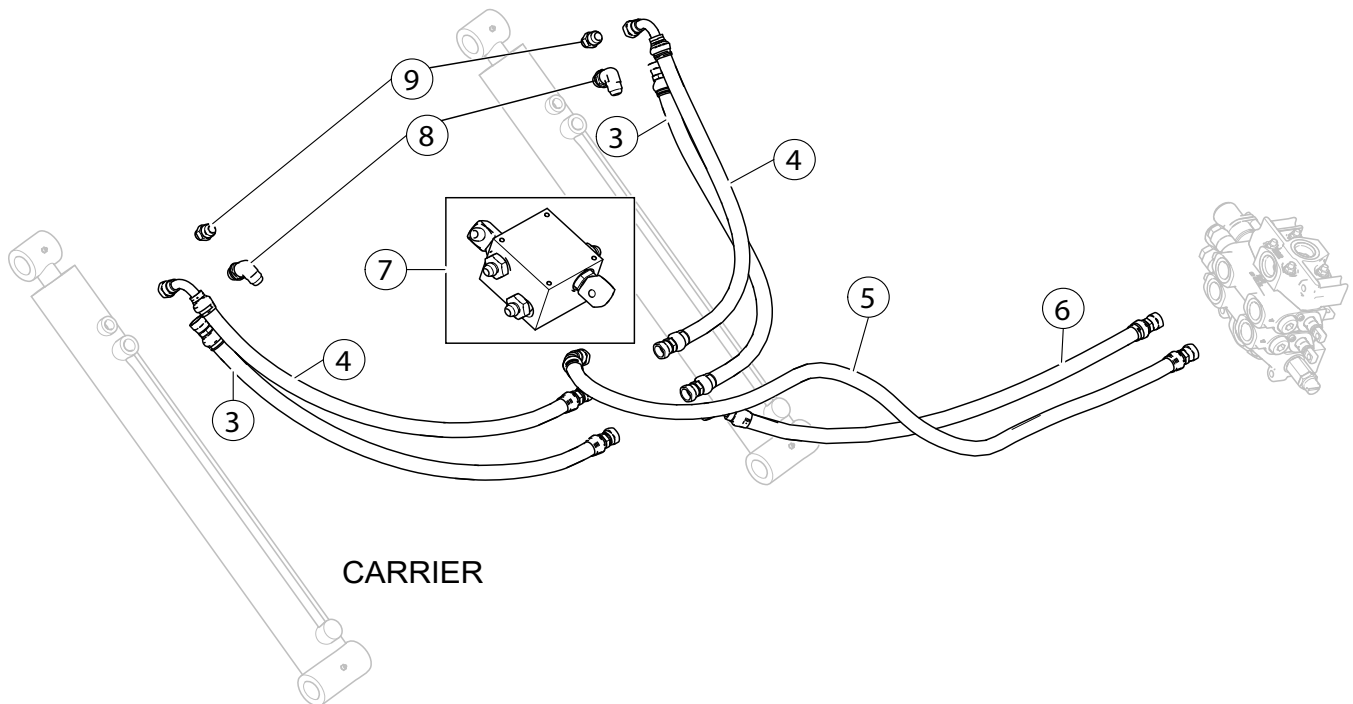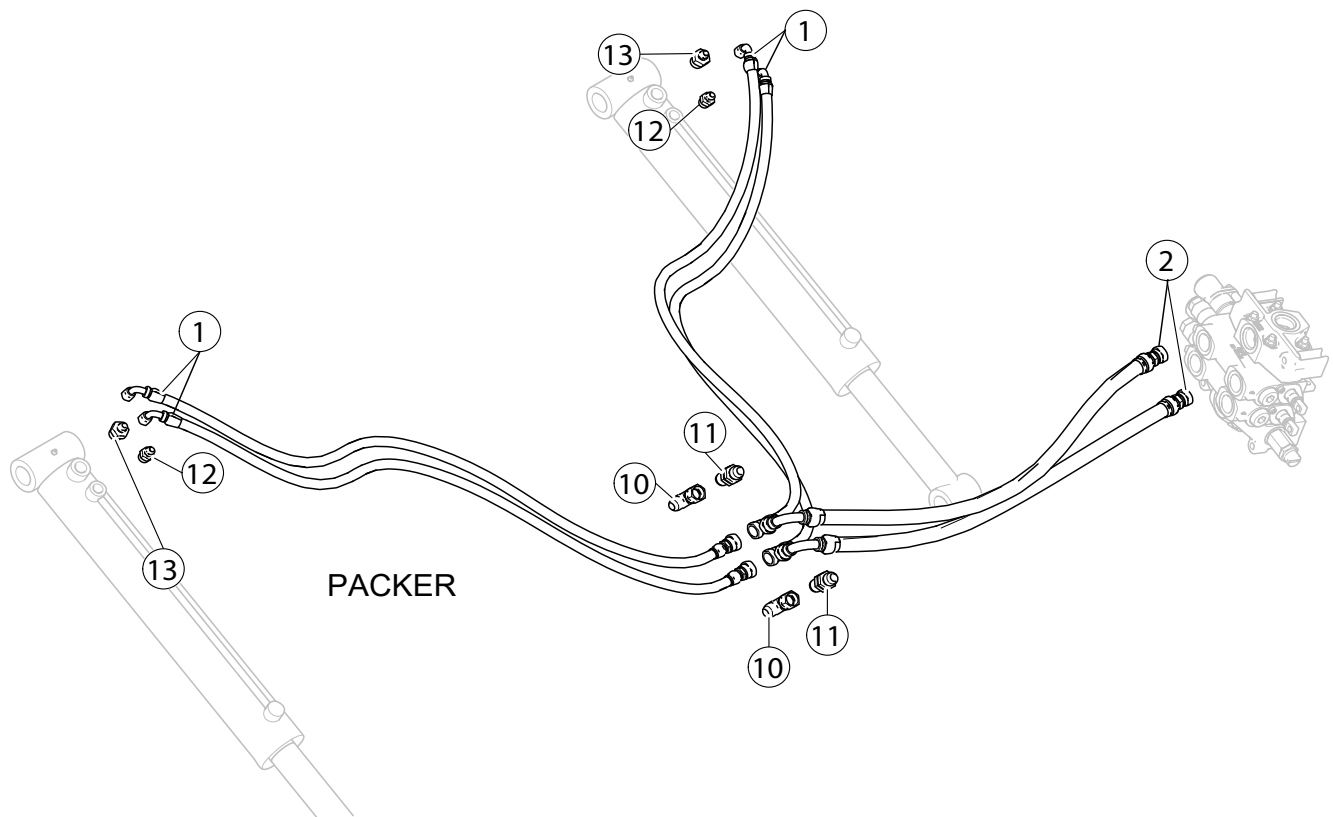


PACKER CARRIER HYDRAULICS

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	194401	HOSE, 0.75" ID PACKER 8 - 10.5 YD	4
	197589	HOSE, 0.75" ID PACKER 13 - 17 YD	4
2	194405	HOSE, 0.75" ID PACKER 8 - 10.5 YD	2
	197590	HOSE, 0.75" ID PACKER 13 - 17 YD	2
3	194402	HOSE, 0.75" ID CARRIER 8 - 10.5 YD	2
	197587	HOSE, 0.75" ID CARRIER 13 - 17 YD	2
4	194956	HOSE, 0.75" ID CARRIER 8 - 10.5 YD	2
	197588	HOSE, 0.75" ID CARRIER 13 - 17 YD	2
5	194404	HOSE, 0.75" ID CARRIER 8, 10.5, 13, 17 YD	1
6	197546	HOSE, 0.75" ID CARRIER 8 - 10.5 YD	1
	197591	HOSE, 0.75" ID CARRIER 13 - 17 YD	1
7	194399	ASSEMBLY, CARRIER MANIFOLD	1
8	HYF07500	ELBOW, 90	2
9	HYF05112	ADAPTOR, STRT	2
10	HYF05850	TEE	2
11	HYF06600	ADAPTOR, STRT, BULKHEAD	2
12	HYF04900	ADAPTOR, STRT	2
13	HYF04960	ADAPTOR, STRT	2
	REF	864827, 864917	

SECTION 4

TAILGATE TOP & LIFT HYDRAULICS 8-10.5 yd

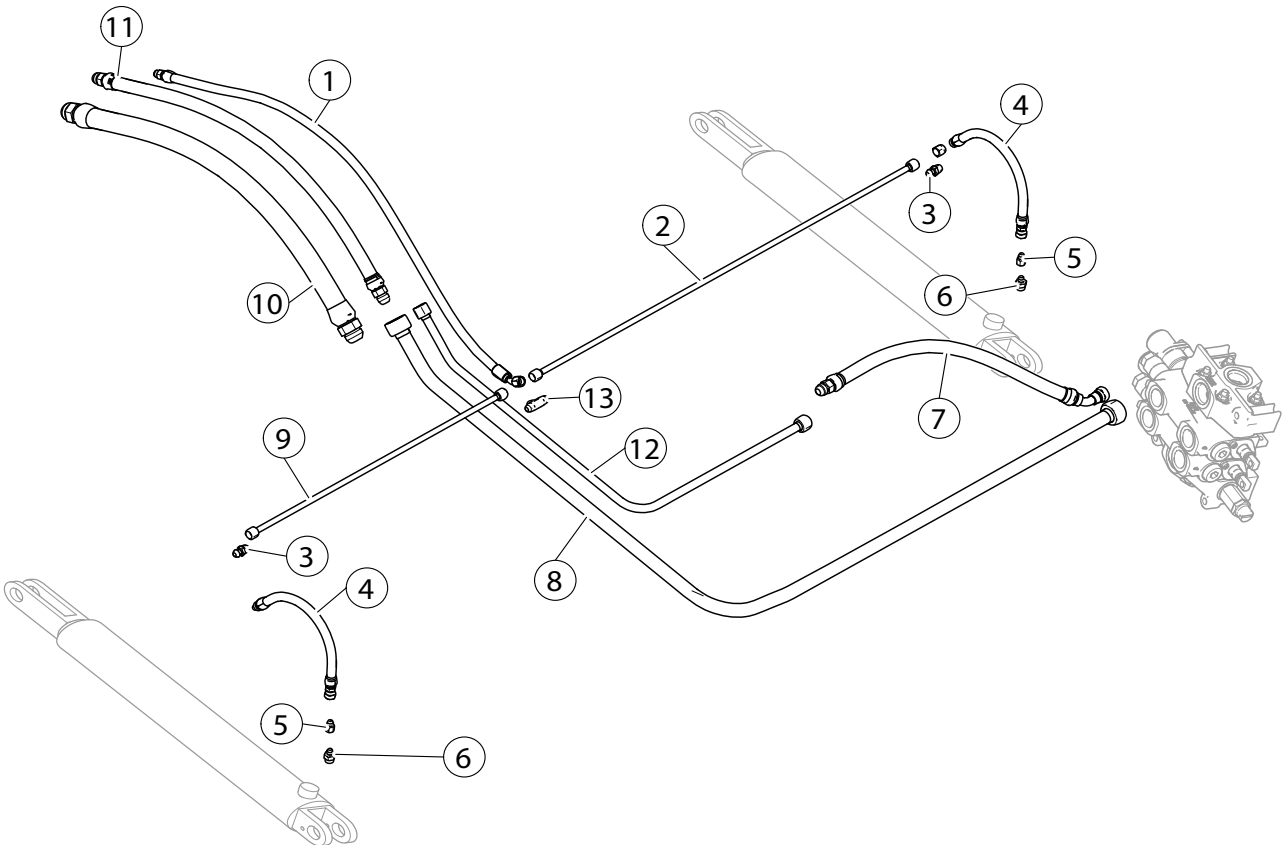


TAILGATE TOP & LIFT HYDRAULICS 8-10.5 YD

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	194959	HOSE, 0.50" I.D. T.G. LIFT	1
2	194852	TUBE, 0.50' O.D. T.G. LIFT	1
3	HYF05300	ADAPTOR, 08 JIC TO 08 JIC	2
4	194960	HOSE, 0.50" I.D. T.G. LIFT	2
5	HYF10026	RESTRICTOR	2
6	HYF04875	ADAPTOR, 08 STRT TO 06 JIC	2
7	194998	HOSE, 0.75" I.D. SUPPLY	1
8	194997	TUBE, 1.25" O.D. RETURN	1
9	194853	TUBE, 0.50' O.D. T.G. LIFT	1
10	194957	HOSE, 1.25" I.D. RETURN	1
11	194958	HOSE, 0.75" I.D. SUPPLY	1
12	194908	TUBE, 0.75" O.D. SUPPLY	1
13	HYF06100	TEE, 08 JIC	1
	REF	864052	

SECTION 4

TAILGATE TOP & LIFT HYDS. WITH TIPPER 8-10.5 yd

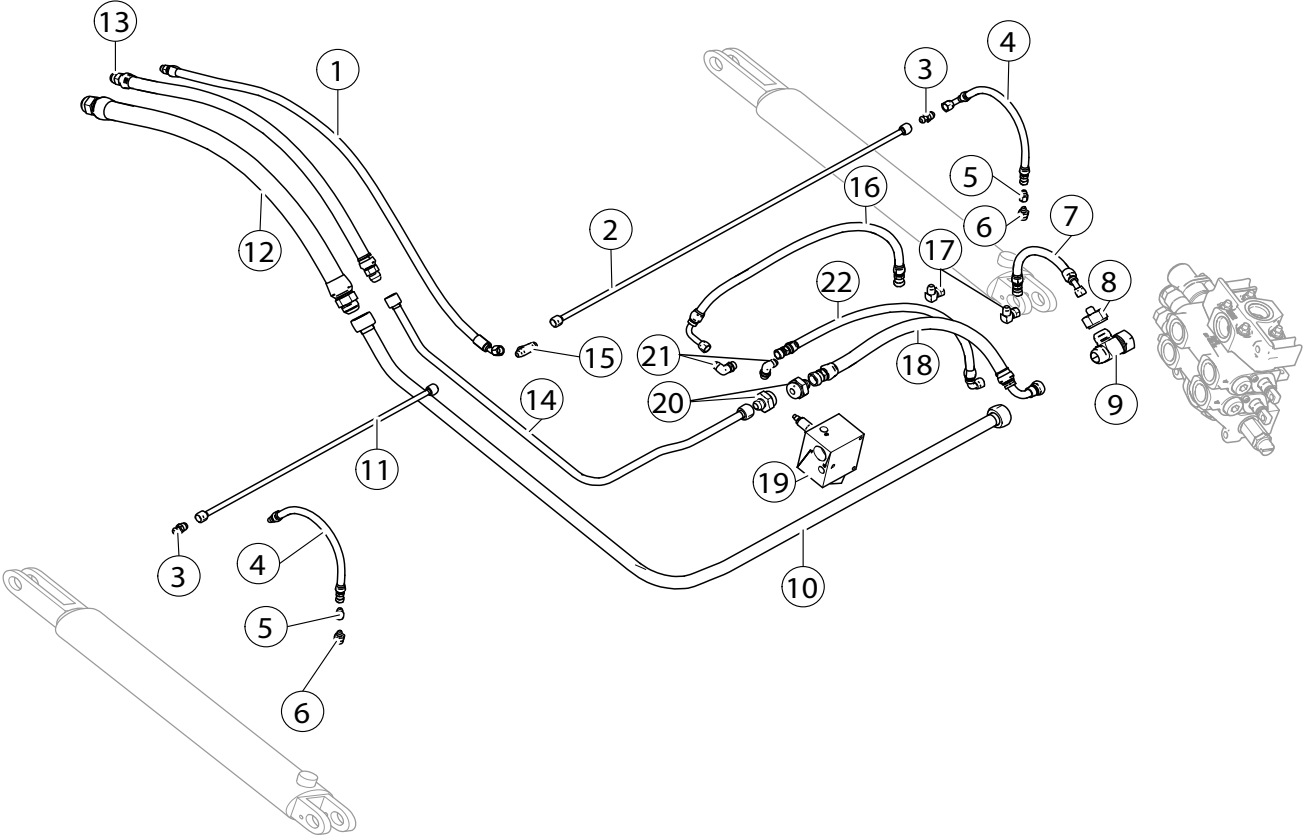


TAILGATE TOP & LIFT WITH TIPPER HYDS 8-10.5 YD

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	194959	HOSE, 0.50" I.D. T.G. LIFT	1
2	194852	TUBE, 0.50' O.D. T.G. LIFT	1
3	HYF05300	ADAPTOR, 08 JIC TO 08 JIC	2
4	194960	HOSE, 0.50" I.D. T.G. LIFT	2
5	HYF10026	RESTRICTOR	2
6	HYF04875	ADAPTOR, 08 STRT TO 06 JIC	2
7	194962	HOE, 0.50" I.D. TIPPER RETURN	1
8	HYF02157	REDUCER	1
9	HYF06275	TEE	1
10	194907	TUBE, 1.25" O.D. RETURN	1
11	194853	TUBE, 0.50" O.D. T.G. LIFT	1
12	194957	HOSE, 1.25" I.D. RETURN	1
13	194958	HOSE, 0.75" I.D. SUPPLY	1
14	197545	TUBE, 0.75" O.D. SUPPLY	1
15	HYF06100	TEE	1
16	194963	HOSE, 0.50" I.D. TIPPER	1
17	HYF08000	ELBOW, 90	2
18	194961	HOSE, 0.75 I.D. SUPPLY	1
19	HYV02560-01	VALVE, SINGLE TIPPER	1
20	HYF08545	REDUCER	1
21	HYF05125	ELBOW, 90	2
22	177005	HOSE, 0.50" I.D. TIPPER	1
	REF	864885	

SECTION 4

TAILGATE TOP & LIFT HYDS WITH TIPPER 13 YD

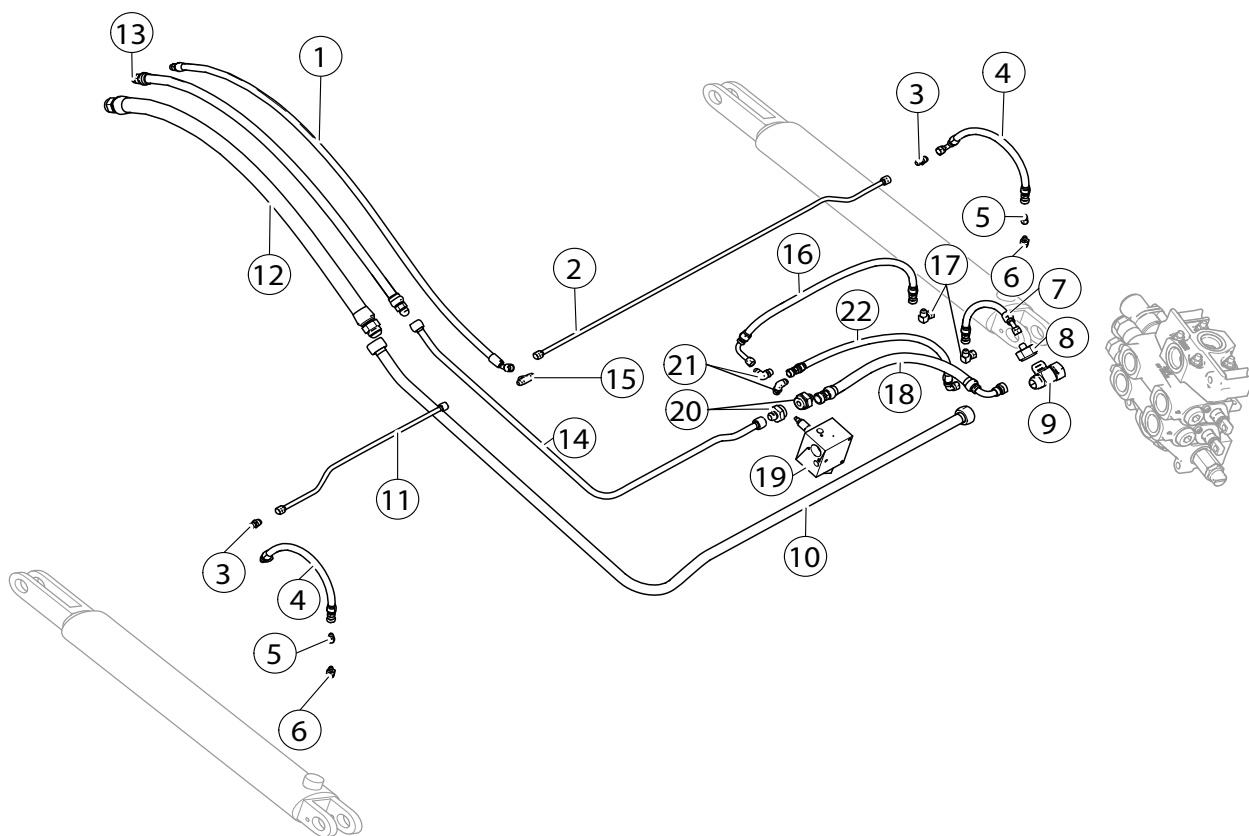


TAILGATE TOP & LIFT WITH TIPPER HYDS. 13 YD

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	197595	HOSE, 0.50" I.D. T.G. LIFT	1
2	197526	TUBE, 0.50' O.D. T.G. LIFT	1
3	HYF05300	ADAPTOR, 08 JIC TO 08 JIC	2
4	170303	HOSE, 0.50" I.D. T.G. LIFT	2
5	HYF10026	RESTRICTOR	2
6	HYF04875	ADAPTOR, 08 STRT TO 06 JIC	2
7	194962	HOE, 0.50" I.D. TIPPER RETURN	1
8	HYF02157	REDUCER	1
9	HYF06275	TEE	1
10	197574	TUBE, 1.25" O.D. RETURN	1
11	197579	TUBE, 0.50" O.D. T.G. LIFT	1
12	197585	HOSE, 1.25" I.D. RETURN	1
13	197586	HOSE, 0.75" I.D. SUPPLY	1
14	197575	TUBE, 0.75" O.D. SUPPLY	1
15	HYF06100	TEE	1
16	197584	HOSE, 0.50" I.D. TIPPER	1
17	HYF08000	ELBOW, 90	2
18	197583	HOSE, 0.75 I.D. SUPPLY	1
19	HYV02560-01	VALVE, SINGLE TIPPER	1
20	HYF08545	REDUCER	1
21	HYF05125	ELBOW, 90	2
22	197582	HOSE, 0.50" I.D. TIPPER	1
	REF	864915	


SECTION 5

FRONT CONTROL VALVE

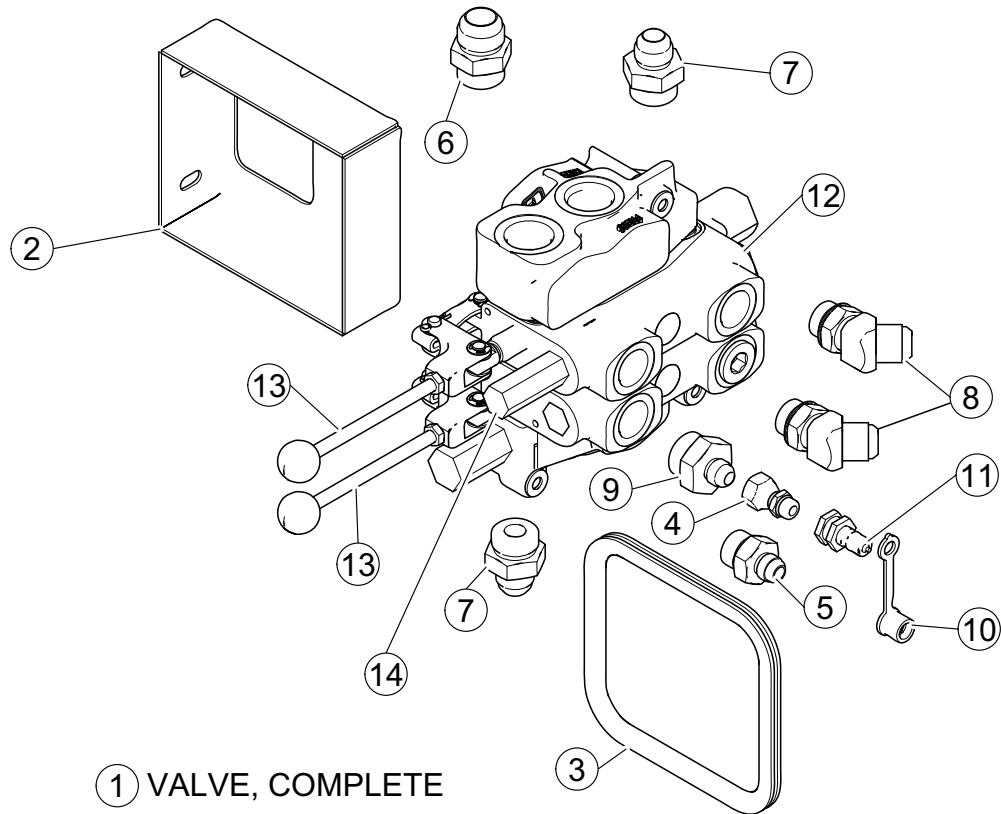

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	194892	ASSEMBLY, VALVE	1
2	197558	PROTECTOR, HANDLE 8 - 10.5 YD	1
	194474	PROTECTOR, HANDLE 13 - 17 YD	1
3	QUC02000	PROTECTOR, RUBBER	20"
4	HYF04925	ADAPTOR, 06 STRT TO 08 JIC	1
5	HYF04960	ADAPTOR, 12 STRT TO 08JIC	1
6	HYF05000	ADAPTOR, 16 STRT TO 16JIC	1
7	HYF05118	ADAPTOR, 16 STRT TO 16 JIC	2
8	HYF05122	ELBOW, 45 16 STRT TO 08JIC	2
9	HYF05185	ADAPTOR, 16 STRT TO 08 JIC	1
10	HYF10050	CAP, RUBBER	1
11	HYF10214	COUPLER	1
12	HYV02877	VALVE, HYDRAULIC	1
13	HYV02903	HANDLE	2
14	HYV02898	CARTRIDGE, RESISTANCE	1
	HYV02892	KIT, SPOOL SEAL (NOT SHOWN)	AR
	REF	864844, 864912	


MAIN CONTROL VALVE

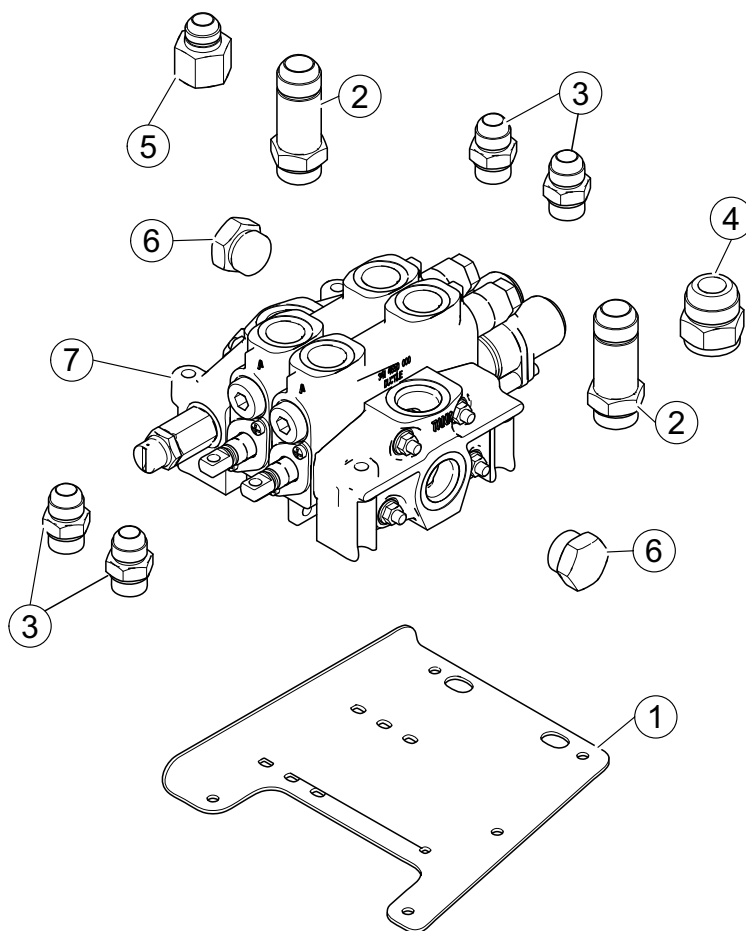

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	194888	BRACKET, VALVE	1
	194398	ASSEMBLY, DEFECTOR (NOT SHOWN)	1
2	HYF05001	ADAPTOR, STRT 16 SAE X 16 JIC	2
3	HYF05115	ADAPTOR, STRT 12 SAE X 12 JIC	4
4	HYF09650	ADAPTOR, STRT 20 JIC X 16 JIC	1
5	HYF10025	ADAPTOR, STRT 16 JIC X 12 JIC	1
6	HYF11050	PLUG, 16SAE	2
7	HYV02876	VALVE, MAIN CONTROL 2 SECTION	1
	REF	864037, 864914, 194886	


SECTION 5

CARRIER MANIFOLD

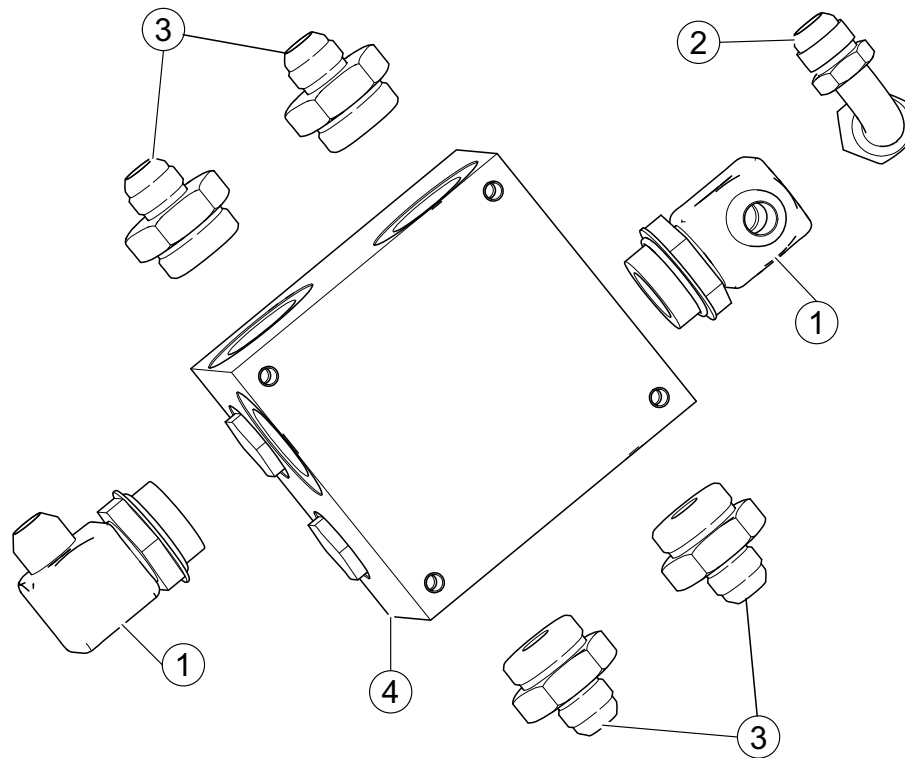

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	HYF07520	ELBOW, 90 12 STRT TO 16 JIC	2
2	HYF08110	ELBOW, 90 12 JIC TO 12 JIC	1
3	HYF08545	ADAPTOR, 20 STRT TO 12 JIC	4
4	HYV13005	VALVE, REGEN 3 WAY	1
	REF	194895, 194399	


VALVE, DIVERter SINGLE TIPPER

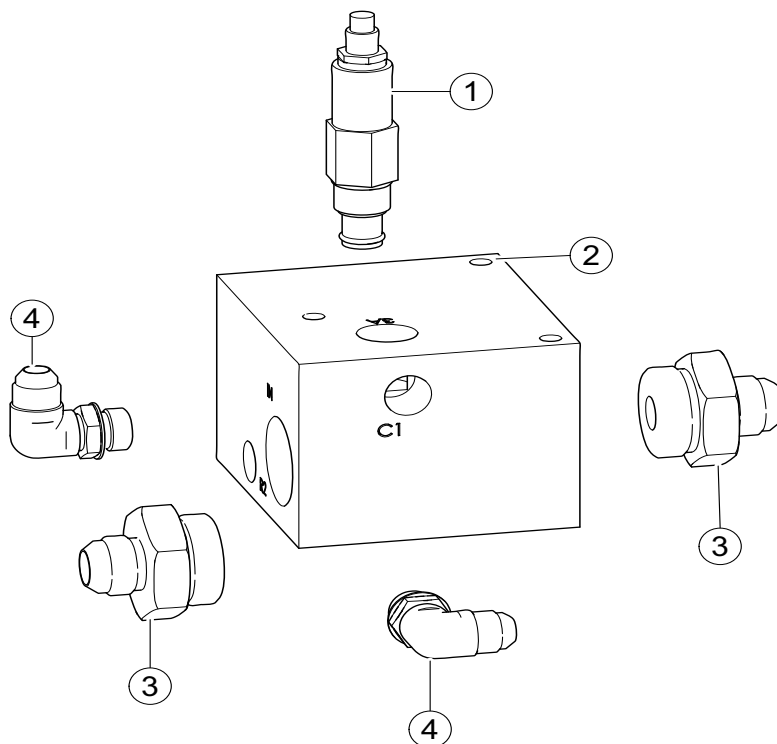

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	HYV02552-02	CARTRIDGE,	1
2	HYV02560-01	VALVE, DIVERter (WITH CARTRIDGE)	1
3	HYF08545	REDUCER	2
4	HYF05125	ELBOW, 90	2
	REF	197543	


SECTION 5

TIPPER HAND VALVE

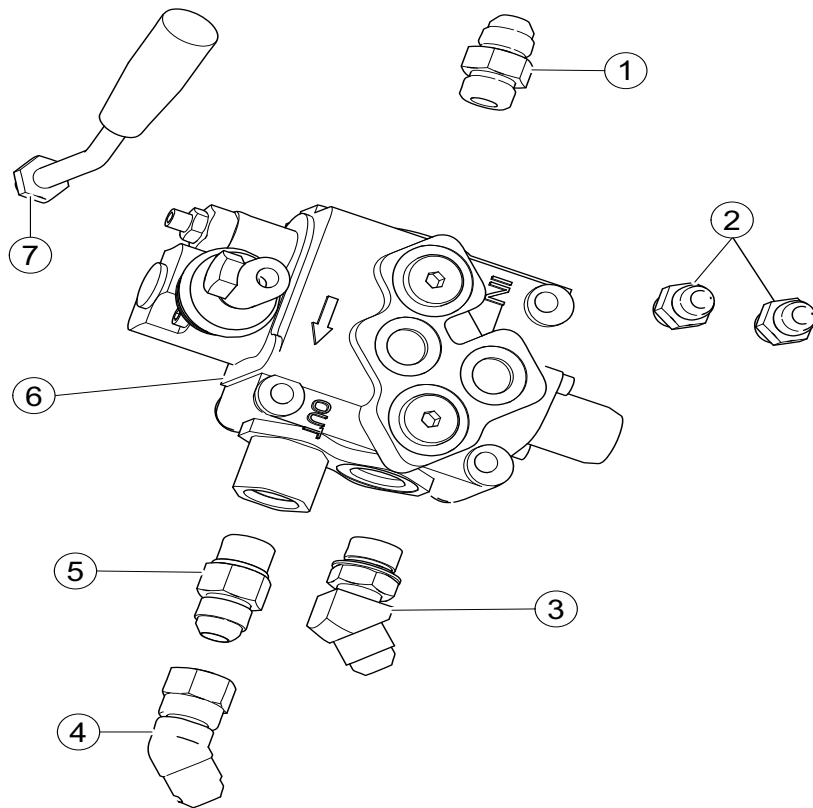


REF. NO.	PART NO.	DESCRIPTION	QTY.
1	HYF05110	ADAPTOR, STRT	1
2	HYF04800	ADAPTOR, STRT	2
3	HYF05120	ELBOW, 45	1
4	HYF02925	ELBOW, 45	1
5	HYF00658	ADAPTOR, STRT	1
6	HYV03510	VALVE, TIPPER HAND	1
7	36763	HANDLE, VALVE	1
	REF	194851	

MARRIED PUMP

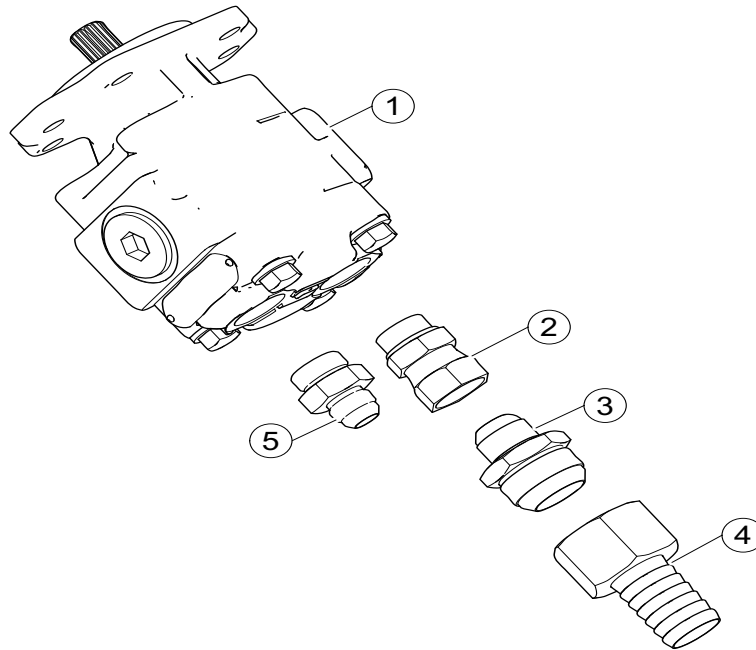


REF. NO.	PART NO.	DESCRIPTION	QTY.
1	HYP00114	PUMP, MARRIED	1
2	HYF05050	ADAPTOR, STRT 16 SAE TO 16 JIC	1
3	HYF05401	ADAPTOR, STRT 16 JIC TO 24 JIC	1
4	HYF05182	ADAPTOR, HOSE 24 JIC TO 1.5" HOSE	1
5	HYF05118	ADAPTOR, STRT 16 SAE TO 12 JIC	1
	REF	195853, 864888	

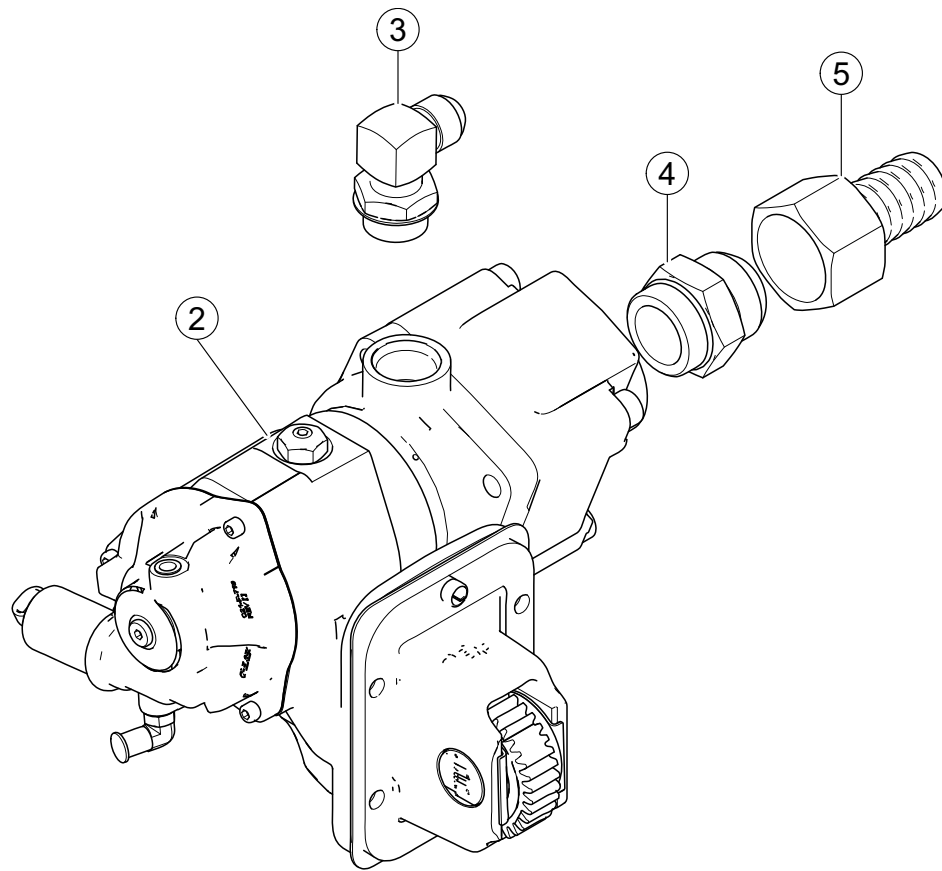SECTION 6**PUMP - PTO COMBO**

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	194653	ASSEMBLY, PUMP/PTO COMPLETE	1
2	HYC07223-C	PUMP/PTO	1
3	HYF05167	ELBOW, 90 SAE TO JIC	1
4	HYF09653	ADAPTOR, SAE TO JIC	1
5	HYF14074	ADAPTOR, JIC TO BARBED HOSE	1
	REF	822637	


EJECT CYLINDER & PINS

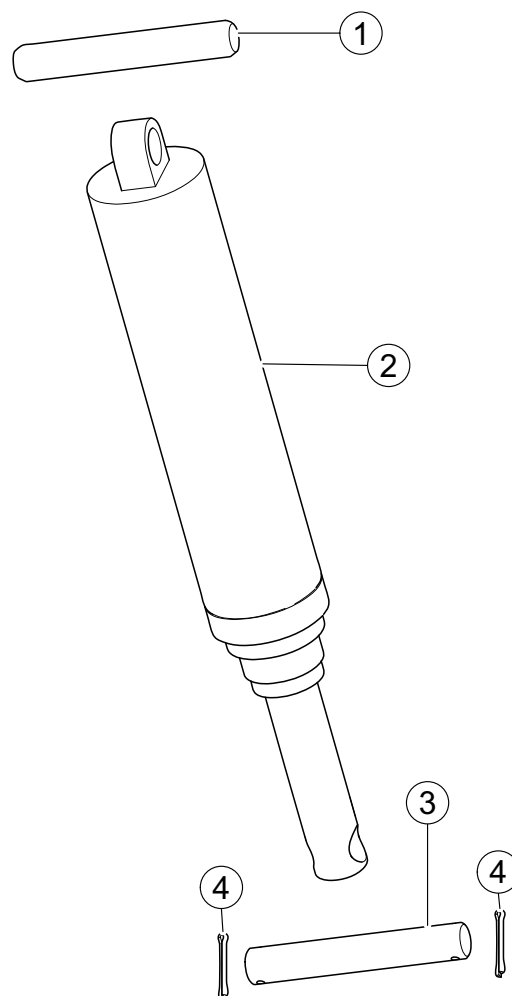

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	197569	PIN, EJECT CYLINDER PANEL	1
2	HYC01529	CYLINDER, EJECT 8 YD	1
	HYJ01529	SEAL KIT	AR
	HYC01530	CYLINDER, EJECT 10.5 - 13 YD	1
	HYJ01530	SEAL KIT	AR
3	197568	PIN, EJECT CYLINDER BULKHEAD	1
4	QUB03800	PIN, COTTER	2
	REF	837474, 863946	


SECTION 7

PACKER CYLINDERS & PINS

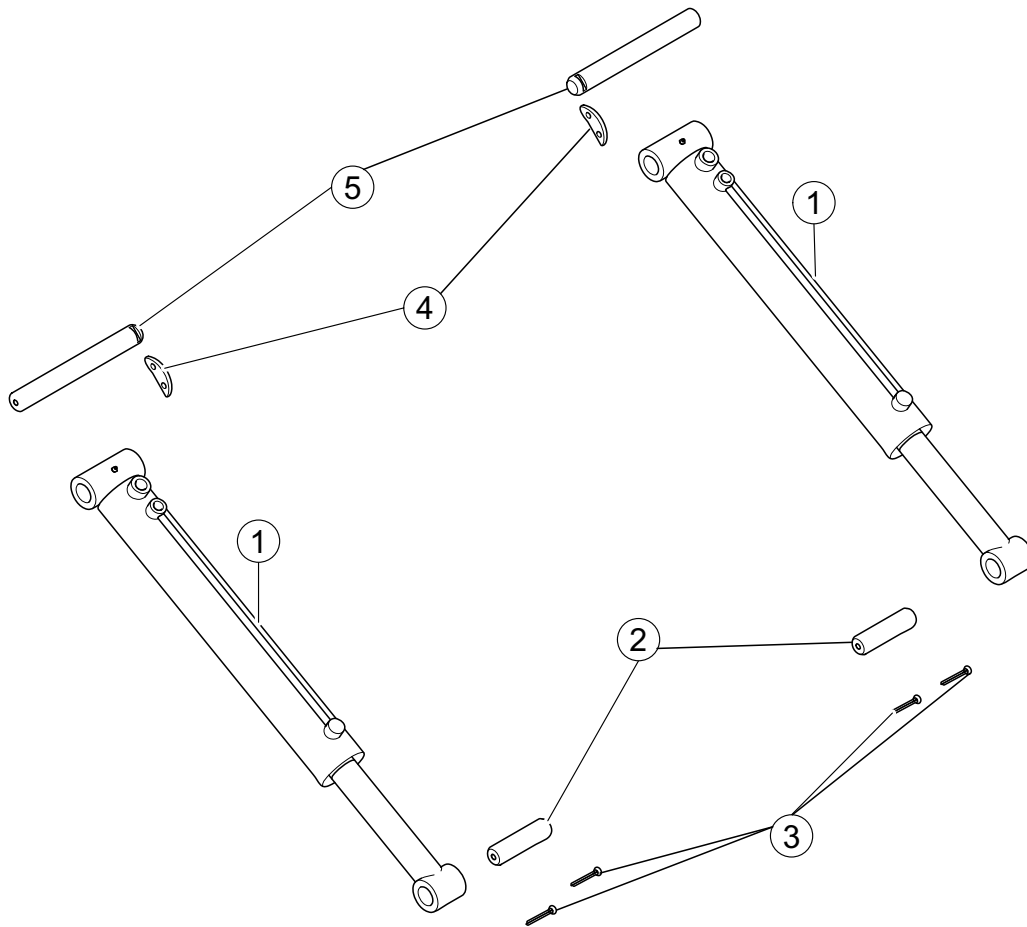


REF. NO.	PART NO.	DESCRIPTION	QTY.
1	HYC01619	CYLINDER, PACKER 8 - 10.5 YD	2
	HYJ01619	SEAL KIT (NOT SHOWN)	AR
	HYC01621	CYLINDER, PACKER 13 - 17 YD	2
	HYJ01621	SEAL KIT (NOT SHOWN)	AR
2	197560	PIN, ROD END	2
3	QUB03810	PIN, COTTER	4
4	197561	RETAINER, PIN	2
5	197559	PIN, CASE END	2
	REF	864904, 864921	

CARRIER CYLINDERS & PINS

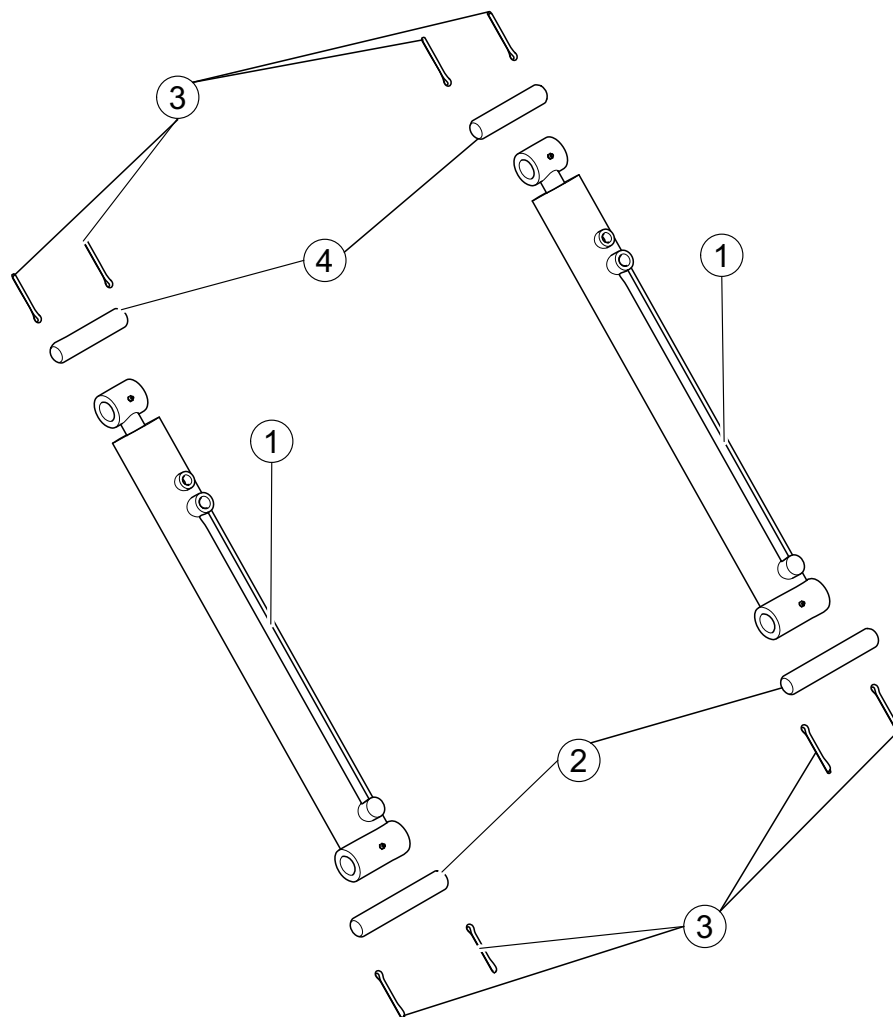


REF. NO.	PART NO.	DESCRIPTION	QTY.
1	HYC01620	CYLINDER, CARRIER 8 - 10.5 YD	2
	HYJ01620	SEAL KIT, (NOT SHOWN)	AR
	HYC01622	CYLINDER, CARRIER 13 - 17 YD	2
	HYJ01622	SEAL KIT, (NOT SHOWN)	AR
2	197562	PIN, CASE END	2
3	QUP03810	PIN, COTTER	8
4	197563	PIN, ROD END	2
	REF	864905, 864920	

SECTION 7**TAILGATE LIFT CYLINDERS & PINS**

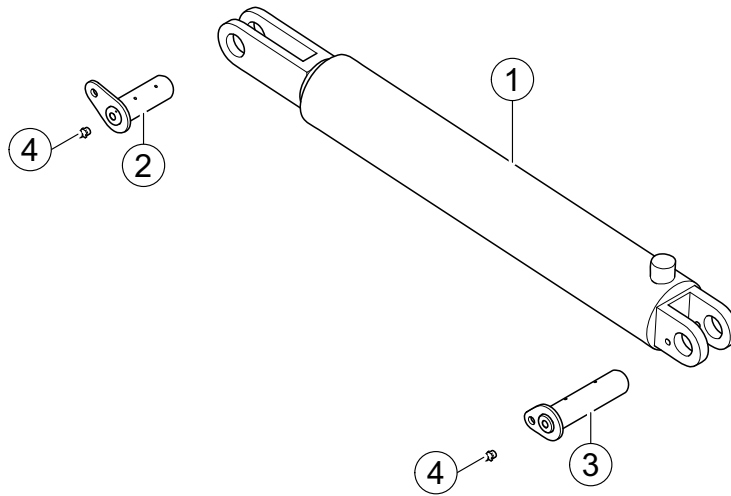

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	HYC01623	CYLINDER, TAILGATE LIFT 8 - 10.5 YD	2
	HYJ01623	SEAL KIT, (NOT SHOWN)	AR
	HYC01624	CYLINDER, TAILGATE LIFT 13 -17 YD	2
	HYJ01624	SEAL KIT, (NOT SHOWN)	AR
2	197570	PIN, T.G. LIFT CYLINDER BODY END	2
3	197564	PIN, T.G. LIFT CYLINDER TAILGATE END	2
4	QUG00200	ZERK, GREASE	4
	REF	859686, 864903	


MOUNTING HARDWARE 8 YD

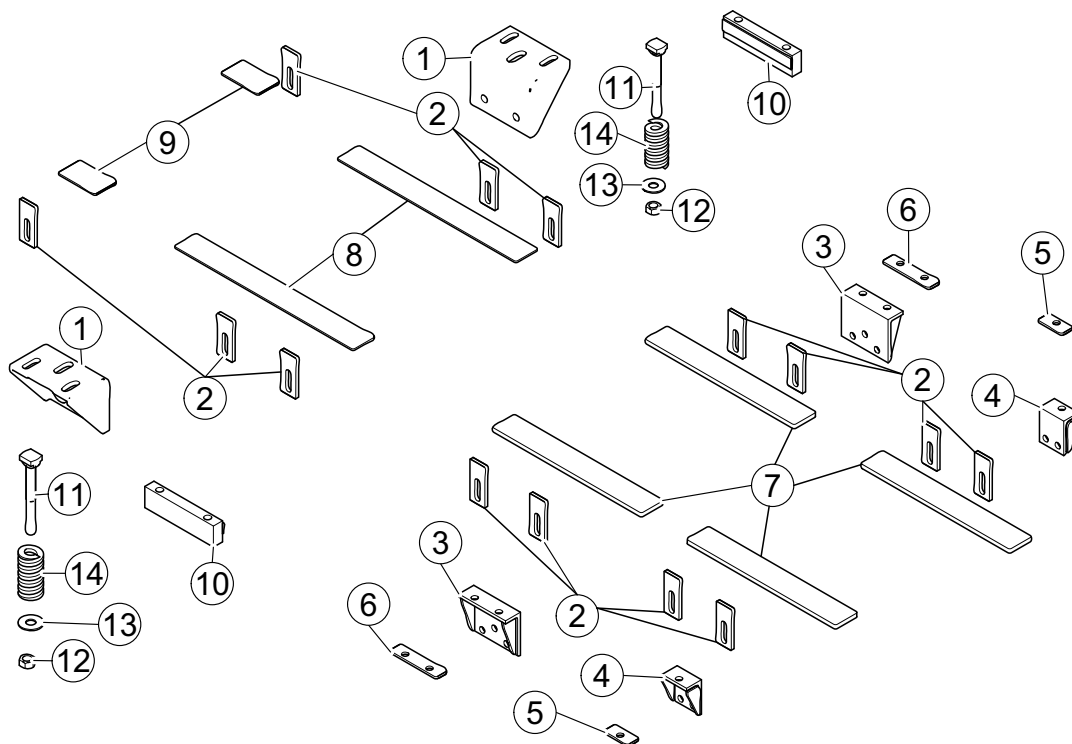

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	106027	SHOE, MOUNTING FRONT	2
2	120997	BRACKET, SILL	14
3	194640	SHOE, MOUNTING MIDDLE	2
4	194645	SHOE, MOUNTING REAR	2
5	194648	SPACER, REAR	2
6	194649	SPACER, MIDDLE	2
7	194650	SILL, REAR	4
8	194651	SILL, MIDDLE	2
9	194652	SILL, FRONT	2
10	100454	WELDMENT, LATERAL RESTRAINT	2
11	QUB53020	BOLT, T 0.75: X 7" GR8	2
12	QUE02045	NUT, LOCK 0.75"NC GR8	2
13	QUR02810	WASHER, FLAT GR8	2
14	QUR03360	SPRING, MOUNTING 2" X 0.25" X 3	2
	REF	822635, 822477	


SECTION 8

MOUNTING HARDWARE 10.5 & 13 YD

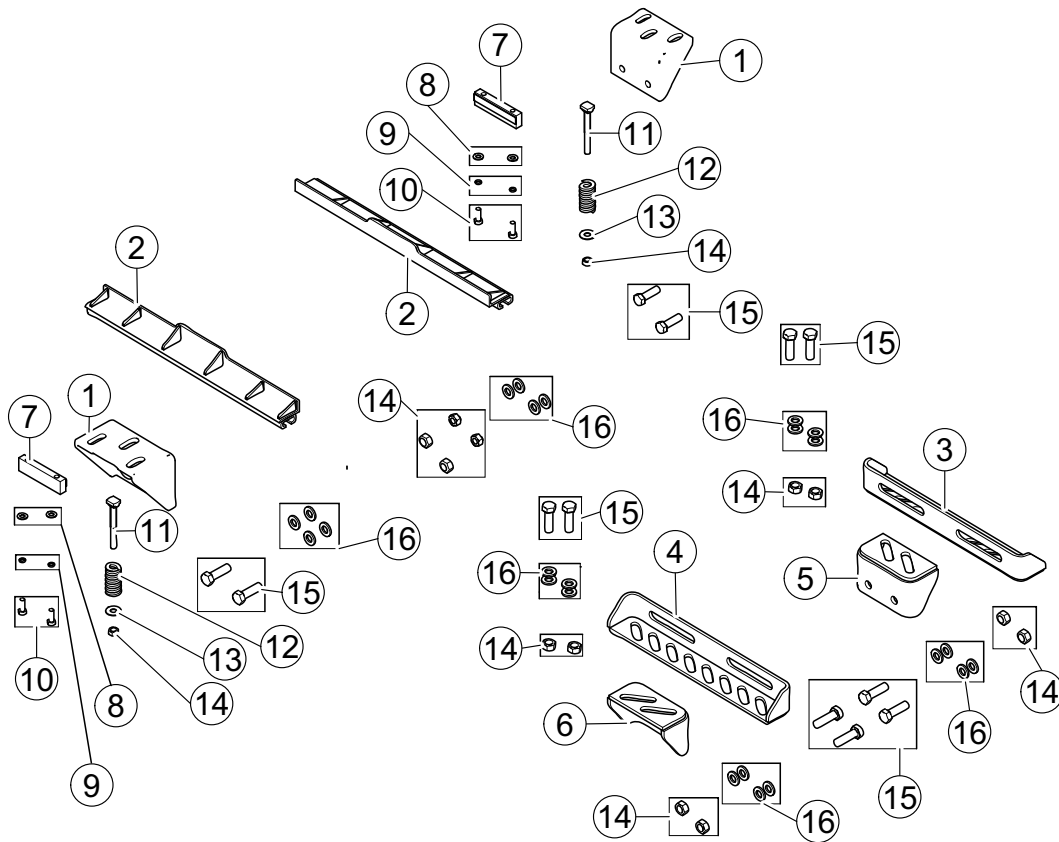

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	106027	SHOE, MOUNTING FRONT	2
2	194490	WELDMENT, RAIL	2
3	195410	WELDMENT, BODY REAR R.H.	1
4	197555	WELDMENT, BODY REAR L.H.	1
5	197554	SHOE, REAR R.H.	1
6	197556	SHOE, REAR L.H.	1
7	100454	WELDMENT, LATERAL RESTRAINT	2
8	QUR01965	WASHER, FLAT 0.625" HRD	4
9	QUR01410	WASHER, LOCK 0.625"	4
10	QUB05157	BOLT, 0.625"NC X 1.75" GR8	4
11	QUB53020	BOLT, T 0.75"NC X 7" GR8	2
12	QUR03360	SPRING, MOUNTING 2" X 0.25" X 3"	2
13	QUR02810	WASHER, FLAT 0.75"	2
14	QUE02045	NUT, LOCK 0.75"NC GR8	14
15	QUB08701	BOLT, 0.75"NC X 2.5" GR8	12
16	QUR02880	WASHER, FLAT 0.75" HRD	24
	REF	822477, 822635, 864891, 864894	


MISC. LIGHT/CAMERA BRACKETS

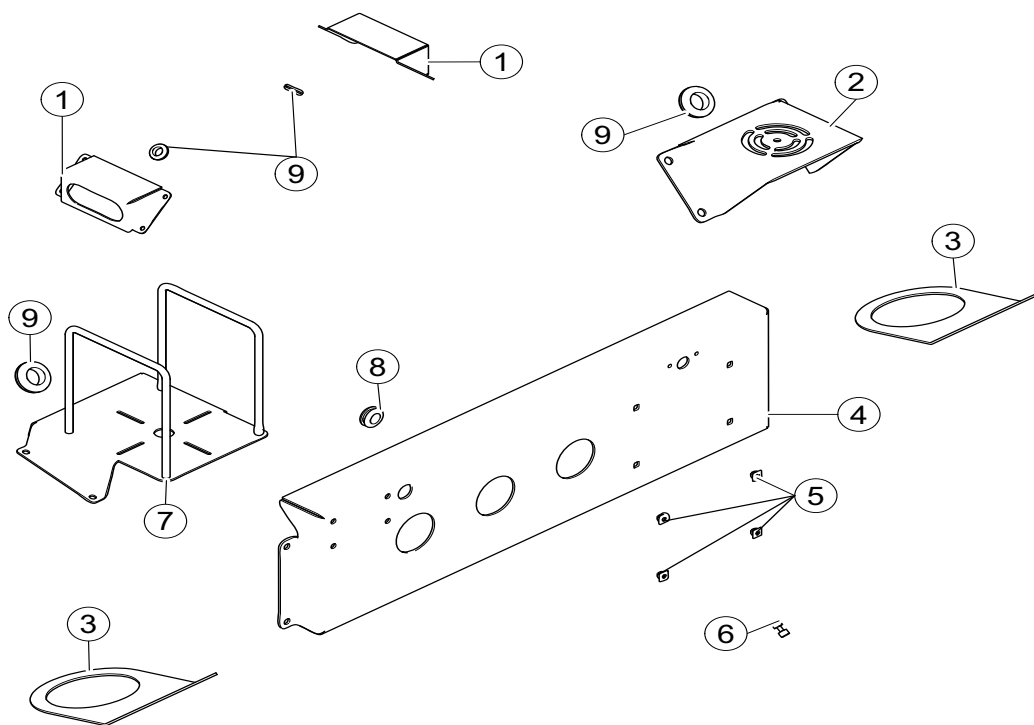

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	193221	BRACKET, MID BODY TURN LIGHT	2
2	197593	SUPPORT, CAMERA SHORT	1
	196775	SUPPORT, CAMERA TALL	1
3	197547	BRACKET, WORK LIGHT	AR
4	197594	BOX, MIDDLE TAILGATE LIGHTS	1
5	QUE02010	NUT, NYLON	4
6	87866	TAB, CABLE TIE	AR
7	196777	BRACKET, STROBE LIGHT	1
8	QUG01900	GROMMET, 1.063" X 0.25" X 0.75"	AR
9	QUG02200	GROMMET, 1.375" X 0.125" X 1.0"	AR
	REF	859687, 859688, 864889, 864924, 864926	

SECTION 8

CONTROL BOX

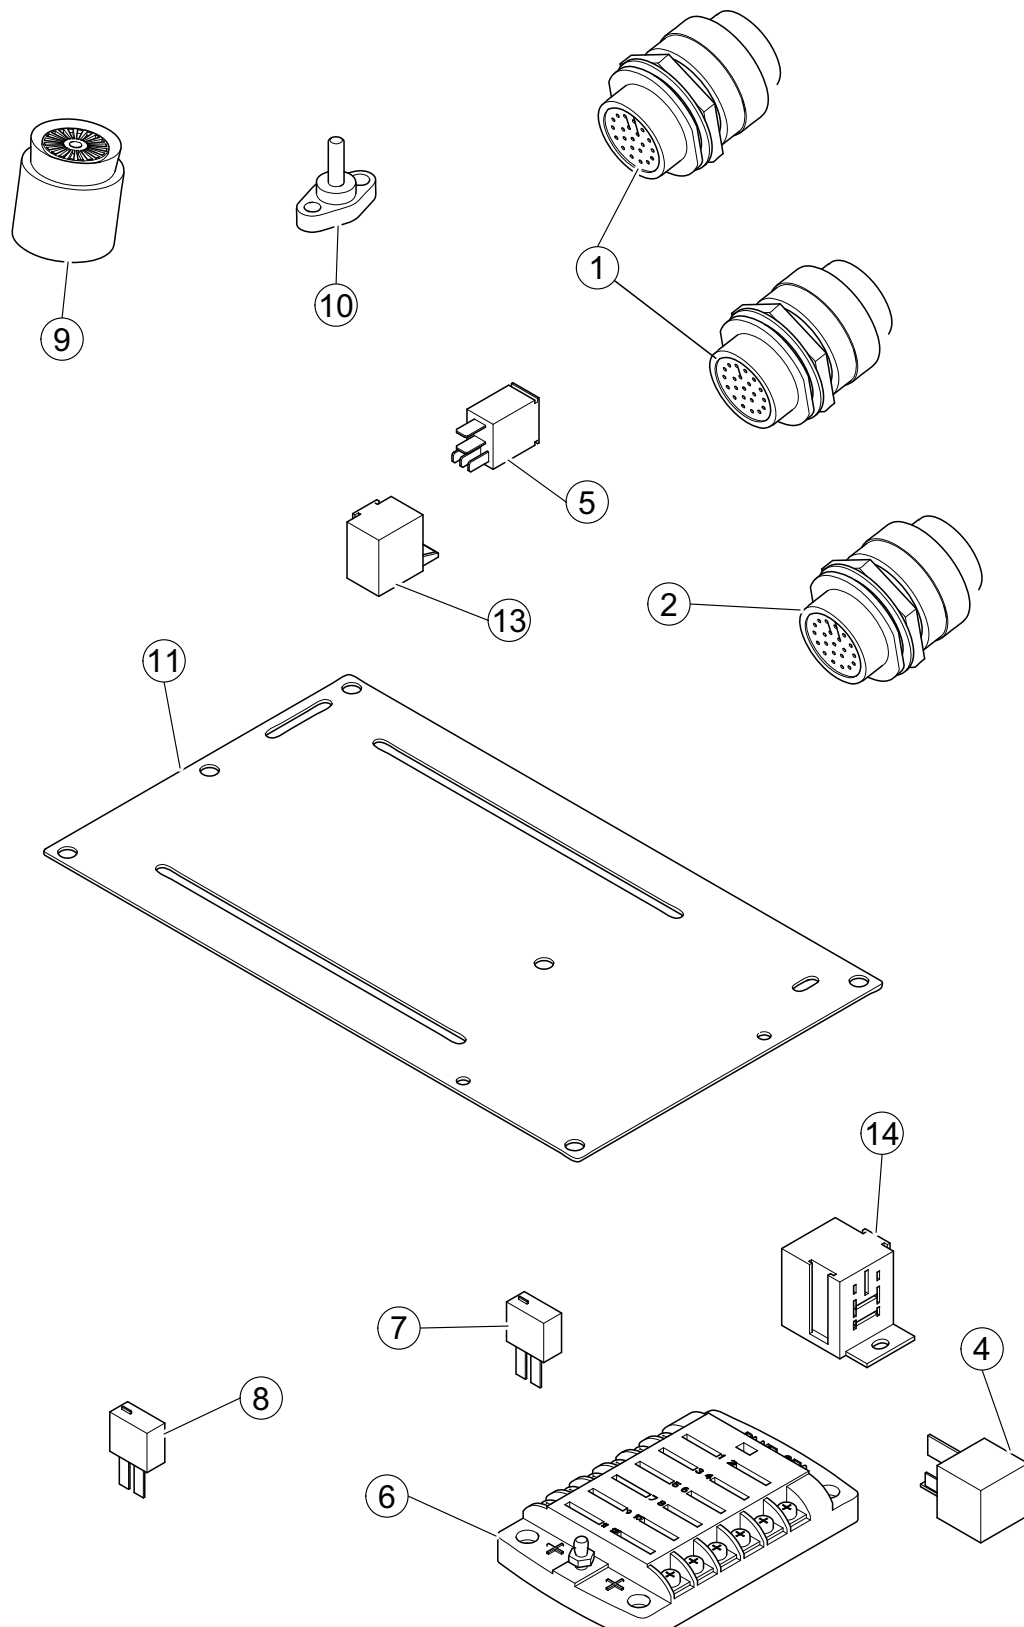

CONTROL BOX

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	ELC04502	CONNECTOR, FEMALE, 23 PIN	AR
	ELC05504	NUT, (NOT SHOWN)	AR
	ELC05506	WASHER, LOCK, (NOT SHOWN)	AR
2	ELC04507	CONNECTOR, FEMALE, 18 PIN	AR
	ELC05504	NUT, (NOT SHOWN)	AR
	ELC05506	WASHER, LOCK, (NOT SHOWN)	AR
3	175670	HARNESS, CONTROL BOX, (NOT SHOWN)	AR
4	ELR00830	RELAY, MAX	AR
5	ELR00775	RELAY, MINI	AR
6	ELS00461	BLOCK, FUSE	AR
7	ELD00405-01	FUSE, ATO 15 AMP	AR
8	ELD00260	FUSE, ATO 5 AMP	AR
9	ELR01005	BUZZER	AR
10	ELB00150	STUD, GROUND	AR
11	190932	PLATE, MOUNTING	AR
12	190931	BOX, COMPLETE (NOT SHOWN)	AR
13	ELR00780	BASE, RELAY MINI	AR
14	ELR00855	BASE, RELAY MAX	AR
		REF 167295	

SECTION 8


CHASSIS BODY & TAILGATE WIRING

Because of the numerous variations of chassis, body & tailgate wiring,
Please contact Labrie Enviroquip customer support with the following information

Please have available the following:

BODY MODEL & SERIAL NUMBER
CHASSIS MAKE & MODEL
ENGINE MAKE & MODEL
TRANSMISSION MAKE & MODEL


TIPPER MOUNTING

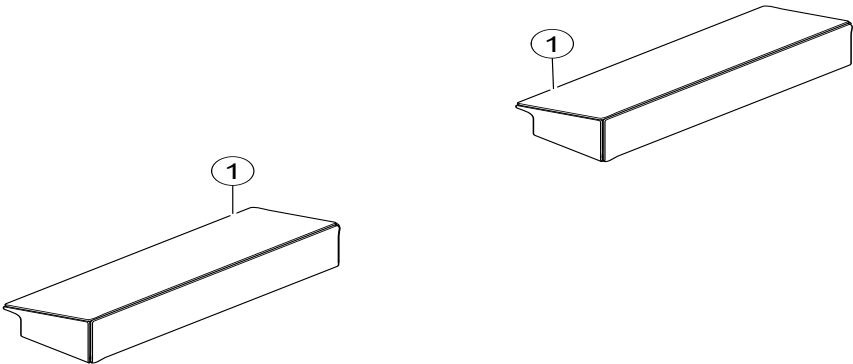

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	196806	LOAD EDGE, TIPPER	2
	REF	859710	

SECTION 9

TIPPER HYDRAULICS

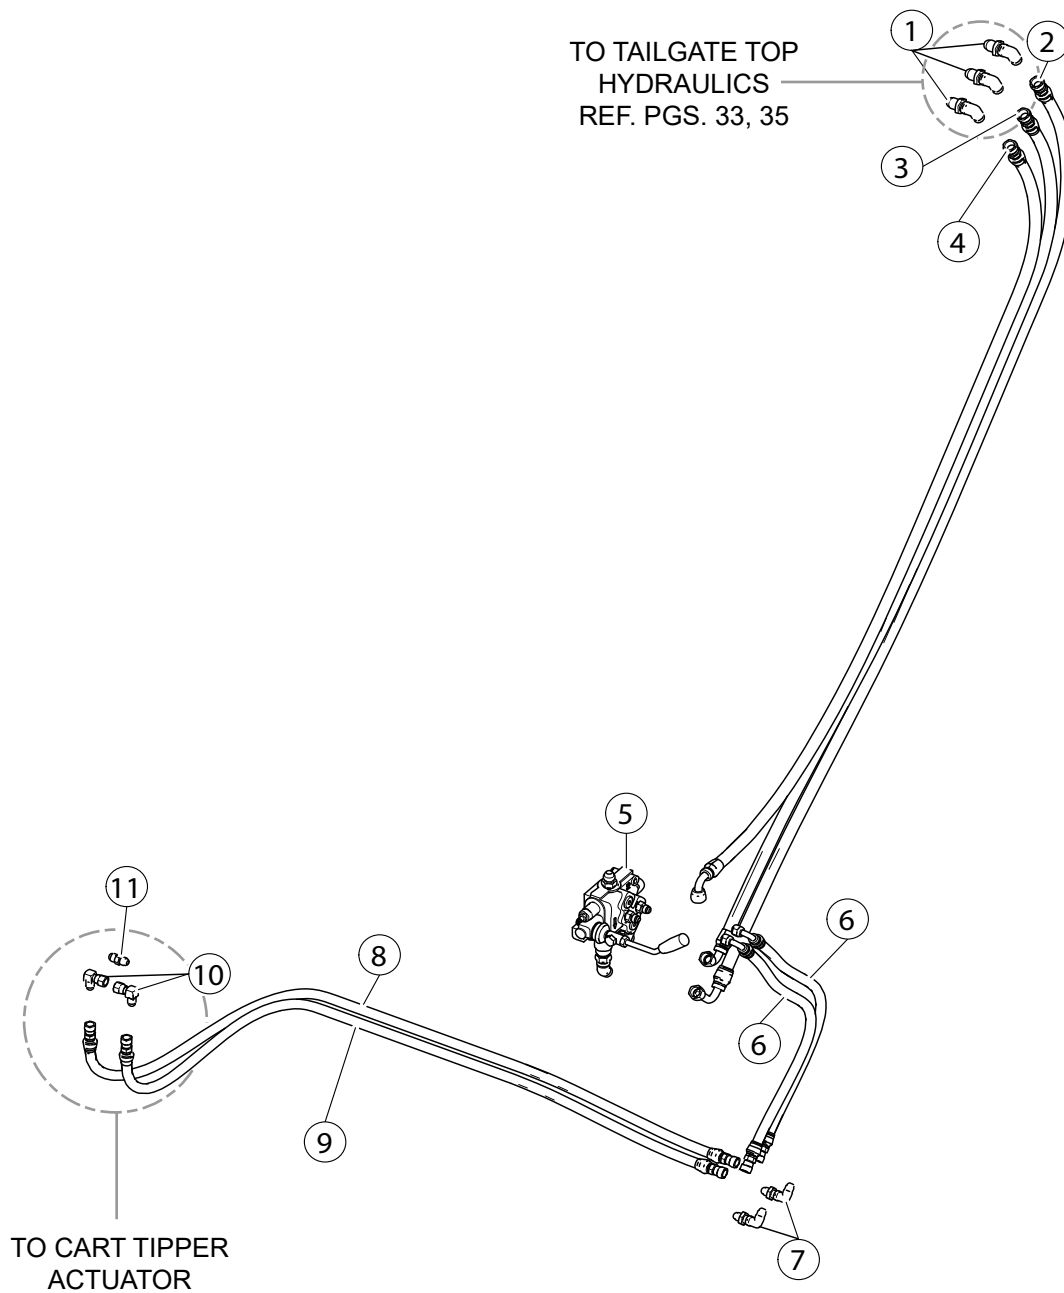

TIPPER HYDRAULICS

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	HYF06800	ELBOW, 90	3
2	194901	HOSE, 0.50" ID 8 -10.5 YD	1
	201327	HOSE, 0.50" ID 13 - 17 YD	1
3	194900	HOSE, 0.50" ID 8 -10.5 YD	1
	201236	HOSE, 0.50" ID 13 - 17 YD	1
4	194899	HOSE, 0.50" ID 8 -10.5 YD	1
	201325	HOSE, 0.50" ID 13 - 17 YD	1
5	194851	VALVE, TIPPER	1
6	194890	HOSE, 0.50" ID 8 -10.5 YD	2
	201324	HOSE, 0.50" ID 13 - 17 YD	2
7	HYF06790	ELBOW, 90	2
8	194893	HOSE, 0.50" ID 8 -10.5 YD	1
	201331	HOSE, 0.50" ID 13 - 17 YD	1
9	181761	HOSE, 0.50" ID 8 -10.5 YD	1
	201332	HOSE, 0.50" ID 13 - 17 YD	1
10	HYF07950	ELBOW, 90	2
11	HYF05250	ADAPTOR, STRT	1
	REF	864882, 866420	

Page Left Blank

Reward!

To the first person to notify us of an error in any of our publications!



If you find what you believe to be an error in any of our publications please complete the requested information and return the form to us by email.

If you are the first, you will receive a hat by return mail.

I believe I found an error:

In the _____ manual | Part No. _____ | Page(s) _____

It should say: _____

Name: _____ Address: _____



THANKS FOR YOUR HELP!

MANUALS@LABRIEGROUP.COM



OUR OFFICE IN THE U.S.

1198 Shattuck Industrial Blvd.
LaFayette, GA 30728

Toll Free: 1-800-231-2771
Telephone: 1-706-591-8764

MAILING ADDRESS

P.O. Box 530
LaFayette, GA 30728

PARTS AND WARRANTY

During Business Hours:
8:00 am - 6:00 pm Eastern Standard Time

TECHNICAL SUPPORT SERVICE

Toll Free: 1-800-231-2771
(24-hour Emergency Support)

EMAIL

USA Parts: partscenter@labriegroup.com
Canada Parts: labriepusQC@labriegroup.com
LabriePlus Service: labriepusservice@labriegroup.com
LabriePlus Warranty: labriepuswarranty@labriegroup.com

455 1st Avenue
Levis, QC G6W 5M6

Toll Free: 1-877-452-2743
Customer Service: 1-877-452-2743

MAILING ADDRESS

455 1st Avenue
Levis, QC G6W 5M6

PARTS AND WARRANTY

During Business Hours:
8:00 am - 5:00 pm Eastern Standard Time

TECHNICAL SUPPORT SERVICE

Toll Free: 1-877-831-8250
(24-hour Emergency Support)

